

# NAVAL POSTGRADUATE SCHOOL Monterey, California



# **THESIS**

A USERS MANUAL FOR THE NAVAL POSTGRADUATE SCHOOL AIRCRAFT SYNTHESIS PROGRAM

bv

John T. Parker

September, 1991

Thesis Advisor:

Conrad F. Newberry

Approved for public release; distribution is unlimited

92-03447

82 2 11 11.1

UNCLAS								
SECURITY C	LASSIFICATION O	F THIS PAGE					<del></del>	
		REPORT	DOCUMENTATIO	ON PAGE				
1a. REPORT	SECURITY CLASSI	FICATION		16. RESTRICTIVE N	ARKINGS		NONE	
2a. SECURIT	Y CLASSIFICATIO	N AUTHORITY		3. DISTRIBUTION/A	VAILABILITY OF	REPO	RT	
2b. DECLAS	SIFICATION/DOW	NGRADING SCHED	ULE	Approved for pub	lic release; distril	bution	is unlimite	d.
4. PERFORM	MING ORGANIZAT	ION REPORT NUME	BER(S)	5. MONITORING C	RGANIZATION R	EPORT	NUMBER(S	<u> </u>
			,					,
	OF PERFORMING ( graduate School	ORGANIZATION	6b. OFFICE SYMBOL (If applicable) 31	7a. NAME OF MO Naval Postgradus		NIZATI	ION	
6c. ADDRES	SS (City, State, and	d ZIP Code)	<del></del>	7b. ADDRESS (Cit)	, State, and ZIP C	ode)		
Monterey,	CA 93943-5000			Monterey, CA 93	943-5000			
8a. NAME ( ORGANIZA	OF FUNDING/SPOI	NSORING	8b. OFFICE SYMBOL (If applicable)	9. PROCUREMENT	INSTRUMENT ID	ENTIF	ICATION NU	MBER
8c. ADDRES	SS (City, State, and	d ZIP Code)	_ <del></del>	10. SOURCE OF FL	INDING NUMBER	S		· · · · · · · · · · · · · · · · · · ·
				Program Element No.	Project No.		Task No.	Work Unit Accession Number
A USER'S	MANUAL FOR T	HE NAVAL POST	GRADUATE SCHOOL A	IRCRAFT SYNTHE	SIS PROGRAM	·, ·		···
13a. TYPE C	OF REPORT	13b. TIME	COVERED	14. DATE OF REPOR	T (year, month, o	lay)	15. PAGE	COUNT
Master's Th	nesis	From	To	September 1991			301	
1			he author and do not refle	ect the official policy (	or position of the l	Depar	tment of De	fense or the U.S.
17. COSATI	CODES		18. SUBJECT TERMS (	continue on reverse i	f necessary and io	dentify	by block no	ımber)
FIELD	GROUP	SUBGROUP	Aircraft Synthesis, A	CSYNT, Aircraft De	sign			
A menu d synthesis. of ACSYNT CREATE Engineerin performand	Iriven computer p The interface pro I to be used more E has been develop g Curriculum. It ce, thus enhancing	rogram has been d gram, CREATE, dr effectively by the A ped to reduce the re can provide rapid if g the students unde	v and identify by block nu- eveloped to serve as a use rastically reduces the am- aircraft Design curriculu- equired number of inputs feedback when examining erstanding of the relation demonstrate some of the	er's interface with AC ount of time required m at the Naval Postg to ACSYNT and is id g the effects that diffe ships between the nu	to learn how to u raduate School. leal for use with t erent aircraft par imerous variables	ise acs he ear amete s of air	ynt, thes all ly phases of ers have on t ccraft studie	lowing the power the Aeronautical he overall aircraft
20 DISTRIB	UTION/AVAILABI	LITY OF ABSTRACT		21. ABSTRACT SEC	URITY CLASSIFIC	ATION	J.	

**DD FORM 1473, 84 MAR** 

C.F. Newberry

22a. NAME OF RESPONSIBLE INDIVIDUAL

MUNICLASSISSED/UNLIMITED SAME AS REPORT DISCUSERS

83 APR edition may be used until exhausted All other editions are obsolete

UNCLASSIFIED

(408) 646-2491

22b TELEPHONE (Include Area code)

SECURITY CLASSIFICATION OF THIS PAGE UNCLASSIFIED

31

22c OFFICE SYMBOL

#### Approved for public release; distribution is unlimited.

A Users Manual for the Naval Postgraduate School Aircraft Synthesis Program

by

John T. Parker III
Lieutenant, United States Navy
B.S., University of Maryland

Submitted in partial fulfillment of the requirements for the degree of

#### MASTER OF SCIENCE IN AERONAUTICAL ENGINEERING

from the

NAVAL POSTGRADUATE SCHOOL

September, 1991

Author:

John T. Parker

Approved by:

Conrad F. Newberry, Thesis Advisor

Gerald H. Lindsey, Second Reader

Dan I. Collins, Chairman

Department of Aeronautics and Astronautics


#### ABSTRACT

A menu-driven computer program has been developed to serve as a users interface with ACSYNT, the NASA-AMES program for aircraft synthesis. The interface program, CREATE, drastically reduces the amount of time required to learn how to use ACSYNT, thus allowing the power of ACSYNT to be used more effectively by the Aircraft Design curriculum at the Naval Postgraduate School.

CREATE has been developed to reduce the required number of inputs to ACSYNT and is ideal for use with the early phases of the Aeronautical Engineering Curriculum. It can provide rapid feedback when examining the effects that different aircraft parameters have on the overall aircraft performance, thus enhancing the students understanding of the relationships between the numerous variables of aircraft studies.

Included in the thesis are four examples that demonstrate some of the capabilities of ACSYNT and the use of CREATE.



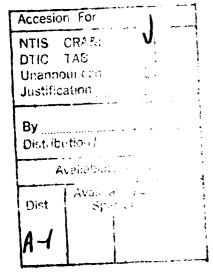

# TABLE OF CONTENTS

I.	INTR	ODUCTION	1
	A.	THESIS ORIENTATION	1
	B.	ACSYNT OVERVIEW	1
	C.	SUGGESTED READING METHOD	3
II	. CREA	ATE OVERVIEW	4
	A.	PROGRAM PHILOSOPHY	4
	B.	PROGRAM STRUCTURE	5
	C.	CAUTIONARY NOTES	5
II	I. ANA	LYSIS METHODS	8
	A.	OVERVIEW	8
	В.	SIMPLE ANALYSIS	8
	C.	OPTIMIZATION ANALYSIS	9
		1. Optimization Inputs	10
	D.	SENSITIVITY ANALYSIS	10
		1 Sensitivity Inputs	11

IV.	AIRO	CRAFT GEOMETRY	21
	A.	OVERVIEW	21
	B.	WING GEOMETRY	21
	C.	STRAKE GEOMETRY	23
	D.	HORIZONTAL AND VERTICAL TAIL GEOMETRY	24
	E.	CANARD GEOMETRY	26
	F.	WING MOUNTED ENGINE PODS	27
	G.	FUSELAGE MOUNTED PODS	28
	H.	FUSELAGE GEOMETRY	30
	I.	CREW STATION	31
	J.	FUSELAGE FUEL TANKS	32
V.	TRAJ	ECTORY MODULE	33
	A.	OVERVIEW	33
	В.	TRAJECTORY VARIABLES	34
	C.	MISSION PROFILE	36
VI.	AER	ODYNAMICS MODULE	39
	A.	OVERVIEW	39
	В.	AERODYNAMICS INPUT	39
	C	STORES DRAG COMPUTATION	41

VII	. PRO	DPULSION MODULE 5	0
	A.	OVERVIEW	0
	В.	PROPULSION INPUTS 5	<b>51</b>
AII	1. WE	EIGHTS MODULE 5	0
	A.	OVERVIEW 5	8
	В.	WEIGHTS INPUT 5	8
IX.	NAV	'Y MODULE	<b>52</b>
	A.	OVERVIEW	32
X.	EXA	MPLE ONE 6	<b>j4</b>
	A.	INTRODUCTION 6	<b>34</b>
	B.	A-10 DESIGN INPUTS 6	35
	C.	OUTPUT EVALUATION 7	14
		1. Geometry Output 7	75
		2. Trajectory Output 7	16
		3. Aerodynamics Output 7	7 <b>7</b>
		4. Propulsion Output 7	7 <b>7</b>
		5. Weights Output 7	77
		6. Navy Output 7	78
		7. Convergence Information	78

	D.	EXAMPLE ONE COMPLETION 78
XI.	EXA	MPLE TWO
	A.	INTRODUCTION
	В.	SENSITIVITY INPUTS
XII.	EXA	MPLE THREE
	A.	OVERVIEW
	В.	OPTIMIZATION INPUTS
XIII	EX.	AMPLE FOUR
	A.	OVERVIEW
	B.	EXAMPLE FOUR INPUTS
XIV	. TRO	OUBLESHOOTING
	Α.	OVERVIEW
	В.	TRAJECTORY ERRORS
	C.	PROPULSION ERRORS
APP	END	IX A

REFERENCES	• • • • • • • •	• • • • • • • •	• • • • • • • • •	• • • • • • • • • •	291
INITIAL DISTR	BUTION L	ST			292

#### I. INTRODUCTION

#### A. THESIS ORIENTATION

This thesis is designed to serve as a users manual for use with the Naval Postgraduate School Aircraft Synthesis Program (NPSASP). NPSASP consists of two parts: ACSYNT and CREATE. ACSYNT (Aircraft Synthesis) is briefly described in section (B) below. CREATE was developed for this thesis and is described in detail in the following chapters. Additionally, one of the modules of ACSYNT, NAVY, was extensively modified and reinstalled at NPS as thesis work (Chapter IX).

The information contained in this thesis is entirely based on the version of ACSYNT presently installed on the NPS Aeronautics Department Vax Computer System. Different versions of ACSYNT may or may not be compatible with CREATE.

Included in this thesis are four detailed examples to be used with CREATE. They provide the user with specific guidance on the development of an aircraft data file and interpretation of the results.

#### B. ACSYNT OVERVIEW

ACSYNT was first developed at the NASA-AMES Research Center during the early 1970's to aid in the conceptual design process of advanced aircraft.

The aircraft type may be transport, bomber or fighter configurations and the size of the aircraft is normally not a factor. Small, unmanned air vehicles (Example 4) as well as transports the size of the C-5 may be evaluated with ACSYNT. Studies have shown that with proper inputs, ACSYNT results match, to within ten percent, the characteristics of existing aircraft [Ref 1]. Many commercial aircraft companies as well as numerous educational institutions use ACSYNT for aircraft design studies.

The Naval Postgraduate School (NPS) played a role in the early evaluation and use of ACSYNT. The application of ACSYNT to VSTOL aircraft was investigated by O'Donnell in 1978 [Ref 1] and the first manual for ACSYNT was written as thesis work by Arnold B. Bruflat [Ref 2] in 1977. The Navy module of ACSYNT was developed at NPS by M. D. Barrett for use in the study of a carrier based, high energy laser equipped aircraft.

Over the years, ACSYNT has evolved as additional capabilities were added and obsolete routines were updated. The modular design of ACSYNT makes it possible to update one module without needing to make extensive modifications to the other modules. While this slow growth has aided the abilities of ACSYNT, it has not made it easier to use. A learning period on the order of weeks is required to fully understand and use the program, thus putting it effectively out of reach for many students. CREATE was developed in an effort to bypass this learning period and bring ACSYNT under control. Specific information about ACSYNT can be found in References 2 and 3.

# C. SUGGESTED READING METHOD

When using this thesis as a users manual, Chapters I and II should be read first to gain an insight into the nature of NPSASP, after which Examples 1, 2 and 3 should be performed. Chapters III - VIII should be used as reference material when establishing a new design or when performing one of the Examples. Example 4 provides additional experience with an oblique wing, unmanned air vehicle, to demonstrate the lower weight range that ACSYNT can handle.

#### II. CREATE OVERVIEW

#### A. PROGRAM PHILOSOPHY

The primary goal for CREATE is to assist a novice user to build and edit the aircraft data file that is used by ACSYNT to analyze a design. While this data file could be produced manually, it is not a simple matter and would act as another obstacle for a novice to overcome. A "professional" user of ACSYNT may want to bypass CREATE and build/edit the data file manually, as CREATE does not support some of the advanced features of ACSYNT.

The second goal for CREATE is to minimize the probability that a data file will be rejected by ACSYNT. CREATE incorporates numerous error-trapping routines that will help to catch problems before running ACSYNT, and additionally insures that many of the undocumented idiosyncracies of ACSYNT are satisfied. It should be noted that ACSYNT is still a very sensitive program and "crashes" often occur, even for what appears to be a valid set of aircraft parameters. Computations internal to ACSYNT are not always protected from common calculation errors, such as dividing by zero.

CREATE is a "mirror" image of ACSYNT. Each section of CREATE (Geometry, Trajectory, etc...) is directly linked to the corresponding module of ACSYNT. The information discussed in the following Chapters applies to both ACSYNT and CREATE.

#### B. PROGRAM STRUCTURE

CREATE has two main paths that it will follow when building or editing a data file (see source code listing in Appendix A). The first path is used when a new file is created. When this path is initiated, all of the default variables are set and internal flags are raised. These flags ensure that the user is guided through each of the required or selected modules in the correct sequence. The second path is enabled when a previously created file is loaded. This allows the user to bypass modules that do not need to be altered, thus saving time. The flow chart for CREATE is shown in Figure 1.

If CREATE senses an error when a variable is input, that value will not be accepted. This will occur if the variable is outside of the recommended range or it is not of the correct data type (real, integer or logical). An example of this is attempting to input a real number when an integer is expected. The acceptable range and data type for each variable are given in Chapters III-VIII.

#### C. CAUTIONARY NOTES

CREATE uses a linear structure, that is it builds the data file as the user progresses through the program. If the user breaks out of the program (via ctrl-c or other means) the data file will be incomplete and unsuitable for use. The entire sequence of CREATE must be completed each and every time the program is accessed.

If a previously created file is being edited, a back-up file, named "TEMP.DAT", is created in the users root directory. This back-up file is an identical copy to the original data file. If a power failure or other catastrophe should occur while editing the original file, this back-up may be renamed to the original and used.

CREATE and ACSYNT use the same logical unit numbers for input and output (I/O) control. If ACSYNT crashes during a run, the following commands should be executed before running CREATE again:

- DEASSIGN FOR005
- DEASSIGN FOR006
- DEASSIGN FOR007
- DEASSIGN FOR010

If these commands are not executed, create will attempt to use the same I/O paths that ACSYNT was using, with fatal results. If ACSYNT does not crash, these commands are executed automatically upon ACSYNT completion.

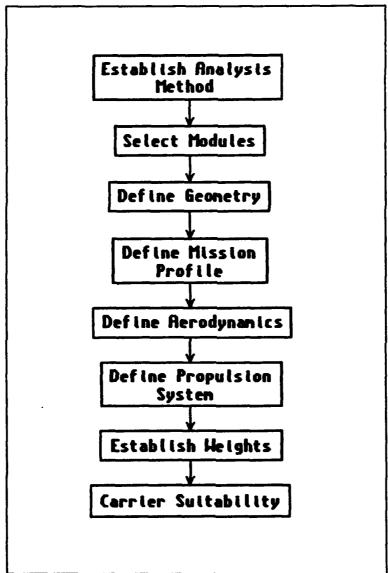


Figure 1. CREATE Flow Chart

#### III. ANALYSIS METHODS

#### A. OVERVIEW

Three analysis methods are supported by CREATE: Simple Analysis, Optimization and Sensitivity. Each method is described in detail below. Selection of one of the analysis methods sets the course that ACSYNT will follow when evaluating the design.

#### B. SIMPLE ANALYSIS

This should always be the first method used on a new design and whenever a variable is changed on an old design. When this method is selected, ACSYNT will "fly" the design through the given mission (Chapter V) several times. After completing the mission once, ACSYNT updates the estimated fuel weight required to fly the mission. This in turn alters the estimated gross weight of the aircraft at takeoff (via the weights module). This new estimate is then used on the next pass through the mission. When the new estimated weight and the weight actually required to fly the mission agree within a tolerance of 0.0001, the aircraft is said to be "converged". To use this method, it only needs to be selected via the Analysis Method Menu with CREATE.

#### C. OPTIMIZATION ANALYSIS

ACSYNT will optimize one variable (known as the objective variable) given a number of design variables (variables that ACSYNT may modify to optimize the objective) and constraints. The only requirement for this method is that the design variables may not be related to each other (i.e. wing span and aspect ratio should not be used together) and the design must have been previously converged using Simple Analysis. If the design is not yet converged, the Optimization process will be started while ACSYNT is attempting to converge the design. This will cause erroneous Optimization results.

An example of this method would be to minimize the aircraft gross weight by allowing ACSYNT to resize the wing area (within supplied limits), given a constraint on the required turning radius. See Example 3 for further insight into this method.

The variables that may be used with this method are given in Tables 1 - 5. The variables are input to the program by using the Global Variable Number that is assigned to each variable. It should be noted that not every variable used to define a design may be used to optimize the design. Also note that the units associated with each variable are not always the same units used with the aircraft data file. Typically, performance parameters or gross weight are used as the Objective Variable while geometric or performance parameters are used as the Design Variables. See Reference 4 for specific information on this method.

## 1. Optimization Inputs

The following information is required for input when running CREATE:

- The Objective Variable and its Global Number.
- The Design Variable(s) and the Global Number(s). Upper and lower bounds must also be provided for each variable.
- The Constraint Variable(s) and the Global Number(s). Upper and lower bounds on the Constraint(s) will also be required. Constraints should only be used if they are required. Unnecessary constraints will only inhibit the Optimization process.

#### D. SENSITIVITY ANALYSIS

This method is useful to examine the effect that certain variables have on another variable. For example, the effect that the canard aspect ratio has on the turning rate could be examined. This method is used in a manner similar to the Optimization Method. The Sensitivity Objective is the variable that will be examined (e.g. the turning rate). The Sensitivity Variable is the variable that will be altered. Seven different values of the Sensitivity Variable will be analyzed by ACSYNT, scaled between upper and lower bounds as provided by the user. These values will produce seven different outcomes on the Sensitivity Objective (see Example 2). Up to eight sensitivity variables and objectives may be selected.

# 1. Sensitivity Inputs

The following information is required for input with this method:

- The Sensitivity Objective(s) and the Global Number(s).
- The Sensitivity Variable(s) and the Global Number(s). Upper and lower bounds on each variable must also be provided.

TABLE 1.

Geometry Variables		
Variable	Global Number	
1/4 Chord Sweep, Canard (deg)	423	
1/4 Chord Sweep, Horizontal Tail (deg)	424	
1/4 Chord Sweep, Vertical Tail (deg)	425	
1/4 Chord Sweep, Wing (deg)	426	
Aspect Ratio, Canard	45	
Aspect Ratio, Horizontal Tail	46	
Aspect Ratio, Vertical Tail	59	
Aspect Ratio, Wing	60	
Fuel Fraction in Wing	211	
Fuselage Afterbody Fineness Ratio	208	
Fuselage Diameter (maximum) (ft)	66	
Fuselage Fineness Ratio (overall)	209	
Fuselage Length (ft)	69	
Fuselage Nose Fineness Ratio	210	
Fuselage Volume (ft <sup>s</sup> )	525	
Mean Aerodynamic Chord, Canard (ft)	70	
Mean Aerodynamic Chord, Horizontal Tail (ft)	71	
Mean Aerodynamic Chord, Vertical Tail (ft)	72	
Mean Aerodynamic Chord, Wing (ft)	73	
Number of Crew	182	
Number of Vertical Tails	529	
Pod Length (ft)	307	
Pod Radius (ft)	308	
Pod Volume (ft³)	524	

TABLE 1. (cont)

Geometry Variables	
Variable	Global Number
Reference Area, Canard (ft²)	371
Reference Area, Horizontal Tail (ft²)	388
Reference Area, Vertical Tail (ft²)	415
Reference Area, Wing (ft²)	422
Root Chord, Canard (ft)	367
Root Chord, Horizontal Tail (ft)	368
Root Chord, Vertical Tail (ft)	369
Root Chord, Wing (ft)	370
Root Elevation, Canard (ft)	671
Root Elevation, Horizontal Tail (ft)	669
Root Elevation, Vertical Tail (ft)	670
Root Elevation, Wing (ft)	668
Root LE Location, Canard (ft)	608
Root LE Location, Horizontal Tail (ft)	609
Root LE Location, Vertical Tail (ft)	611
Root LE Location, Wing (ft)	612
Root T/C Ratio, Canard	427
Root T/C Ratio, Horizontal Tail	428
Root T/C Ratio, Vertical Tail	429
Root T/C Ratio, Wing	430
Span, Canard (ft)	411
Span, Horizontal Tail (ft)	412
Span, Vertical Tail (ft)	413
Span, Wing	414

TABLE 1. (cont)

Geometry Variables			
Variable Variable	Global Number		
Strake Area, LE (ft²)	682		
Strake Area, TE (ft²)	685		
Strake Sweep, LE (deg)	684		
Taper Ratio, Canard	511		
Taper Ratio, Horizontal Tail	512		
Taper Ratio, Vertical Tail	513		
Taper Ratio, Wing	514		
Tip T/C Ratio, Canard	431		
Tip T/C Ratio, Horizontal Tail	432		
Tip T/C Ratio, Vertical Tail	433		
Tip T/C Ratio, Wing	434		
Wetted Area, Canard (ft²)	417		
Wetted Area of Each Pod (ft²)	419		
Wetted Area, Fuselage (ft²)	416		
Wetted Area, Horizontal Tail (ft²)	418		
Wetted Area of the LE Strake (ft²)	663		
Wetted Area of the TE Strake (ft²)	664		
Wetted Area, Vertical Tail (ft²)	420		
Wetted Area, Wing (ft <sup>2</sup> )	421		
Wing Dihedral (deg)	667		
Wing LE Flap Chord (% of wing chord)	243		
Wing TE Flap Chord (% of wing chord)	470		

TABLE 2.

Trajectory Variables	
Variable	Global Number
Altitude at End of Phase 1	217
Altitude at End of Phase 2	218
Altitude at End of Phase 3	219
Altitude at End of Phase 4	220
Altitude at End of Phase 5	221
Altitude at End of Phase 6	222
Altitude at End of Phase 7	223
Altitude at End of Phase 8	224
Altitude at End of Phase 9	225
Altitude at End of Phase 10	226
Altitude at End of Phase 11	227
Altitude at End of Phase 12	228
Altitude at Start of Phase 1	229
Altitude at Start of Phase 2	230
Altitude at Start of Phase 3	231
Altitude at Start of Phase 4	232
Altitude at Start of Phase 5	233
Altitude at Start of Phase 6	234
Altitude at Start of Phase 7	235
Altitude at Start of Phase 8	236
Altitude at Start of Phase 9	237
Altitude at Start of Phase 10	238
Altitude at Start of Phase 11	239
Altitude at Start of Phase 12	240

TABLE 2. (cont)

Trajectory Variables	
Variable	Global Number
Cruise Mach Number	183
Cruise Range (nm)	351
Design Load Factor (g's)	188
Instantaneous Turn Rate, Phase 1 (deg/s)	435
Instantaneous Turn Rate, Phase 2 (deg/s)	436
Instantaneous Turn Rate, Phase 3 (deg/s)	437
Instantaneous Turn Rate, Phase 4 (deg/s)	438
Instantaneous Turn Rate, Phase 5 (deg/s)	439
Instantaneous Turn Rate, Phase 6 (deg/s)	440
Instantaneous Turn Rate, Phase 7 (deg/s)	441
Instantaneous Turn Rate, Phase 8 (deg/s)	442
Instantaneous Turn Rate, Phase 9 (deg/s)	443
Instantaneous Turn Rate, Phase 10 (deg/s)	444
Instantaneous Turn Rate, Phase 11 (deg/s)	445
Instantaneous Turn Rate, Phase 12 (deg/s)	446
Mach Number at End of Phase 1	399
Mach Number at End of Phase 2	400
Mach Number at End of Phase 3	401
Mach Number at End of Phase 4	402
Mach Number at End of Phase 5	403
Mach Number at End of Phase 6	404
Mach Number at End of Phase 7	405
Mach Number at End of Phase 8	406
Mach Number at End of Phase 9	407

TABLE 2. (cont)

Trajectory Variables			
Variables	Global Number		
Mach Number at End of Phase 10	408		
Mach Number at End of Phase 11	409		
Mach Number at End of Phase 12	410		
Mach Number at Start of Phase 1	245		
Mach Number at Start of Phase 2	246		
Mach Number at Start of Phase 3	247		
Mach Number at Start of Phase 4	248		
Mach Number at Start of Phase 5	249		
Mach Number at Start of Phase 6	250		
Mach Number at Start of Phase 7	251		
Mach Number at Start of Phase 8	252		
Mach Number at Start of Phase 9	253		
Mach Number at Start of Phase 10	254		
Mach Number at Start of Phase 11	255		
Mach Number at Start of Phase 12	256		
Maximum Dynamic Pressure (psi)	338		
Specific Excess Power, Phase 1 (ft/s)	312		
Specific Excess Power, Phase 2 (ft/s)	313		
Specific Excess Power, Phase 3 (ft/s)	314		
Specific Excess Power, Phase 4 (ft/s)	315		
Specific Excess Power, Phase 5 (ft/s)	316		
Specific Excess Fower, Phase 6 (ft/s)	317		
Specific Excess Power, Phase 7 (ft/s)	318		
Specific Excess Power, Phase 8 (ft/s)	319		

TABLE 2. (cont)

Trajectory Variables	
Variable	Global Number
Specific Excess Power, Phase 9 (ft/s)	320
Specific Excess Power, Phase 10 (ft/s)	321
Specific Excess Power, Phase 11 (ft/s)	322
Specific Excess Power, Phase 12 (ft/s)	323
Sustained Turn Rate, Phase 1 (deg/s)	447
Sustained Turn Rate, Phase 2 (deg/s)	448
Sustained Turn Rate, Phase 3 (deg/s)	449
Sustained Turn Rate, Phase 4 (deg/s)	450
Sustained Turn Rate, Phase 5 (deg/s)	451
Sustained Turn Rate, Phase 6 (deg/s)	452
Sustained Turn Rate, Phase 7 (deg/s)	453
Sustained Turn Rate, Phase 8 (deg/s)	454
Sustained Turn Rate, Phase 9 (deg/s)	455
Sustained Turn Rate, Phase 10 (deg/s)	456
Sustained Turn Rate, Phase 11 (deg/s)	457
Sustained Turn Rate, Phase 12 (deg/s)	458
Taxi and Warm-up Time (min)	497
Takeoff/Land Altitude (ft)	38
Take-off Time (min)	498
Ultimate Load Factor (g's)	519

TABLE 3.

Aerodynamics Variables	
Variable	Global Number
Horizontal Tail Lift Curve Slope	708
Wing Lift Curve Slope	707

# TABLE 4.

Propulsion Variables		
Variable	Global Number	
Bypass Ratio	65	
Compressor Adiabatic Efficiency	198	
Design Fan Pressure Ratio	310	
Engine Face Diameter (ft)	189	
Fan Adiabatic Efficiency	199	
Nozzle Velocity Coefficient	522	
Number of Engines	196	
Outer Compressor Pressure Ratio	336	
Overall Compressor Pressure Ratio	337	
Thrust/Weight Ratio at Take-off	516	
Turbine Adiabatic Efficiency	200	
Turbine Inlet Temperature (deg R)	517	

### TABLE 5.

Weights Variables	
Variable	Global Number
Total Aircraft Weight	585
Weight of Ammunition	535
Weight of Bombs	540
Weight of Missiles	576

#### IV. AIRCRAFT GEOMETRY

#### A. OVERVIEW

The Geometry Module is used to define the physical dimensions of the proposed aircraft. Inputs are made in nine areas: wing, strakes, horizontal and vertical tails, canards, wing mounted pods, fuselage mounted pods, fuselage, crew station and fuselage tanks. Of these nine, only three (wing, pods and fuselage) are required (either fuselage mounted pods or wing mounted pods must be selected). CREATE will insure that the required items are completed.

#### **B. WING GEOMETRY**

Two types of wings may be selected: symmetric or oblique. Variable sweep wings may be entered using the symmetric wing type. The wing planform in either case must be trapezoidal. The available variables are:

- Wing Aspect Ratio (to the aircraft centerline). Default: 5.0, Range: (0.0,12.0], Type: Real
- Wing reference area (ft<sup>2</sup>). This is the total area of the wing, including the area covered by the fuselage.

  Default: 500.0, Range: > 0.0, Type: Real
- Wing dihedral (in degrees), measured positive up from the horizontal. Negative values refer to anhedral. Default: 0.0, Range: [-20.0,20.0], Type: Real

- The fuel density of the wing fuel (in lbs/ft³) (JP-4 is 48.62) Default: 48.62, Range: > 0.0, Type: Real
- Fraction of the wing chord that is covered by leading edge flaps/slats.

  ( 0.12 = 12% of the total wing chord consists of leading edge flaps).

  Enter 0.0 if there are no leading edge devices.

  Default: 0.12, Range: [0.0, 0.5], Type: Real
- Leading edge sweep angle (in degrees) (only for symmetric wing). Input a negative value for a forward sweep.

  Default: 0.0, Range: [-30.0, 60.0], Type: Real
- Wetted area multiplier (how much of the wing is exposed, 1.0 = fully exposed wing).

  Default: 1.0, Range: (0.0, 2.0], Type: Real
- Wing taper ratio.
  Default: 0.99, Range: [0.0, 1.0], Type: Real
- Thickness to chord ratio at the wing root. Default: 0.1, Range: [0.02, 0.18], Type: Real
- Thickness to chord ratio at the wing tip. Default: 0.1, Range: [0.02, 0.18], Type: Real
- Fraction of the total wing chord that is covered by trailing edge flaps. Trailing edge flaps are assumed to be double-segmented Fowler flaps. Default: 0.12, Range: [0.0, 0.5], Type: Real
- Fraction of the available wing volume that will be filled with wing fuel (0.5 = 50% of the wing volume will have fuel in it).

  Default: 1.0, Range: [0.0, 1.0], Type: Real
- Position of the wing quarter chord, given as a fraction of total fuselage length (for a 50' fuselage, wing quarter chord at 20' equates to 20/50=0.4, as measured from the nose).

  Default: 0.5. Range: [0.0, 1.0]. Type: Real

- Elevation of the root chord of the wing above the fuselage reference plane, given as a fraction of the maximum fuselage radius.
  - 0.0 = the wing is mounted on the middle of the fuselage
  - 1.0 = the wing is mounted on top of the fuselage
  - -1.0 = the wing is mounted on the bottom of the fuselage.

Default: 0.0, Range: [-1.0, 1.0], Type: Real

#### C. STRAKE GEOMETRY

Leading edge and/or trailing edge strakes may be selected. Strakes are the only method available that will modify the straight leading edge or trailing edge of the wing. If only LE or TE strakes are present, set the values for the strake that is not present to 0.0. If the strakes are not positioned correctly relative to the wing, a non-fatal warning will be printed out. The available variables are:

- Location of the strake leading edge on the fuselage, as a fraction of the total fuselage length measured from the fuselage nose.

  Default: 0.0, Range: [0.0, Wing LE], Type: Real
- Ratio of the leading edge strake span/2 to the wing span/2. Default: 0.0, Range: [0.0, 1.0]. Type: Real
- Location of the strake trailing edge as a fraction of the total fuselage length, measured from the fuselage nose.

  Default: 0.0, Range: [Wing LE, 1.0]
- Ratio of the trailing edge strake span/2 to the wing span/2). Default: 0.0, Range: [0.0, 1.0], Type: Real
- Wetted area multiplier for the strake(s). Default: 1.0, Range: [0.0, 2.0], Type: Real

• Strake leading edge bluntness indicator

0 = sharp leading edge

1 = blunt leading edge

Default: 0, Range: 0 or 1, Type: Integer

#### D. HORIZONTAL AND VERTICAL TAIL GEOMETRY

Only conventional tail surfaces are supported. V-tails or canted vertical stabilizers can not be entered in this version of ACSYNT. While not required, if a vertical tail is not used, ACSYNT will crash during printout of the final summary section. This crash will not affect the aircraft calculations. The available variables are:

• Aspect ratio (to the fuselage centerline). Default: 5.0, Range: (0.0, 12], Type: Real

• Reference area (ft²). If the area is set at 0.0, ACSYNT will size the surface area based on the value for the horizontal tail sizing fraction, if given (Tail area = wing area times the sizing fraction). If the horizontal tail sizing fraction is set to 0.0, the tail will be sized using the volume coefficient.

Default: 50.0, Range: > 0.0, Type: Real

• Horizontal/Vertical tail volume coefficient. Used only when the horizontal tail sizing fraction is set to 0.0 and the area is input as 0.0.

Default: 1.0, Range: [0.3, 1.0], Type: Real (<u>Hor. Tail</u>) Default: 0.6, Range: [0.01, 0.2], Type: Real (<u>Ver. Tail</u>)

• Horizontal/Vertical tail sizing fraction. If set to 0.0, the horizontal tail is sized using the volume coefficient.

Default: 0.0, Range: [0.0, 1.0], Type: Real

• Leading edge sweep (in degrees).
Default: 0.0, Range: [-9.0, 60.0], Type: Real

• Wetted area multiplier.

Default: 1.0, Range: [0.0, 2.0], Type: Real

• Taper ratio.

Default: 0.99, Range: [0.0, 1.0], Type: Real

• Thickness to chord ratio at the root.

Default: 0.1, Range: [0.02, 0.18], Type: Real

• Thickness to chord ratio at the tip.

Default: 0.1, Range: [0.02, 0.18], Type: Real

• Location of the trailing edge of the horizontal/vertical tail, as a fraction of the total fuselage length, measured from the nose.

Default: 1.0, Range: [0.5, 1.0], Type: Real

• Elevation of the horizontal tail on the fuselage.

-1.0 to 0.99 = horizontal tail is mounted on the fuselage.

1.0 to 1.99 = horizontal tail is mounted on the vertical tail.

2.0 = horizontal tail is mounted on top of the vertical tail (T-tail)

Default: 0.0, Range: [-1.0, 2.0], Type: Real

• Elevation of the root chord of the vertical tail as a fraction of the maximum fuselage radius, measured up from the fuselage reference plane.

Default: 0.0, Range: [-1.0, 1.0], Type: Real

Number of vertical tails

1.0 = one central tail

2.0 = two symmetric tails

3.0 = two symmetric tails with 1 central tail

Default: 1.0, Range: 1.0 or 2.0 or 3.0, Type: Real

• Sizing logic. If equal to true, then the tail(s) will be resized on every ACSYNT iteration. If this is set to false, the input value for the area will be used regardless of the values used for the sizing fraction or the volume coefficient.

Default: F, Range: T or F, Type: Logical

#### E. CANARD GEOMETRY

Canards may be used as a control surface or as a third lifting surface.

The available variables are:

• Aspect Ratio.

Default: 5.0, Range: (0.0, 12.0], Type: Real

• Reference area (ft<sup>2</sup>). If this is set to 0.0, the canard will be sized using the canard sizing fraction, if given (Canard area = wing area times sizing fraction). If the canard sizing fraction is 0.0, the canard will be sized using the volume coefficient.

Default: 50.0, Range: > 0.0, Type: Real

- Canard volume coefficient. (This should be negative since the canards are in front of the wing). Used only if the sizing fraction is 0.0. Default: -0.8, Range: [-1.0, 0.0], Type: Real
- Canard sizing fraction. If 0.0 is entered, the canard will be sized using the volume coefficient.

Default: 0.0, Range: [0.0, 1.0], Type: Real

• Leading edge sweep (degrees).
Default: 0.0, Range: [-9.0, 60.0], Type: Real

• Wetted area multiplier.

Default: 1.0, Range: (0.0, 2.0], Type: Real

• Taper ratio.

Default: 0.99, Range: [0.0, 1.0], Type: Real

• Thickness to chord ratio at root.

Default: 0.1, Range: [0.02, 0.18], Type: Real

• Thickness to chord ratio at tip.

Default: 0.1, Range: [0.02, 0.18], Type: Real

• Location of the leading edge of the canard root chord as a fraction of total fuselage length.

Default: 0.0, Range: [0.0, 0.5], Type: Real

- Elevation of the canard above the fuselage reference plane as a fraction of maximum fuselage radius.
  - 1.0 = top mounted canard
  - -1.0 = bottom mounted canard

Default: 0.0, Range: [-1.0, 1.0], Type: Real

- Canard location
  - 1 = canard on the central body
  - 2 = canard is outboard of twin nacelles (fuselage inlets)

Default: 1, Range: 1 or 2, Type: Integer

• Sizing logic. If equal to true, then the canards will be resized on every ACSYNT iteration. If equal to false, the input value for the area will be used.

Default: F, Range: T or F, Type: Logical

#### F. WING MOUNTED ENGINE PODS

Either wing pods or fuselage pods must be selected. The number of pods should equal the number of engines on the aircraft. Up to ten pods may be defined. The available variables are:

- Pod Diameter (ft). If set equal to 0.0, the engine diameter will be used. Default: 3.0, Range: (0.0, 30.0], Type: Real
- Pod Length (ft). If set to 0.0, the engine length will be used. Default: 10.0, Range: (0.0, 40.0], Type: Real
- X location of the nose of the pod relative to the wing leading edge, given as a fraction of the local wing chord. (Fig 2). Negative values indicate that the pod leading edge is ahead of the wing leading edge.

  Default: 0.0, Range: [-1.0, 1.0], Type: Real
- Y location of the center of the pod relative to the fuselage centerline, given as a fraction of the wing semi-span. (Fig 2).

  Default: 0.5, Range: [0.0, 1.0], Type: Real

• Z location of the center of the pod above the wing, as a fraction of maximum pod diameter. (Fig 2). Negative values indicate that the pod center is below the wing.

Default: -1.0, Range: [-2.0, 2.0], Type: Real

• Wing Pod symmetry code.

0 = pod has a symmetric image on the other wing

1 = pod does not have an image

Default: 0, Range: 0 or 1, Type: Integer

#### G. FUSELAGE MOUNTED PODS

Either wing mounted pods or fuselage mounted pods must be selected.

The total number of pods must match the number of engines on the aircraft.

Up to 10 pods may be defined. The available variables are:

- Fuselage pod diameter (ft). If set to 0.0, the engine diameter will be used. Default: 3.0, Range: (0.0, 30.0], Type: Real
- Fuselage pod length (ft). If set to 0.0, the engine length will be used. Default: 10.0, Range: (0.0, 40.0], Type: Real
- Stand-off distance; the distance between the pod wall and the fuselage, given as a fraction of maximum pod radius.

0.0 = Pod is tangent to the fuselage

-1.0 = Pod is half-way submerged into the fuselage

-2.0 = Pod is fully submerged into the fuselage

Default: 0.1, Range: [-2.0, 3.0], Type: Real

• Angular orientation of pod measured positive up from the horizontal (in degrees) (Fig 3).

90.0 = 12 O'Clock position

-90.0 = 6 O'Clock position

Default: 0.0, Range: [-90.0, 90.0], Type: Real

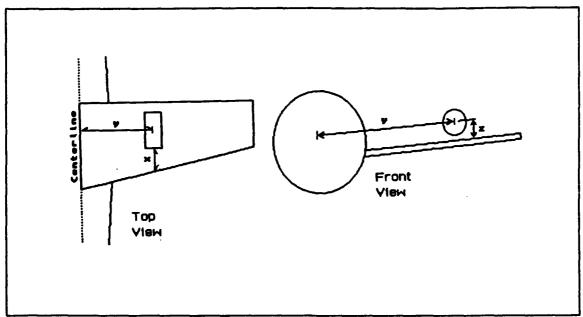


Figure 2. Wing Pod Geometry

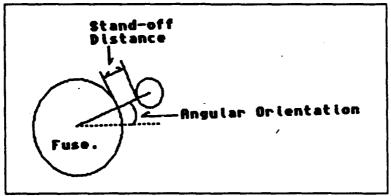


Figure 3. Fuselage Pod Geometry

• X location of the pod nose relative to the nose of the fuselage, given as a fraction of total fuselage length.

Default: 0.8, Range: [0.0, 1.0], Type: Real

• Fuselage Pod symmetry code.

0 = Pod has an image on the other side

1 = Pod does not have an image

Default: 0, Range: 0 or 1, Type: Real

### H. FUSELAGE GEOMETRY

This section is required. ACSYNT models the aircraft fuselage with a cone for the nose and afterbody and a cylinder for the main body. The available variables are:

- Maximum diameter of fuselage (ft).
  Default: 6.0, Range: > 0.0, Type: Real
- Fuselage length (ft).
  Default: 50.0, Range: > 0.0, Type: Real
- Diameter of radar dish located in the nose (ft) (Enter 0.0 if there is no radar).

  Default: 0.0, Range: [0.0, 20.0], Type: Real
- Fineness ratio of the afterbody (length/diameter). Default: 2.0, Range: [0.0, 99.99], Type: Real
- Total fuselage fineness ratio (length/diameter) (If 0.0 is entered, ACSYNT will estimate it using fuselage length divided by maximum fuselage diameter).

Default: 0.0, Range: [0.0, 99.99], Type: Real

• Fineness ratio of the nose (length/diameter). \*Note\* Small changes in this variable results in significant changes in the gross weight. Default: 3.0, Range: [0.0, 99.99], Type: Real

- Length of radar equipment located behind the radar (ft). Default: 0.0, Range: [0.0, 30.0], Type: Real
- Surface area complexity factor. The fuselage is modeled by using a cone for the nose and afterbody, and a cylinder for the mid-section. If the surface area will be greater or less than this, it may be altered with this variable.

1.0 = satisfactory model

1.1 = add 10% more surface area

Default: 1.0, Range: [0.0, 2.0], Type: Real

- Fuselage wall thickness (ft) (For transports only). Default: 0.0, Range: [0.0, 1.0], Type: Real
- An estimate of the fuel weight required for the mission. This will be the first estimate that ACSYNT uses to fly the mission.

  Default: 5000.0, Range: [0.0, 9000000.00], Type: Real
- Tail indicator.

0 = standard engine nozzle at rear of fuselage

1 = fuselage tapers down without a nozzle

Default: 0, Range: 0 or 1, Type: Integer

### I. CREW STATION

This is used only to document the existence of a cockpit. It will not affect the fuselage dimensions. The available variables are:

• Length of crew compartment (ft). If 0.0 is entered, ACSYNT will attempt to size it.

Default: 0.0, Range: [0.0, 30.0], Type: Real

- Width of crew compartment (ft). 9.0 may also be used here. Default: 0.0, Range: [0.0, 20.0], Type: Real
- Number of crew members.

Default: 2, Range: [0, 6], Type: Integer

• Seating arrangement

T = Tandem

F = 2 abreast seating.

Default: F, Range: T or F, Type: Logical

### J. FUSELAGE FUEL TANKS

One or two fuselage fuel tanks may be specified. If two tanks are desired, the fuselage fuel load will be split equally between the two tanks. There is only one input:

• Fuel Density (lbs/ft³). JP-4 represents the default value. Default: 48.62, Range: > 0.0, Type: Real

#### V. TRAJECTORY MODULE

### A. OVERVIEW

The Trajectory Module is used to define a mission for the aircraft. It serves as the cornerstone for the design, in that the converged aircraft is optimized to the input mission. Different missions may or may not be satisfied by the converged design.

Up to twelve legs may be defined for a given mission, using six different types of legs: climb, cruise, acceleration, combat, descent and loiter. Any number of these six leg types may be used to define a mission. It is not necessary to use a strictly logical profile. A mission may consist only of a cruise leg, if so desired, without any climbs or descents. A typical profile is shown in Table 6. Weapons (bombs, ammunition or missiles) may be dropped only during a combat phase. If weapons are to be dropped, the weight and drag of the ordnance is removed from the aircraft at the termination of the combat phase.

This is the most error prone part of ACSYNT. Both fatal and non-fatal errors alike occur during the execution of the Trajectory Module, but these errors are not always caused by the Trajectory module. Many calls are made

to the Propulsion and Aerodynamics modules from the Trajectory module and errors often are caused by these two modules.

The inputs to this module are broken up into two parts. The first part consists of three menus for entering variables. The second part is used for entering the mission profile. A detailed description of the Trajectory module of ACSYNT can be found in Reference 5.

#### **B. TRAJECTORY VARIABLES**

The following variables are required for input:

- Cruise Mach number. Default: 0.8, Range: (0.0, 3.0], Type: Real
- Design load factor (g's).
  Default: 3.0, Range: [1.0, 12.0], Type: Real
- Ultimate load factor (g's).
  Default: 4.5, Range: [1.0, 15.0], Type: Real
- Takeoff obstacle requirement 0 = military aircraft (50 ft clearance) 1 = civilian aircraft (35 ft clearance) Default: 0, Range: 0 or 1, Type: Real
- Fuel reserve, as a fraction of total fuel. Default: 0.05, Range: [0.0, 0.1], Type: Real
- Estimated endurance Mach number. Default: 0.5, Range: [0.0, 2.0], Type: Real
- Maximum dynamic pressure, q (lbs/ft²). Default: 700.0, Range: > 0.0, Type: Real

Aircraft range (nm).
 Default: 1000.0, Range: > 0.0, Type: Real

• Time spent during warm-up and taxi (min). Default: 5.0, Range: > 0.0, Type: Real

• Power setting during warm-up and taxi

1 = max afterburner

2 = military power

3 = maximum continuous power

4 = thrust equals drag

5 = idle

Default: 5, Range: [1, 5], Type: Integer

• Time spent during take-off (min).
Default: 1.0, Range: > 0.0, Type: Real

• Power setting during take-off (same as above). Default: 2, Range: [1, 5], Type: Integer

• Breguet altitude search indicator (used during cruise and climb phases of the mission profile. If selected, ACSYNT will attempt to find the optimum cruise altitude).

0 = no search

1 = search for optimum altitude

Default: 0, Range: 0 or 1, Type: Integer

• Loiter altitude search indicator (used during loiter phases). If selected, ACSYNT will attempt to find the optimum loiter altitude.

0 = no search

1 = search for loiter altitude

Default: 0, Range: 0 or 1, Type: Integer

• Estimate of total internal fuel weight (lbs).

Default: 5000.0, Range: (0.0, 999999.0], Type: Real

• Amount of external fuel (drop tanks) (lbs). Default: 0.0, Range: [0.0, 99999.0]

• Weight of trapped fuel (this is the weight of any unusable fuel) (lbs). Default: 100.0, Range: 0.0, 1000.0], Type: Real

- Engine sizing flag. Used in conjunction with the Propulsion Module. The engine will only be sized if the engine weight, length and diameter are all input as 0.0 in the Propulsion module.
  - 0 = engine sized for thrust/weight at take-off, no AB
  - -1 = engine sized for thrust/weight at take-off with AB
  - -2 = engine sized for a given thrust with AB
  - -3 = engine sized for a given thrust, no AB

Default: -3, Range: [-3, 0], Type: Integer

- Number of trajectory cruise phases (see below). Default: 2, Range: [0, 12], Type: Integer
- Total number of trajectory phases (see below). Default: 1, Range: [0, 12], Type: Integer
- Debug print option.
  - 0 = No Debug
  - 1 = Debug

Default: 0, Range: 0 or 1, Type: Integer

#### C. MISSION PROFILE

Information that is required to define a mission includes the phase starting and ending Mach number, starting and ending altitude (ft), the distance traveled (nm), the time used during that phase (min), the g loading (for a combat phase) and the power setting for that phase. A sample mission is shown in Table 6 below. Note that the climb and descent phases do not use the Mach number, distance or time blocks. Only the starting and ending altitudes are required. It is also permissable to skip a climb or descent phase and input another cruise phase with a new altitude. The distance covered during a climb or descent phase (the distance is computed internally) is not

subtracted from a following cruise phase. The distance block for the loiter phase represents the loiter radius.

TABLE 6. Sample Mission Profile

	Mach	Mach	Alt	Alt	Horiz	Horiz	Power
Phase	Start	End	Start	End	Dist	Time	Setting
Climb	0.00	0.00	100	20000	0.0	0.0	3
Cruise	0.80	0.80	20000	20000	480	60.0	4
Cruise	0.70	0.70	200	200	210	30.0	4
Accel	ა.70	0.90	200	200	0.0	1.0	2
Combat	0.90	0.90	200	200	0	4.0	2
Cruise	0.70	0.70	200	-1	210	30.0	4
Climb	0.00	0.00	200	20000	0.0	0.0	3
Descent	0.00	0.00	20000	500	0.0	0.0	5
Loiter	0.20	0.20	5000	5000	10.0	20.0	4

As fuel is burned during a cruise phase, the aircraft will climb as the weight is burned off. To prevent this, a "-1" should be entered as an ending altitude (note that this is an integer value). This forces the ending altitude to match the starting altitude.

During combat phases, an option is given to input the sustained g loading. If the design cannot sustain the input value, ACSYNT will reduce it until it can be sustained  $(P_* = 0.0)$ .

# The "power setting" options are:

- 1 = maximum afterburner

  - 2 = military power 3 = maximum continuous
  - 4 = thrust equals drag
  - 5 = idle

#### VI. AERODYNAMICS MODULE

#### A. OVERVIEW

The Aerodynamics module will determine the aircraft drag, induced drag and lift as a function of the angle of attack. The aircraft minimum drag is calculated through component build-up. The drag for individual components is determined and then summed to determine the total drag at a given Mach number. The total drag consists of: friction drag, wave drag, leading edge bluntness drag, external stores drag, weapons and bomb drag, engine cowl drag, engine boat-tail drag and interference drag [Ref 2:p. 131]. Detailed information about the aerodynamic methods may be found in Reference 4. The code has been validated up to Mach 3.0 by NASA-AMES.

#### B. AERODYNAMICS INPUT

CREATE uses 8 separate pages to input the aerodynamic characteristics of the design. The available variables are:

- Ratio of body base area to maximum body cross-section. This term is used to account for separation drag on the rear of the body. The base area is any rearward-facing blunt surface.
  - Default: 0.15, Range: [0.0, 0.5], Type: Real
- Angle of attack at which C<sub>L</sub> max occurs (deg)
   Default: 35.0, Range: (0.0, 60.0], Type: Real

• Maximum angle of attack for subsonic compressibility or interference (deg).

Default: 40.0, Range: (0.0, 60.0], Type: Real

- Width of the fuselage at the canards (if used) or of the nose. Used in calculating the fuselage pitching moment contribution.

  Default: max fuselage diameter, Range: > 0.0, Type: Real
- Boat-tail exposure factor (for use with pods). If 4 pods were defined but 2 of them are <u>half buried</u> in the fuselage then the boat-tail exposure factor is 0.75. (Number of exposed pods/total number of pods). Default: 0.0, Range: [0.0, 1.0], Type: Real
- C<sub>L</sub> max scaling factor for clean aircraft.
   Default: 1.0, Range: > 0.0, Type: Real
- Laminar-Turbulent skin friction weighting factor.

0.0 = All laminar flow

1.0 = All turbulent flow

Default: 1.0, Range: [0.0, 1.0], Type: Real

• Reference Mach number <u>array</u>. Used with the following 5 variables. This is an array of up to 10 numbers. Each of the following 5 variables must have the same number of values (i.e. if enter 7 numbers are input here, 7 numbers should be input for the other variables). The terms in the array correspond 1 to 1 with the terms in the 5 following arrays. See the examples section for additional insight.

Default: 0.0, Range: [0.0, 3.0], Type: Real

- C<sub>L</sub> at zero angle of attack for the fuselage. This is an array of up to 10 values that corresponds 1:1 with the reference Mach number array above. Default: 0.0, Range: [0.0, 1.0], Type: Real
- Canard  $C_L$  at zero angle of attack. This is an array of up to 10 values that corresponds 1:1 with the reference Mach number array above. Default: 0.0, Range: [0.0, 1.0], Type: Real
- Wing  $C_L$  at zero angle of attack. This is an array of up to 10 values that corresponds 1:1 with the reference Mach number array above. Default: 0.0, Range: [0.0, 1.0], Type: Real

- Wing zero-lift pitching moment. This is an array of up to 10 values that corresponds 1:1 with the reference Mach number array above. Default: 0.0, Range: [0.0, 1.0], Type: Real
- Sweep angles for a variable sweep wing (deg). This is an array of up to 10 values that corresponds 1:1 with the reference Mach number array above. These values are not used if the normal Mach number calculation code (below) is set to 0.

Default: 0.0, Range; [0.0, 60.0], Type: Real

- Variable sweep wing flag.
  - T = Wing is variable sweep/oblique
  - F = Wing is not variable sweep

Default: F, Range: T or F, Type: Logical

- Normal Mach number calculation code. (swept/oblique wings)
  - 0 = Acsynt will sweep the wing to keep the normal component of the Mach number constant at all times.
  - 1 = Do not calculate the normal component.

Default: 1, Range: 0 or 1, Type: Real

- Desired normal component of the Mach number. Used only if the normal Mach number calculation code above is set to 0. Default: 0.75. Range: (0.0, 3.0]. Type: Real
- Maximum wing sweep for the normal Mach number calculations. Used only if the normal Mach number calculation code above is set to 0. Default: 60.0, Range: [0.0, 60.0], Type: Real
- Minimum wing sweep for the normal Mach number calculations. Used only if the normal Mach number calculation code above is set to 0. Default: 0.0, Range: [0.0, 60.0], Type: Real
- Wing airfoil section code.
  - 1 = Sharp or near sharp airfoils
  - 2 = 230-XX and 00-XX airfoils
  - 3 = 6-series airfoil
  - 4 = Whitcomb supercritical airfoil
  - 5 = Leading edge radius to chord ratio specified
  - \*\* If the aspect ratio is less than 1.75, this code is ignored and low-aspect ratio theory is used. Only code 1 gives a smooth drag polar. Other codes may have breaks in the drag polars at high angles of attack and in

transonic regions

Default: 1, Range: [1, 5], Type: Integer

- Leading edge radius to chord ratio, used with code 5 above. Default: 0.02, Range: [0.0, 0.5], Type: Real
- Canard airfoil section code. Same as the wing airfoil section codes above.
- Canard leading edge radius to chord ratio, used with canard airfoil section code 5.

Default: 0.02, Range: [0.0, 0.5], Type: Real

• Distance between the outsides of the twin nacelles, for canard placement (if applicable).

Default: 0.0, Range: >= 0.0, Type: Real

• Supercritical wing flag.

1 = Wing is supercritical

0 = Wing is not supercritical

Default: 0, Range: 0 or 1, Type: Integer

• Body cross-section code.

0 = Circular body

1 = Trapezoidal body

Default: 0, Range: 0 or 1, Type: Real

• Cowl exposure factor. Used in the same manner as the boat-tail exposure factor.

Default: 0.0, Range: [0.0, 1.0], Type: Real

• Friction drag multiplying factor. 1.0 = standard roughness. Default: 1.0, Range: [0.0, 2.0], Type: Real

• Canard angle of incidence (used for trim drag) (deg). Default: 0.0, Range: 0.0, 10.0], Type: Real

Average chord of flaps (ft)
 Default: 0.0, Range: > 0.0, Type: Real

Total area of both wing flaps (ft²)
 Default: 0.0, Range: > 0.0, Type: Real

• Total span of flaps to be used for aircraft trimming (ft) (used for tailless aircraft)

Default: 0.0, Range: > 0.0, Type: Real

- Desired location of the CG, given as a fraction of wing chord. Default: 0.25, Range: [0.0, 1.0], Type: Real
- Static margin for the CG placement. This is the allowable range that the CG may be varied.

  Default: 0.0, Range: [0.0, 1.0], Type: Real
- Height of CG above the fuselage centerline (ft)
  Default: 0.0, Range: > 0.0, Type: Real
- Horizontal tail angle of incidence (deg). Default: 0.0, Range: [0.0, 10.0], Type: Real
- Mach numbers for detailed aerodynamic output, maximum of 10 in array format. Corresponds 1:1 with the altitude and  $C_L$  arrays below. Default: 0.0, Range: [0.0, 3.0], Type: Real
- Altitudes for detailed aerodynamics output (ft), maximum of 10. Default: 0.0, Range: [0.0, 99999.0], Type: Real
- Lift coefficients for detailed output, maximum of 10. Default: 0.0, Range: [0.0, 8.0], Type: Real
- Total drag due to external bombs (ft²)
   Default: 0.0, Range: > 0.0, Type: Real
- Total drag due to external stores (ft²) Default: 0.0, Range: > 0.0, Type: Real
- Total drag due to drop tanks (ft<sup>2</sup>)
  Default: 0.0, Range: > 0.0, Type: Real
- Total drag due to additional items (ft<sup>2</sup>). If the NAVY module is being called, enter the gear down drag here.

  Default: 0.0, Range: > 0.0, Type: Real

- C<sub>L</sub> max to be used during landing. If -1.0 is entered, ACSYNT will compute this.
   Default: -1.0, Range: -1.0 or [0.0, 10.0], Type: Real
- C<sub>L</sub> max to be used for take-off. -1.0 may be entered here also. Default: -1.0, Range: -1.0 or [0.0, 10.0], Type: Real
- Trailing edge flap angle for landing (deg). Default: 45.0, Range: [0.0, 60.0], Type: Real
- Trailing edge flap angle for take-off (deg). Default: 45.0, Range: [0.0, 60.0], Type: Real
- Leading edge slat angle for landing (deg). Default: 30.0, Range: [0.0, 60.0], Type: Real
- Leading edge slat angle for take-off (deg). Default: 30.0, Range: [0.0, 60.0], Type: Real
- Lift to drag ratio for landing. -1.0 may be entered to let ACSYNT compute this.
   Default: -1.0, Range: -1.0 or > 0.0, Type: Real
- Lift to drag ratio for take-off. -1.0 may be entered. Default: -1.0, Range: -1.0 or > 0.0, Type: Real

### C. STORES DRAG COMPUTATION

Figure 4 is an example of an external stores drag computation for ACSYNT. Fifteen stations are being loaded with a variety of weapons. D/q is the drag value associated with each weapon or launcher from Table 7. Tip mounted missiles are assumed to create no drag because they reduce the induced drag for the wing. The mount modification is 1.0 unless it is a corner mount, and then it is 0.8. When weapons are mounted in tandem the draft

modification is set to 0.8 to account for the drafting effect. This example (Figure 4) and Table 7 are taken in their entirety from Reference 3.

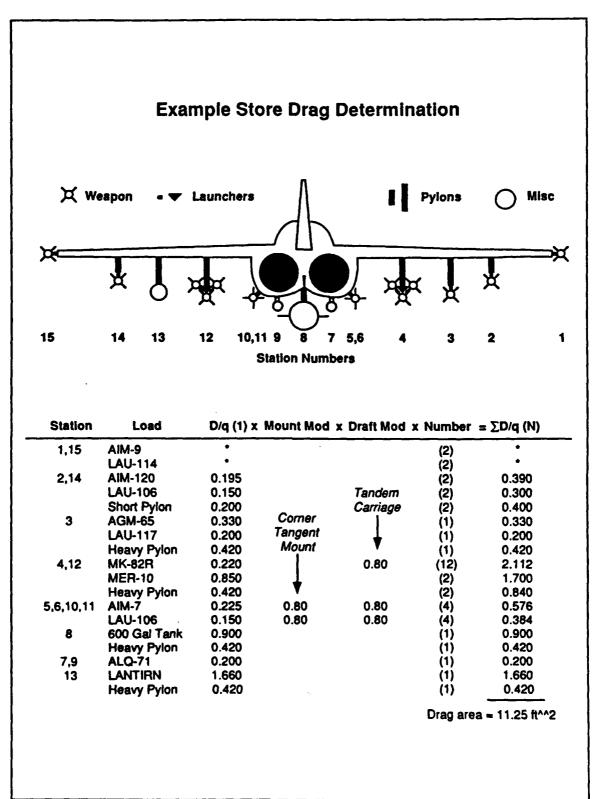


Figure 4. Example Stores Drag Problem [Ref 3]

TABLE 7. Stores Drag Values [Ref 3]

Component	Notes	Rack Required	Dia	Len	L/D	Weight	D/q
			(in)	(in)		(lb)	(FT^2)
Air to Air							
AIM-9J	Sidewinder	LAU-114, 128	5.0	120.0	24.0	172.0	0.144
AIM-9L	Sidewinder	LAU-114, 128	5.0	120.0	24.0	199.0	0.144
AIM-40D			6.0	79.3	13.2	134.0	0.170
AIM-40B, E, J			6.0	79.3	13.2	164.0	0.170
AIM-120	AMRAAM	LAU-128, 106	7.0	141.0	20.1	333.0	0.195
AIM-7D	Sparrow	LAU-106	8.0	144.0	18.0	402.0	0.225
AIM-7F	Sparrow	LAU-106	8.0	144.0	18.0	510.0	0.225
AIM-54	Phoenix			156.0	10.4	987.0	0.460
Air to Ground							
AGM-12B	MK 83		12.5	126.0	10.1	580.0	0.300
AGM-12C	Bull Pup			160.0	9.2	1779.0	0.480
AGM-12E	Bull Pup		17.3	160.0	9.2	1714.0	0.480
AGM-45	Shrike	LAU-34A		120.0	15.0	406.0	0.220
AGM-62A	Walleye			136.0	9.1	1108.0	0.410
AGM-84	Harpoon	MAU-12		152.5	11.3	1142.0	0.450
AGM-65	Maverick	LAU-117, 88	12.0	97.7	8.1	462.0	0.330
AGM-65E	Maverick	LAU-117(1), 88(3)	12.0	97.7	8.1	634.0	0.330
AGM-88A	HARM	LAU-118A	10.0		16.4	778.0	0.350
Guided Bombs							
GBU-8/B	MK 84		18.0	149.0	8.3	2293.0	0.720
GBU-10/B	Laser MK 84			168.0	9.3	2053.0	
GBU-24	Electro Optical MK 84			168.0	9.3		
GBU-12/B	MK 82	<del> </del>		126.0	11.7		
GBU-22	Laser MK 82			137.0	12.7	705.0	
GBU-11/B		<del></del>	24.1		6.8		
KMU-431/B		<del> </del>		152.0	10.8		
GBU-15 CWW				154.0		Fig 2-10	1.230
GBU-15 PWW	<u> </u>			154.0		Fig 2-10	1.30
GBU-15 Data Pod				130.0	6.5		
	<del> </del>	<del> </del>		1 2 2 2 2		1	1
Cluster Bombs	CBU=SUU+BLU		1			<del> </del>	
SUU-25A, B, C	Dispenser	<del>                                     </del>	14.0	93.0	6.6	360.0	0.380
SUU-40, 44				101.0	7.2		
SUU-20/A	·			122.0	7.8		
SUU-64, 65, 66	TMD, CBU 87/B		15.6			Fig 2-8	0.42
SUU-36A, 38A		<del></del>		141.0			0.24
SUU-30H-B	CBU 58/B, 52B/B, 71/B		16.1			Fig 2-8	0.50
SUU-30B-B	CBU 52/B, 53B/B, 54/B		16.1		ĺ	Fig 2-8	0.41
SUU-41B/A	150 150, 500, 5, 54,6		<del></del>	140.0	8.5		0.33
SUU-21	<del>                                     </del>			156.0	9.2		
SUU-42	<del>                                     </del>		<del></del> -	140.0		<del></del>	
BL755	+		16.5	<del></del>			
VJ291	<del> </del>		16.0			+	
	<del> </del>	<del> </del>	+	198.0		<del></del>	<del></del>
JP233 HB876 JP233 SG357				199.0			

Table 7. (cont)

14510 1. (00110)						
STREBO	MW-1	42.2	209.0	5.0	10000.0	1.750
MATRA		12.8		7.2	550.0	0.205
BELUGA		14.2	131.0	9.2	671.0	0.250
<u> </u>	<del> </del>					
Runway Denial						
BAP-100	Runway Buster	3.9	71.0		80.0	0.050
Durandal	Runway Buster	8.8	98.0	11.1	440.0	0.180
Chem/Fuel Bombs						
MK-12	Chemical Bomb	14.0	109.0	7.8	1000.0	0.250
Big Eye	Chemical Bomb	13.3	90.0	6.8	436.0	0.230
		10.0	30.0	- 0.0	400.0	0.230
Bombs						
Mark-89 PB		4.0	33.0	8.3		0.030
Mark-81	MK-86 PB	9.0	76.5	8.5	270.0	0.080
Mark-81-R	Snake Eye	9.0	76.1	8.5	300.0	0.120
Mark-82	MK-87 PB	10.8	89.6		505.0	0.130
Mark-82-R	Snake Eye, BSU-49	10.8		0.0	550.0	0.220
Mark-83	Mod 400	14.0	118.4	8.5	985.0	0.190
Mark-83-R	MK-40, MAU-91 A/B			#####		0.390
Mark-84	MK-88 PB Mod 83	18.0	153.5	8.5	1970.0	0.310
Mark-84-R	GBU	18.0	150.0	8.3	2123.0	0.710
Mark-117		16.0	87.0	5.4	820.0	0.200
Mark-117-R		16.0	82.0	5.1	880.0	0.480
Mark-118		24.1	132.0	5.5	3020.0	0.790
Mark-116 A2		18.5	138.0	7.5		0.330
Mark-30 E2		16.0	90.0	5.6		0.470
Mark-20	Rock Eye Mod 2	13.3	92.0	6.9	486.0	0.270
MLU-32	B-99	8.3	63.0	7.6	154.0	0.160
Gun Pods	<del> </del>					
MK-4	<del></del>		101.0	0.5		4 400
SUU-16/A	<del></del>		191.0			1.100
GEPOD 30 mm	4994a		200.0			0.870
GEPOD 30 IIIII	488#ammo, 106#Links	24.0	165.0	6.9	2000.0	0.800
Pylons						
Long Heavy Pylon						0.420
F-16A,C LH Pylon	Forward Step					0.540
Short Pylon	·					0.200
Tangent Tandem	(2) Mk-84					0.330
			<del> </del>			
Racks						
LAU-3C/A -D/A -61/A	-A/A -69A -A/A	15.7	77.0	4.9		0.450
LAU-69A -A/A		15.7	85.0	5.4		0.450
LAU-3/A -A/A		15.7	86.0	5.5		0.310
LAU-60/A		15.7				0.310
LAU-10/A		13.9	140.0	10.1		0.300
LAU-32/A	59A Rocket Pod	9.8	67.1	6.8		0.180
LAU-34/A	AGM-45					0.170

TABLE 7. (cont)

LAU-68/A, B		T	9.8	71.0	7.2	<del></del>	0.190
LAU-88/A	Triple Rail, AGM-65		<u> </u>				0.990
LAU-106	AIM-7, -120						0.150
LAU-114/A	AIM-9						0.090
LAU-117	Single Rail, AGM-65					· · · · · · · · · · · · · · · · · · ·	0.200
LAU-118/A	AGM-88	1					0.170
LAU-128/A	AIM-9, -120						0.110
LAU-5003/A			15.7	77.0	4.9		0.450
TER-9	Triple Ejector (3)						0.350
MER-5	Multiple Ejector (5)						0.750
	Multiple Ejector (4)	<del>                                     </del>					0.600
MER-10	Multiple Ejector (6)	<del></del>					0.850
BRU-26	? (6)	<del> </del>					1.250
BRU-40	Lo-Profile Ejector (4)						1,140
BRU-40M	Lo-Profile Ejector (2)	1					1.160
Fuel Tanks							
300 Gation			24.0	160.0	6.7		0.530
370 Gallon			26.0	240.0	9.2		0.550
600 Gallon			34.4	260.0	7.6		0.900
150 Gallon			16.5	165.0	10.0		0.270
275 Gallon			24.0	210.0	8.8		0.480
330 Gallon							0.540
	<del>                                     </del>						
ASAT							
ASAT & Pylon			20.0	215.0	10.8		1.750
Pylon Only							0.750
· Electronic War	<del>                                     </del>	1	-				
ALQ-101, -2			10.0	101.0	10.1		0.180
ALQ-101-3, -4				157.0	15.7		0.200
ALQ-71, -176	Fins		10.0	115.0	11.5	350.0	0.200
ALQ-72	ECU ^		10.0	99.0	9.9		0.240
ALQ-87	ECU, Fins		10.5	107.0	10.2		0.210
ALQ-81, -88			10.0	191.0	19.1		0.380
ALQ-31			23.0	184.0	8.0	1000.0	0.860
ALQ-119-12			10.0	154.0	15.4	~600	0.710
ALQ-131			17.5	126.0	7.2	~700-800	0.750
AN/ASQ-T11, -T13	Pod					160.3	
AN/AWG-16			10.0	92.0	9.2	168.0	0.200
Pave Penny	Includes Pylon					83.0	0.060
74x AD204E	Hardback Beacon Pod		11.2	36.0	3.2	78.0	0.210
Lantim Target Pod	Includes Pylon		16.5	99.0	6.0	~980-105	0.720
Lantim Navigation Po	d Includes Pylon		19.1	74.0	3.9	430.0	0.940

# VII. PROPULSION MODULE

### A. OVERVIEW

The Propulsion module will compute the on and off design characteristics of a turbojet or turbofan engine using cycle analysis. There are seven main assumptions used during the calculations [Ref 2:p. 163]

- Bypass ratio is constant at design value
- Compressor operates along compressor backbone only
- The turbine is assumed to be choked
- The combustor pressure drop is constant
- Where the fan and outer compressor have a different number of stages, the fan characteristics are scaled from outer compressor characteristics.
- Thermodynamic properties include the effects of fuel addition but do not include dissociation.
- The compressor reference point equals the compressor design point.

Six engines are available for selection and the one that most closely matches the design should be chosen. Each engine has an associated set of default variables. If the engine desired is not one of the default engines, simply alter the variables to suit the requirements. Table 8 gives the default engines and their default values. It should be noted that not all values are

given for each engine. Acceptable ranges for some of the engine efficiencies may be found in Oates [Ref 6:p. 224].

#### **B. PROPULSION INPUTS**

There are seven pages of available variables in CREATE. Default values shown are for the J-85 engine where applicable. The variables are:

- Engine diameter (ft). If engine diameter, length and weight are all 0.0, ACSYNT will attempt to size the engine.

  Default: 1.365, Range: [0.0, 30.0], Type: Real
- Engine length (ft)
  Default: 9.16, Range: [0.0, 60.0], Type: Real
- Engine weight (lbs).

  Default: 608.0, Range: [0.0, 100000.0], Type: Real
- Inner turbine flow area (ft²) (at the stator position). Default: 0.242, Range: (0.0, 10.0], Type: Real
- Bypass ratio.

  Default: 0.0, Range: [0.0, 30.0], Type: Real
- Engine face diameter (ft)
  Default: 1.365, Range: [0.0, 30.0], Type: Real
- Nozzle fineness ratio (nozzle length/nozzle max diameter). Default: 0.0, Range: > 0.0, Type: Real
- Cowl fineness ratio (cowl length/cowl max diameter).

  Default: 0.0, Range: > 0.0, Type: Real
- Engine hub/tip ratio.
  Default: 0.6, Range: (0.0, 1.0], Type: Real
- Fuel heating value (BTU/lb<sub>m</sub>) (JP-4 = 18600.0)
   Default: 18600.0, Range: [14000.0, 55000.0], Type: Real

- Scaling factor for inlet capture area (1.0 = capture area equals inlet area). Default: 1.0, Range: [0.5, 1.5], Type: Real
- Engine percent corrected airflow.

  Default: 100.0, Range: [50.0, 150.0], Type: Real
- Maximum nacelle diameter factor (1.0 = nacelle diameter equals engine diameter).

Default: 1.15, Range: [1.0, 2.0], Type: Real

- Total nacelle length factor (1.0 = nacelle length equals engine length).

  Default: 2.0, Range: [1.0, 3.0], Type: Real
- Engine face mach number. Default: 0.6, Range: (0.0, 2.0], Type: Real
- Distance between the nozzle centerlines divided by the nozzle diameter (this accounts for interference drag due to multiple nozzles). Use 1.0 for one engine.

Default: 1.0, Range: >= 1.0, Type: Real

• Nozzle velocity coefficient (accounts for incomplete expansion and other losses).

Default: 0.98, Range: [0.6, 1.0], Type: Real

- Cooling airflow/primary airflow ratio. Default: 0.0, Range: [0.0, 0.2], Type: Real
- Year of engine installation. Used when ACSYNT sizes the engine (i.e. length, weight and diameter are all 0.0)

  Default: 63.0, Range: None, Type: Real
- Engine thrust with afterburner at sea-level (the engine sizing flag in the Trajectory Module should be set to -2).

  Default: 4080.0, Range: [0.0, 999999.0], Type: Real
- Engine thrust without afterburner at sea-level (the engine sizing flag in the Trajectory module should be set to -3).

  Default: 2720.0, Range: [0.0, 999999.0], Type: Real

• Thrust/weight ratio at take-off (the engine sizing flag in the Trajectory Module should be set to -1).

Default: 0.5, Range: (0.0, 10.0], Type: Real

\*\*\* Only one of the above three variables is used, as determined by the engine sizing flag in the Trajectory inputs \*\*\*

• Afterburner adiabatic efficiency.

Default: 0.75, Range: [0.6, 1.0], Type: Real

• Combustor adiabatic efficiency. Default: 0.87, Range: [0.6, 1.0], Type: Real

• Ductburner adiabatic efficiency. Default: 0.75, Range: [0.6, 1.0], Type: Real

• Compressor adiabatic efficiency.

Default: 0.80, Range: [0.6, 1.0], Type: Real

• Fan adiabatic efficiency.
Default: 0.82, Range: [0.6, 1.0], Type: Real

• Turbine adiabatic efficiency. Default: 0.90, Range: [0.6, 1.0], Type: Real

• Design fan pressure ratio. Default: 1.0, Range: [1.0, 10.0], Type: Real

• Outer compressor pressure ratio. Default: 1.0, Range: [1.0, 15.0], Type: Real

• Overall compressor pressure ratio. Default: 7.0, Range: [3.0, 50.0], Type: Real

• Combustor pressure ratio. Default: 0.95, Range: [0.6, 1.0], Type: Real

• Afterburner pressure ratio with burner lit. Default: 0.94, Range: [0.6, 1.0], Type: Real

• Afterburner pressure ratio without burner lit. Default: 0.94, Range: [0.6, 1.0], Type: Real

- Ductburner pressure ratio with ductburner lit. Default: 0.98, Range: [0.6, 1.0], Type: Real
- Ductburner pressure ratio without ductburner lit. Default: 0.82, Range: [0.6, 1.0], Type: Real
- Average compressor stage pressure rise (psi). Default: 1,27, Range: [1.0, 3.0], Type: Real
- Turbine inlet temperature (<u>degrees R</u>). Default: 2160.0, Range: [1500.0, 4000.0], Type: Real
- Afterburner max temperature ( $\underline{\text{degrees R}}$ ) (0.0 = no afterburner). Default: 0.0, Range: > 0.0, Type: Real
- Ductburner max temperature (<u>degrees R</u>) (0.0 = no ductburner). Default: 0.0, Range: > 0.0, Type: Real
- Incremental inlet total pressure recovery reduction, used with inlet pressure recovery code below (input as a positive number)

  Default: 0.0, Range: [0.0, 1.0], Type: Real
- Inlet pressure recovery code
  - 1 = (AIA ram recovery) (incremental inlet total pressure recovery reduction)
  - 2 = (Mil-Spec 5008B) (incremental inlet total pressure recovery reduction)
  - 3 = (normal shock) (incremental inlet total pressure recovery reduction)
  - 4 = Table look-up

Default: 3, Range: [1, 4], Type: Integer

- Number of engines (this should equal the number of pods). Default: 2, Range: [1, 10], Type: Integer
- Specific fuel multiplying factor for condition 1. Default: 1.0, Range: [0.3, 3.0], Type: Real
- <u>Upper</u> limit on Mach number where the specific fuel consumption multiplying factor for condition one is valid.

  Default: 1.0, Range: (0.0, 3.0], Type: Real

The above two variables (and the two below) are typically used after the specific fuel consumption has been determined by a previous convergence run. If the calculated SFC is greater than or less than the expected SFC, it may be altered for a given Mach range by setting the SFC multiplying factor to a value other than one. The Mach numbers specifying the two conditions may not overlap.

- Specific fuel multiplying factor for condition 2. Default: 1.0, Range: [0.3, 3.0], Type: Real
- <u>Lower</u> limit on Mach number where the specific fuel consumption multiplying factor for condition two is valid.

  Default: 1.1, Range: (0.0, 3.0], Type: Real
- Specific fuel consumption multiplying factor for burner lit (applied after the two previous factors have been added).

  Default: 1.0, Range: [0.3, 10.0], Type: Real
- Scale factor for nozzle boat-tail drag. Default: 0.0, Range: [0.0, 2.0], Type: Real
- Scale factor for total installation drag. Default: 0.0, Range: [0.0, 2.0], Type: Real
- Scale factor for nozzle interference drag. Default: 0.0, Range: [0.0, 2.0], Type: Real
- Altitudes for detailed output. An array of 6 values. This array will be matched up with the Mach number array below.

  Default: 0.0, Range: [0.0, 99999.0], Type: Real
- Mach numbers for detailed output. An array of 6 values. This array is matched up with the altitude array above.

  Default: 0.0, Range: [0.0, 3.0], Type: Real

• The number of altitude/Mach number combinations above that do not have the afterburner lit.

Default: 6, Range: [0, 6], Type: Integer

- Engine type indicator.
  - 0 = Turbojet
  - 2 = Turbofan

Default: 0, Range: 0 or 2, Type: Real

- Afterburner indicator.
  - 0 = No afterburner
  - -1 = Afterburner is present but not lit
  - 2 = Afterburner lit

Default: -1, Range: 0 or -1 or 2, Type: Real

- Ductburner indicator.
  - 0 = No afterburner
  - -1 = Afterburner is present but not lit
  - 2 = Afterburner lit

Default: 0, Range: 0 or -1 or 2, Type: Real

Table 8. [Ref 3]

Default Engine Values									
Variable	J-85	TF-30	JT-8D	JT-9D	CF-6	Generic			
Inner Turbine Flow Area	0.242	0.328	0.411	0.385	0.385	0.385			
Bypass Ratio	0.0	0.73	1.03	8.2	4.4	6.23			
Engine Face Diameter	1.365	3.8	3.655		8.2	8.2			
AB Adiabatic Efficiency						0.75			
Combustor Adiab Efficiency	0.87	0.94	0.94	0.98	0.94	0.87			
Ductburner Adiab Efficiency						0.75			
Compressor Adiab Efficiency	0.8	0.8	0.82	0.82	0.82	0.8			
Fan Adiabatic Efficieniency						0.9			
Turbine Adiabatic Efficiency				0.92	0.92	0.92			
Hub/Tip Ratio	0.6	0.6	0.4	0.3	0.3	0.6			
Design fan pressure ratio	1.0	2.43	1.91	1.6	1.56	1.51			
Outer comp pressure ratio	1.0	7.41	4.2	1.6	1.72	1.396			
Overall comp pressure ratio	7.0	21.8	16.9	22.9	30.0	20.1			
Combustor presssure ratio	0.95		0.95			0.97			
AB pressure ratio, lit		0.92	0.96			0.98			
AB pressure ratio, not lit	0.94	0.88	0.98	0.96	0.92	0.98			
Ductburner pressure ratio			_			0.98			
DB pressure ratio, not lit						0.98			
Avg comp stage rise	1.27	1.21	1.2	1.2	1.21	1.21			
Thrust with burner	4080.	25100.	0.0	0.0	0.0	0.0			
Thrust, no burner	2720.	14560.	14500.	50000.	50280	9300.			
Turbine inlet temp	2160.	2743.	2180.	2835.	2800.	2637.			
Cooling/primary air ratio	0.0	0.018	0.0	0.02	0.02	0.0			
Year of installation	63.0	71.0	68.0	70.0	70.0	70.0			
Length	9.16	15.18	10.31	14.08	14.86	8.67			
Weight	608.0	3790.0	3218.0	8874.0	9767.	1421.0			

## VIII. WEIGHTS MODULE

### A. OVERVIEW

Aircraft weights are calculated based on the aircraft type (fighter, transport or bomber), geometric size and gross weight. A "slope factor" is applied to the various aircraft systems and structures to determine an estimate of the weights. A Slope of 1.0 should be used initially for the first convergence run. If the calculated weights are greater or less than the expected weight, then the slope may be altered to suit the requirement. As an example, a slope of 0.7 could be applied to the wing to account for an advanced composites structure. Each of the component weights are computed internally to ACSYNT and are based on historical data for all metal components.

#### B. WEIGHTS INPUT

CREATE uses four separate pages for input. The variables are:

• Wing slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Fuselage slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Horizontal tail and/or canard slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Vertical tail slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Nacelles slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Landing gear slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Engines slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Fuel systems slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Hydraulics and pneumatics slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Electrical system slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Avionics slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Instrumentation slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Environmental control slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Passenger accommodations slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Auxiliary power unit (APU) slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Flight controls slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

• Crew accommodations slope.

Default: 1.0, Range: [0.0, 3.0], Type: Real

- Payload weight (lbs) (includes ammunition, cargo, passengers, etc...).

  Default: 0.0, Range: >= 0.0, Type: Real
- Wing pivot factor (for swept wings only). Used in the same fashion as a slope factor.

Defauit: 1.0, Range: [0.0, 3.0], Type: Real

- External tank factor. Used like a slope factor. Default: 1.0, Range: [0.0, 3.0], Type: Real
- Maximum Mach number (for transports and bombers only). Default: 0.85, Range: [0.0, 3.0], Type: Real
- Oblique wing material density (lbs/in³). Default: 0.056, Range: [0.0, 1.0], Type: Real
- Oblique wing allowable stress (psi).
  Default: 30000.0, Range: [5000.0, 100000.0]
- Wing weight equation
  0 = standard wing
  1 = delta wing
  Default: 0, Range: 0 or 1, Type: Integer
- Oblique wing weight equation
  0 = standard wing
  1 = oblique wing
  Default: 0, Range: 0 or 1, Type: Integer
- Tail indicator
  0 = standard tail
  1 = T-tail
  Default: 0, Range: 0 or 1, Type: Integer
- Body equation
  1 = uses Sanders body equation
  2 = Air Force body equation
  Default: 1, Range: 1 or 2, Type: Integer

• Wing weight technique (used only with Transports and Bombers)

1 = Sanders wing equation

2 = Air Force wing equation

3 = Langley wing equation

Default: 1, Range: [1, 3], Type: Integer

• Estimate of gross weight. This is the starting value for the convergence (lbs).

Transports = 100000.9

Fighters = 20000.0

Bombers = 50000.0

Weight of Ammunition (lbs).
 Default: 0.0, Range: >= 0.0, Type: Real

Weight of Bombs (lbs).
 Default: 0.0, Range: >= 0.0, Type: Real

Weight of Missiles (lbs).
 Default: 0.0, Range: >= 0.0, Type: Real

Weight of External Tanks (lbs).
 Default: 0.0, Range: >= 0.0, Type: Real

#### IX. NAVY MODULE

#### A. OVERVIEW

The Navy module was originally developed at NPS to aid in the study of a carrier based, high-energy laser equipped aircraft for fleet air defense. Its sole purpose is to determine if the design is compatible with the C13-1 catapult and the MK 7 MOD 3 arresting gear as installed on the CVN-68 class carriers.

The catapult is assumed to be operating at maximum capacity for the launch, regardless of the aircraft weight. This will provide the highest catapult endspeed (liftoff speed) possible to minimize the required wind over the deck (A low wind over the deck is desirable to reduce the requirement for a high ship speed). In this case, the catapult system is operating at 520 psig receiver pressure. The gross weight vs end speed curve [Ref 7:p. 4-28] was fitted with a 7th order Lagrange Polynomial [Ref 8] to obtain an equation suitable for use in the program. The final endspeed is that due to the catapult added to the velocity due to the aircraft thrust.

Likewise, the aircraft engaging speed for the arresting gear is the highest possible engaging speed for the current weight of the aircraft. This also provides the minimum wind over the deck requirements.

Aircraft performance is based on tropical day conditions at sea-level, to provide a worse-case ocenario. The vertical component of the engine thrust is added to the lift of the aircraft based on the aircraft AOA.

No specific inputs are required for the Navy module. All calculations are internal to the program. When using this module with CREATE, three items must be established. First, the module must be selected. Second, a value for the gear down drag should be entered in the "Total drag due to additional items" variable in the Aerodynamics module. The drag supplied will be used whenever the aircraft is less than 0.3 Mach. Third, the flap/slat settings for takeoff and landing should be set to achieve 90% of  $C_L$  max. The last two items are not required but recommended for accurate results. For low thrust aircraft with large flap areas, a very high drag (greater than thrust available) may be encountered with high catapult endspeeds. A reduction of the flap setting may reduce the drag coefficient sufficiently to get airborne.

## X. EXAMPLE ONE

## A. INTRODUCTION

To serve as a detailed introduction to NPSASP, the A-10 Thunderbolt II (Fig 4) will be re-created. Each step of the design process will be covered from initiating a data file to evaluating the output from ACSYNT, and every module will be utilized. It is assumed that the user has an active account on the Aeronautics Department Vax computer system and has some experience with Vax commands and terminology.

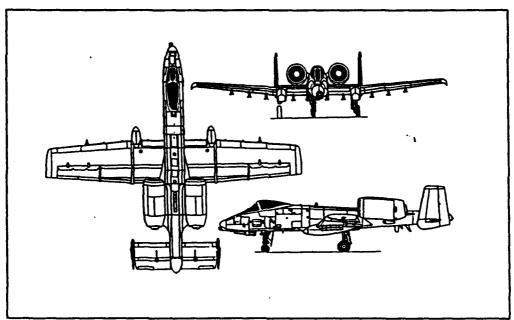


Figure 5. A-10 Thunderbolt II [Ref 10:p. 375]

#### B. A-10 DESIGN INPUTS

If N/A appears next to a variable, that item is not applicable to this design. It may be ignored.

- Login on the Vax and type "DESIGN" (It may be necessary to create a new subdirectory at this point, if so directed). This command will bring up the opening screen for NPSASP, with several menu options.
- Select item (1) from the opening menu (RUN CREATE). This starts CREATE to begin building the aircraft data file.
- Select item (2) (CREATE A NEW FILE).
- Enter a filename of "A10". CREATE will automatically add a three letter extension to the filename of ".ACS" to distinguish it from other files in the directory. If the filename selected conflicts with an existing file, CREATE will ask for a different name to use.
- Select item (1) (SIMPLE ANALYSIS).
- Enter a project title of "A-10 THUNDERBOLT". This should not be confused with the initial file name.
- Select item (3) (BOMBER). This is used later on by the Weights module to establish the weights.
- This is the Module Selection Menu. The first five modules are required and may not be changed. The Navy module should be selected by just typing a "10" at the prompt. The "NO" will change to a "YES". Enter a "0" to continue.
- Select item (1), Change the weight to 60000.0, then (2) to continue. If for some reason ACSYNT can not converge the design, this is the maximum weight that will be investigated.
- This is the Geometry Selection Menu. Each feature that the design incorporates should be selected here. In this case, items 1, 4, 5, 8, 9, 10 and 11 should be set to "YES"

- Symmetric Wing Geometry:
  - Aspect Ratio: 6.54
  - Surface Area: 506.0 (ft<sup>2</sup>)
  - Dihedral: 7.0 deg
  - Fuel Density: 48.62 (lbs/ft³) (JP-4)
  - Leading Edge Flap Width: 0.12
  - Leading Edge Sweep: 0.0 deg
  - Wetted Area Multiplier: 0.99
  - Taper Ratio: 0.66
  - T/C Ratio, Wing Root: 0.16
  - T/C Ratio, Wing Tip: 0.13
  - Trailing Edge Flap Width (% chord): 0.35
  - Fraction of Wing Volume Filled with Fuel: 0.19
  - Position of Wing Quarter Chord: 0.47
  - Elevation of Wing on Fuselage: -1.0
  - Enter "0" to continue to the next menu.
- Horizontal Tail Geometry:
  - Aspect Ratio: 2.99
  - Surface Area: 110.0
  - Tail Volume Coefficient: 1.0
  - LE Sweep: 0.0
  - Wetted Area Multiplier: 1.1 (this a little higher than normal to try and account for the extra drag produced by the tail design)
  - Taper Ratio: 0.99
  - T/C Ratio, Root: 0.13
  - T/C Ratio, Tip: 0.13
  - Position of TE of the Root Chord: 0.97
  - Elevation of Tail on Fuselage: 0.0
  - Sizing Logic: T
  - Horizontal Tail Sizing Fraction: 0.234 (The horizontal tail will be sized using the wing area \* sizing fraction)
  - Enter "0" to continue
- Vertical Tail Geometry:
  - Aspect Ratio: 1.74
  - Surface Area: 50.0 (the area of <u>1</u> tail)
  - Tail Volume Coefficient: 0.1 (not required since the sizing fraction is non-zero).
  - LE Sweep: 0.0
  - Wetted Area Multiplier: 1.1
  - Taper Ratio: 0.61
  - T/C Ratio, Root: 0.13

- T/C Ratio, Tip: 0.12
- Number of Vertical Tails: 2.0
- X Location of TE of the Root Chord: 0.97
- Elevation of the Root Chord of the Tail on Fuselage: -.9
- Sizing Logic: T
- Vertical Tail Sizing Fraction: 0.107
- Enter "0" to continue
- Enter "1" for the number of fuselage pods. (There are 2 pods symmetrically located).
- Fuselage Pod Geometry:
  - Engine Pod Diameter: 4.88
  - Engine Pod Length: 10.89
  - Stand-Off Distance: 0.2
  - Angular Orientation: 0.0
  - X Location of Pod Leading Edge: 0.6
  - Wing Pod Symmetry: 0
  - Enter "0" to Continue
- Fuselage Geometry:
  - Maximum Fuselage Diameter: 5.26
  - Fuselage Length: 53.33
  - Diameter of Nose Radar Dish: 0.0
  - Afterbody Fineness Ratio: 5.5
  - Fuselage Fineness Ratio: 0.0
  - Nose Fineness Ratio: 1.94
  - Length of Radar Equipment Behind Radar: 0.0
  - Surface Area Complexity Factor: 1.0
  - Fuselage Wall Thickness: N/A
  - Mission Fuel Weight Estimate: 12000.0
  - Tail Type: 1
  - Enter "0" to Continue
- Crew Cockpit Geometry:
  - Length of Crew Station: 0.0 (let ACSYNT size it)
  - Width of Crew Station: 0.0
  - Number of Crew Members: 1
  - Seating Arrangement: T
  - Enter "0" to Continue
- 1 Fuselage Fuel Bay
  - Fuel Density: 48.62 (JP-4)

- Trajectory Page 1:
  - Cruise Mach Number: 0.45
  - Mach Number for Max Endurance: 0.27
  - Design Load Factor: 7.0
  - Ultimate Load Factor: 11.25
  - Aircraft Range: 1000.0
  - Maximum Dynamic Pressure: 700.0
  - Take-Off Obstacle Requirement: 0
  - Enter "0" to Continue
- Trajectory Page 2:
  - Time for Warm-up and Taxi: 5.0
  - Power Setting During Warm-up and Taxi: 5
  - Time for Take-off: 2.0
  - Power Setting for Take-off: 2
  - Breguet Altitude Search Flag: 0
  - Loiter Altitude Search Flag: 0
  - Enter "0" to Continue
- Trajectory Page 3:
  - Fuel Reserve: 0.05
  - Total Internal Fuel: 11130.0
  - External Fuel: 0.0
  - Weight of Trapped Fuel: 111.0
  - Engine Sizing Flag: -3
  - Number of Cruise Phases (see below): 4
  - Total number of Trajectory Phases (see below): 8
  - Debug Option: 0
  - Enter "0" to Continue
- Trajectory Phases. Eight phases will be used to simulate a combat mission. The values are given below. Note that each phase is presented on a different page. For the combat phase, input 5.0 g's for item (8). Drop bombs and ammunition during the combat phase using items (11) and (12) on the menu.

TABLE 9. A-10 Mission

	Mach	Mach	Alt	Alt	Horiz	Horiz	Power
Phase	Start	End	Start	End	Dist	Time	Setting
Climb	0.00	0.00	100	5000	0.0	0.0	2
Cruise	0.5	0.5	5000	5000	230	44.0	4
Cruise	0.5	0.5	100	100	40	8.0	4
Combat	0.6	0.6	100	100	0	30.0	3
Cruise	0.5	0.5	100	100	40	8.0	4
Climb	0.00	0.00	100	5000	0.0	0.0	2
Cruise	0.5	0.5	5000	5000	230.0	44.0	4
Loiter	0.27	0.27	500	500	10.0	20.0	4

## • Aerodynamics Page 1:

- Ratio of Body Base Area to Max Body Area: 0.08
- Angle of Attack for C<sub>L</sub> max: 11.0
- Maximum Angle of Attack: 19.0
- Width of the Fuselage at the Nose: 5.26
- Boat Tail Exposure Factor: 1.0
- C<sub>L</sub> max Scaling Factor for clean aircraft: 1.0
- Laminar-Turbulent Weighting Factor: 1.0
- Enter "0" to Continue

## Aerodynamics Page 2:

- Ref Mach Number Array: 0.15, 0.20, 0.30, 0.40, 0.45, 0.49, 0.53, 0.57, 0.60, 0.70
- C<sub>L</sub> at Zero AOA for Body: 0.005, 0.005, 0.005, 0.005, 0.005, 0.005, 0.005, 0.005, 0.005, 0.005

- Zero Lift Pitching Moment: 0.048, 0.048, 0.047, 0.047, 0.047, 0.047, 0.047, 0.047, 0.047, 0.047, 0.047
- Enter "0" to Continue

- Aerodynamics Page 3:
  - No Entries for Page 3
  - Enter "0" to Continue
- Aerodynamics page 4:
  - Wing Airfoil Section Code: 2
  - Wing LE Radius/Chord Ratio: N/A
  - Canard Airfoil Section Code: N/A
  - Canard LE Radius/Chord Ratio: N/A
  - Distance Between the Twin Nacelles: N/A
  - Supercritical Wing Flag: 0
  - Body Cross-section Code: 1
  - Enter "0" to Continue
- Aerodynamics Page 5:
  - Pod Cowl Exposure Factor: 1.0
  - Friction Drag Multiplying Factor: 0.95
  - Canard Incidence: N/A
  - Average Flap Chord: 3.485
  - Total Area of Both Wing Flaps: 81.3
  - Total Span of Both Flaps: 0.0 (Not used for trim)
  - Desired Location of CG: 0.26
  - Static Margin for CG: 0.13
  - Height of CG Above Fuselage Centerline: 0.0
  - Horizontal Tail Incidence: 0.0
  - Enter "0" to Continue
- Aerodynamics Page 6:
  - Mach Numbers for Detailed Aero Output: 0.2, 0.3, 0.6, 0.7
  - Total Number of Requested Mach Numbers: 4
  - Altitudes for Detailed Aero Output: 0.0, 0.0, 5000.0, 5000.0

  - Enter "0" to Continue
- Aerodynamics Page 7:
  - Drag due to External Bombs: 2.12 (4 AGM-65's, 4 LAU-117's)
  - Drag due to External Stores: 0.0
  - Drag due to Drop Tanks: 0.0
  - Drag due to Additional Items: 2.2 (for gear down drag, Navy module)
  - Enter "0" to Continue

- Aerodynamics Page 8:
  - C<sub>1</sub> max for Landing: -1.0
  - C<sub>1</sub> max for Take-off: -1.0
  - TE Flap Angle for Landing: 30.0
  - TE Flap Angle for Take-off: 20.0
  - LE Slat Angle for Landing: 15.0
  - LE Slat Angle for Take-off: 15.0
  - L/D Ratio for Landing: -1.0
  - L/D Ratio for Take-off: -1.0
  - Enter "0" to Continue
- Engine Type: Change to Type 2 (TF-30)
- Propulsion Page 1:
  - Engine Diameter: 4.35
  - Engine Length: 8.33
  - Engine Weight: 1478.0
  - Inner Turbine Flow Area: 0.385
  - Bypass Ratio: 6.23
  - Engine Face Diameter: 3.86
  - Nozzle Fineness Ratio: 0.0
  - Cowl Fineness Ratio: 0.0
  - Enter "0" to Continue
- Propulsion Page 2:
  - Engine Hub/Tip Ratio: 0.55
  - Fuel Heat Value: 18600.0
  - Scaling Factor for Inlet Capture Area: 1.0
  - Engine Percent Corrected Airflow: 100.0
  - Maximum Nacelle Diameter Factor: 1.15
  - Total Nacelle Length Factor: 1.307
  - Engine Face Mach Number: 0.5
  - Distance Between Nozzles/Nozzle Diameter: 2.0
  - Nozzle Velocity Coefficient: 0.98
  - Enter "0" to Continue
- Propulsion Page 3:
  - Cooling/Primary Airflow Ratio: 0.0
  - Year of Installation: 75.0
  - Thrust w/Afterburner: N/A
  - Thrust w/o Afterburner: 9065.0
  - Thrust/Weight Ratio at Take-off: N/A
  - Afterburner Adiabatic Efficiency: N/A

- Combustor Adiabatic Efficiency: 0.87
- Ductburner Adiabatic Efficiency: N/A
- Compressor Adiabatic Efficiency: 0.8
- Enter "0" to Continue

## • Propulsion Page 4:

- Fan Adiabatic Efficiency: 0.9
- Turbine Adiabatic Efficiency: 0.92
- Design Fan Pressure Ratio: 1.51
- Outer Compressor Pressure Ratio: 1.396
- Overall Compressor Pressure Ratio: 21.0
- Combustor Pressure Ratio: 0.97
- Afterburner Pressure Ratio: N/A
- Afterburner Pressure Ratio, Not Lit: N/A
- Ductburner Pressure Ratio: N/A
- Ductburner Pressure Ratio, Not Lit: N/A
- Enter "0" to Continue

## • Propulsion Page 5:

- Average Compressor Stage Rise: 1.24
- Turbine Inlet Temp: 2697.0
- Afterburner Max Temp: 0.0
- Ductburner Max Temp: 0.0
- Incremental Inlet Total Press Recovery Reduction: 0.0
- Number of Engines: 2
- Inlet Pressure Recovery Code: 3
- Enter "0" to Continue

## • Propulsion Page 6:

- SFC Multiplying Factor for Condition One: 1.0
- Upper Limit on Mach Number for Condition One: 1.0
- SFC Multiplying Factor for Condition Two: 1.0
- Lower Limit on Mach Number for Condition Two: 1.1
- SFC Multiplying Factor for Burner Lit: N/A
- Scale Factor for Nozzle Boat-Tail drag: 1.0
- Scale Factor for Total Installation Drag: 1.0
- Scale Factor for Nozzle Interference Drag: 1.0
- Enter "0" to Continue

## • Propulsion Page 7:

- Altitudes for Detailed Output: 0.0, 0.0, 5000.0, 5000.0, 5000.0, 10000.0
- Mach Numbers for Detailed Output: 0.0, 0.5, 0.5, 0.57, 0.7, 0.7
- Number of Altitude/Mach Number Combinations without the
- Afterburner lit: 6
- Engine Type Indicator: 2
- Afterburner Indicator: 0
- Ductburner Indicator: 0
- Nozzle Type Indicator: 0
- Enter "0" to Continue

## • Weights Page 1:

- Wing Slope: 1.1
- Fuselage Slope: 1.2
- Horizontal Tail: 1.2
- Vertical Tail: 1.0
- Nacelles: 2.018
- Landing Gear: 0.9
- Engines: 0.897
- Fuel System: 1.0
- Hydraulics: 1.3
- Enter "0" to Continue

## • Weights Page 2:

- Electrical System: 1.0
- Avionics: 1.0
- Instrumentation: 1.0
- Environmental System: 1.0
- Passenger Accommodations: 1.0
- APU: 1.0
- Flight Controls: 1.37
- Crew Accommodations: 1.0
- Payload: 14000.0
- Enter "0" to Continue

#### Weights Page 3:

- Wing Pivot Factor: 0.0
- External Tank Factor: 0.0
- Maximum Mach Number: 0.7
- Oblique Wing Material Density: N/A
- Oblique Wing Allowable Stress: N/A
- Wing Weight Equation: 0
- Oblique Wing Weight Equation: 0

- Tail Indicator: 0

- Body Equation: 1

- Wing Weight Technique: 3

- Estimate of Take-off Gross Weight: 60000.0

- Enter "0" to continue

• Weights Page 4:

- Weight of Ammunition: 1000.0

- Weight of Bombs: 1848.0

- Weight of Missiles: 0.0

- Weight of External Tanks: 0.0

- Enter "0" to continue

The ACSYNT data file is complete. The main NPSASP menu is now presented. Option (2), run ACSYNT, should now be selected. Input the name of the data file (A10) when requested. This simple analysis problem will take about 4 minutes to complete.

If everything was entered correctly the output file should appear like the one on pages 81-109. If a value was entered incorrectly and ACSYNT crashes, ensure that the four commands given on page 6 are executed prior to running CREATE again.

#### C. OUTPUT EVALUATION

The output file from ACSYNT has the same name as the input file (A10), but the extension is ".OUT" instead of ".ACS", and it will appear with some other files in the root directory. The output file may be viewed on the terminal screen or printed out. If it is printed out, the wide tractor printer should be used as the printout is 130 columns wide in places.

The important variables are defined within the following sections.

Definitions of other variables can be found in Reference 4.

The first 4 pages of the output deal with the control structure that ACSYNT will use for this analysis. This structure is established within CREATE and will change depending on the analysis method selected. The final page is a summary of the more valuable results.

## 1. Geometry Output

Page 85 is a print out of the variables input to the Geometry module. Some of these values are those input to CREATE and others are set internally. Page 86 defines the initial fuselage using the input values. The pods are not shown on the initial output. "X" represents the fuselage length (measured from the nose), "R" is the radius, and "AREA" is the area of the cross-section at location "X". Additional information is at the bottom of page 86 concerning fuselage volume and surface area. Page 87 shows the initial dimensions of the aircraft surfaces. This is a valuable means for ensuring that the design geometry is correct.

The final output from the Geometry section begins on page 92. The pod (nacelle) information now appears. The final dimensions of the planar surfaces on page 93 shows the calculated values for the horizontal and vertical tail areas, re-sized based on the sizing fraction as requested.

## 2. Trajectory Output

The initial Trajectory data appears on page 88 with the output beginning on page 94. Notice that the ending altitudes (given by "H") are higher than requested due to the aircraft climbing slightly as fuel is burned off. This can be prevented by using a "-1" for the ending altitude. Following the mission output is a printout of the combat parameters for 1 g flight, sustained flight and instantaneous. The ouput variables are:

• M: Mach Number

SFC(I): Installed Specific Fuel Consumption

SFC(U): Uninstalled SFC

H: Altitude (ft)

THRUST(I): Installed Thrust THRUST(U): Uninstalled Thrust

CL: Lift Coefficient CD: Drag Coefficient

CDINST: Engine Installation Drag Coefficient

ALPHA: Angle of Attack GAMMA: Climb Angle (deg)

WFUEL: Fuel burned for that Phase W: Aircraft Weight at end of Phase TIME: Phase Flight Time (sec)

WA: Engine Airflow (lb/sec) per engine

PR: Pressure Recovery VEL: Velocity in ft/sec Q: Dynamic Pressure X: Phase Distance (nm)

WFTO1: Warm-up and Taxi Fuel

WFTO2: Take-off Fuel PS: Specific Excess Power NZ: Normal Load Factor

TDOT: Turning Rate (deg/sec)

RADIUS: Radius of Turn

## 3. Aerodynamics Output

The Aerodynamics output begins on page 95. There are four separate sections that match to the four altitude/Mach number combinations that were requested for the detailed aerodynamics output. Under EXTERNAL, only the EXTRA (drag due to additional items) is output. The drag due to bombs, stores and tanks are computed but not shown. Most of the terms are self explanatory. The "Zone" refers to the internal calculation method used.

## 4. Propulsion Output

The Propulsion output on page 98 is quite detailed. All of the variables are defined at the beginning of the section. The six sections correlate with the six altitude/Mach number combinations requested.

## 5. Weights Output

The calculated values shown on page 107 include the slope factors that were selected. If the weight shown is too high or low, adjust the slope to bring the value into range. The calculated weight was the weight computed for the most recent pass through the mission and the estimated weight is the next estimate. Since the two values agree within .0001 (.01%) ACSYNT terminated the run.

## 6. Navy Output

The output from the Navy module (page 108) is clear cut. The minimum wind over the deck requirements for launch is based on 1.1 times the stall speed minus the liftoff speed. The landing requirements are similarly based. Notice the high  $C_d$  during landing do to the larger flap setting.

## 7. Convergence Information

The aircraft convergence information begins on the bottom of page 90. Error messages from each module can normally be found in this section. In this case, two different warnings are present. The first indicates that the combat load factor that was input during the combat phase (5 g's) is too much for the design to handle for a sustained period. ACSYNT automatically decreased it to a sustainable level of 4.0 g's (page 95). The second error, near the bottom of page 91, indicates that there is insufficient thrust if an engine is lost off the catapult. This is verified in the Navy output.

## D. EXAMPLE ONE COMPLETION

After ACSYNT completes its run, it does not update the aircraft data file with the final numbers. This means that the design must be re-converged if the same file is run again. To establish the data file as converged, it must be updated. In particular, the final value for the gross weight must be input (47121 lbs. Weights section), the mission fuel required should be updated (11443 lbs, Fuselage section), the combat g loading should be reduced from 5.0

to 4.0 (Trajectory combat phase), the areas for the horizontal and vertical tails should be updated (118.4 and 54.1, respectively) and the sizing flag should be changed to "F". To accomplish this, run CREATE again and perform the following steps:

- Select item (1) (Open a Previously Created File)
- No change to Analysis Method.
- Select (3) Bomber
- No change to Module Select Menu
- No change to the maximum weight
- Select (1), change Geometry module
- No change to Geometry Selection Menu
- Skip past the Wing.
- Update the horizontal tail and vertical tail ( areas and sizing flag)
- Skip by the fuselage pods
- Change the mission fuel weight estimate on the Fuselage Geometry Menu to the new value
- Skip past the Crew Cockpit and Fuselage Fuel Bays.
- Select (1), change Trajectory module
- Skip the first 3 pages of the Trajectory data.
- Select (1), change Trajectory phases.
- Change the ending altitudes to -1 to prevent the slow climb. Change the g loading during combat to 4.0

- No changes to the Aerodynamics or Propulsion modules.
- Select (1), Change Weights module
- Skip to page 3 of the Weights data and input the new Take-off gross weight estimate (47121.0)
- Skip the last Weights page and exit.

The Simple Analysis Method of the A-10 is now complete. Sensitivity and Optimization studies may now be performed. If the data file is run through ACSYNT again, a slightly different answer may be output for the final gross weight due to the different starting value. This new value is typically within a few pounds of the first value and is not significant.

CCCCCC	0000	0000	PPP	PPPP	EEEEEEE	SSSSSS
С	0	0	P	P	E	S
С	0	0	P	P	E	S
С	0	0	PPP	PPPP	EEEE	SSSSSS
С	0	0	P		E	S
С	0	0	P		E	S
CCCCCCC	0000	0000	P		EFFFEFF	SSSSSSS

CONTROL PROGRAM

F O R

ENGINEERING SYNTHESIS

TITLE

A-10 THUNDERBOLT

## TITLE: A-10 THUNDERBOLT

CONTROL PARAMETERS;
CALCULATION CONTROL,
NUMBER OF GLOBAL DESIGN VARIABLES,
NDV = 0
NUMBER OF SENSITIVITY VARIABLES,
NSV = 0
NUMBER OF FUNCTIONS IN TWO-SPACE,
NUMBER OF APPROXIMATING VAR.
NXAPRX = 0
INPUT INFORMATION PRINT CODE,
DEBUG PRINT CODE,
IPDBG = 0

## CALCULATION CONTROL, NCALC

VALUE MEANING

- 1 SINGLE ANALYSIS
- 2 OPTIMIZATION
- 3 SENSITIVITY
- 4 TWO-VARIABLE FUNCTION SPACE
- 5 OPTIMUM SENSITIVITY
- 6 APPROXIMATE OPTIMIZATION

#### \* \* ESTIMATED DATA STORAGE REQUIREMENTS

	REAL			INTEGER	
INPUT	EXECUTION	AVAILABLE	INPUT	EXECUTION	AVAILABLE
9	9	5000	1	1	1000

AAAA	AAA	cccccc	SSSSSSS	Y Y	N	N	TTTTTTT
A	A	С	S	Y Y	NN	N	${f T}$
A	A	Ċ	S	ΥΥ	N N	N	T
AAAA	AAA	Ċ	SSSSSS	Y	N N	N	T
A	A	Ċ	S	Y	N N	N	T
A	A	Ċ	S	Y	N	NN	T
A	A	CCCCCCC	SSSSSSS	Y	N	N	T

NASA-AMES PROGRAM

FOR

AIRCRAFT SYNTHESIS

NAVAL POSTGRADUATE SCHOOL VERSION

TITLE

A-10 THUNDERBOLT

AIRCRAFT TYPE - BOMBER

## TITLE: A-10 THUNDERBOLT

#### AIRCRAFT TYPE - BOMBER

CONTROL PARAMETERS:			
READ CONTROL,	MREAD	=	6
EXECUTION CONTROL,	MEXEC	=	4
WRITE CONTROL,	MWRITE	=	6
NUMBER IDENTIFYING CONVERGENCE			
VARIABLE FOR CONVERGED VEHICLE,	IOBJ	=	570
NUMBER IDENTIFYING COMPARISON			
VARIABLE FOR CONVERGED VEHICLE,	JOBJ	=	585
SUMMARY OUTPUT PRINT CODE,	IPSUM	=	1
GLOBAL ERROR PRINT CODE,	KGLOBP	=	0
GLOBAL COMMON INITIALIZATION CODE,	INIT	=	0
DEBUG PRINT CODE,	IPDBG	=	2
GLOBAL PLOT CONTROL,	IGPLT	=	1
DATA TRANSFER INFORMATION FILE, IN	RDDTR	=	7
DATA TRANSFER INFORMATION PRINT, 1	IPDTR	=	0

VEHICLE CONVERGENCE INFORMATION:
CONVERGENCE TOLERANCE, TOL = 0.10000E-03
ESTIM WCALC VS WEXT SLOPE = 0.75000E+00
BOUNDING WEIGHT, WGMAX = 0.60000E+05

#### MODULE IDENTIFICATION NUMBERS:

NUMBER	MODULE
1	GEOMETRY
2	TRAJECTORY
3	<b>AERGDYNAMICS</b>
4	PROPULSION
5	STABILITY AND CONTROL
6	WEIGHTS
8	GLOBAL I/O
10	NAVY
11	SUMMARY OUTPUT
14	TAKEOFF AND LANDING

```
GEOMETRY DATA CARDS
 1*** GEOMETRY DATA ***
 2 $WING
       AR= 6.54,
                       AREA= 506.00, DIHED= 7.00,
                                      SWEEP= 0.00,
       FDENWG= 48.62, LFLAPC=0.12,
                                      TCROOT=0.16,
 5
       SWFACT=0.99,
                       TAPER=0.66,
                       TFLAPC=0.35,
       TCTIP=0.13,
                                      WFFRAC=0.19,
 6
                                      KSWEEP≈0,
                       ZROOT=-1.00,
 7
       XWING=0.47,
 8
       OUTCOD=2,
 9
       SEND
10 SHTAIL
       AR= 2.99,
HTFRAC=0.234,
11
                       AREA= 110.00,
                                      CVHT=1.00,
                       SWEEP= 0.00,
                                      SWFACT=1.10,
12
                       TCROOT=0.13,
       TAPER=0.99,
                                      TCTIP=0.13,
13
       XHTAIL=0.97,
                       ZROOT=0.00,
                                      KSWEEP=0,
14
       OUTCOD=2,
15
                       SIZIT=T,
16
       $END
17 $VTAIL
       AR = 1.74,
                                      CVVT=0.10,
                       AREA= 50.00,
18
                       SWFACT=1.10,
19
       SWEEP= 0.00,
                                      TAPER=0.61,
                       TCTIP=0.12,
20
       TCROOT=0.13,
                                      VTFRAC=0.107,
21
       VTNO=2.0,
                       XVTAIL=0.97,
                                      YROOT=0.00,
       ZROOT=-.90,
                      KSWEEP=0.
                                      OUTCOD=2,
22
       SIZIT=T,
23
24
       SEND
25 SFPOD
       DIAM= 4.88,
THETA= 0.00,
                      LENGTH= 10.89, SOD= 0.20,
26
27
                      X=0.6,
                                      OUTCOD=2,
       SYMCOD=0,
28
       SEND
29
30 $FUS
       BDMAX= 5.26,
31
                      BODL= 53.33,
                                      DRADAR= 0.00.
                      FRATIO= 0.00,
       FRAB= 5.50,
32
                                      FRN= 1.94,
                     SFFACT= 1.00,
33
       LRADAR= 0.00,
                                      WALL= 0.00,
34
       WFUEL= 12000.0, OUTCOD=2,
                                      ITAIL=1,
35
       SEND
36 SCREW
37
       LENGTH= 0.00, WIDTH= 0.00, NCREW= 1,
38
       OUTCOD=2,
                      TAND=T,
39
       $END
40 $FUEL
       DEN=48.62,
                      FRAC=1.00,
                                      WFUEL=
                                                  0.0,
41
       OUTCOD=2,
42
43
       $END
END OF GEOMETRY DATA CARDS
  43 CARDS READ
REW SEATING REQUIREMENTS
NUMBER OF CREW.....
                                 1.0
TANDEM SEATING.....
                                   Т
CREW LENGTH REQUIRED.....
                                 0.0
CREW WIDTH REQUIRED.....
                                 3.5
```

```
**INITIAL OUTPUT**
NASA/AMES
              ACSYNT
    FUSELAGE DEFINITION
           R
                     AREA
    х
          0.00
                     0.00
  0.00
                     1.92
  1.07
          0.78
                     4.98
          1.26
  2.13
          1.63
                     8.36
  3.20
                    11.69
  4.27
           1.93
                    14.74
          2.17
  5.33
          2.35
                    17.36
  6.40
                    19.43
  7.47
           2.49
  8.53
                    20.86
           2.58
                    21.62
  9.60
           2.62
                    21.73
 10.67
           2.63
           2.63
 11.73
                    21.73
           2.63
                    21.73
 12.80
                    21.73
 13.87
           2.63
 14.93
           2.63
                    21.73
                    21.73
           2.63
 16.00
                    21.73
 17.07
           2.63
           2.63
                    21.73
 18.13
                    21.73
           2.63
 19.20
                     21.73
 20.27
           2.63
           2.63
                     21.73
 21.33
                     21.73
           2.63
 22.40
 23.47
           2.63
                     21.73
 24.53
                     21.73
           2.63
                     21.67
 25.60
           2.63
 26.67
           2.62
                     21.53
           2.60
2.58
 27.73
                     21.30
                     20.98
 28.80
                     20.58
  29.86
           2.56
           2.53
                     20.09
  30.93
           2.49
                     19.52
  32.00
                     18.87
  33.06
           2.45
           2.40
                     18.15
 34.13
                     17.35
  35.20
                     16.49
  36.26
           2.29
                     15.55
  37.33
           2.23
                     14.57
           2.15
  38.40
  39.46
           2.07
                     13.52
           1.99
                     12.43
  40.53
                     11.30
  41.60
           1.90
           1.80
                     10.14
  42.66
                      8.95
7.75
           1.69
  43.73
           1.57
  44.80
                      6.55
  45.86
           1.44
           1.31
                      5.36
  46.93
                      4.21
  48.00
            1.16
           0.99
                      3.10
  49.06
                      2.08
            0.81
  50.13
  51.20
            0.61
                      1.16
                      0.42
            0.37
  52.26
                      0.00
            0.00
  53.33
                      **FUSELAGE**
 MAX. DIAMETER.....
                           5.260
                          10.139
 FINENESS RATIO.....
                         702.864
 SURFACE AREA.....
                         809.360
 VOLUME.....
```

# NASA/AMES A C S Y N T \*\*INITIAL OUTPUT\*\* DIMENSIONS OF PLANAR SURFACES

		WING	H.TAIL	V.TAIL	CANARD	UNITS
PLAN AREA SURFACE AREA VOLUME SPAN L.E. SWEEP C/4 SWEEP ASPECT RATIO ROOT CHORD ROOT THICKNE ROOT T/C TIP CHORD TIP THICKNES TIP T/C TAPER RATIO MEAN AERO CH LE ROOT AT C/4 ROOT AT LE M.A.C. AT C/4 M.A.C. A TE M.A.C. AT Y M.A.C. AT LE TIP AT C/4 TIP AT ELEVATION VOLUME COEFF	SS	506.0 1012.4 464.5 57.526 0.000 -1.794 -7.140 6.540 10.598 20.347 0.160 6.994 10.911 0.130 0.660 92.416 24.645 33.013 22.416 24.645 31.335 13.400 22.416 24.164 29.410 -2.630	110.0 173.0 60.7 18.136 0.000 -0.096 -0.385 2.990 6.096 9.510 0.130 6.035 9.415 0.130 0.990 45.634 47.158 51.730 45.634 47.151 51.700 4.526 45.634 47.143 51.669 0.000 0.549	50.0 94.3 24.1 9.327 0.000 -3.982 -15.559 1.740 6.659 10.388 0.130 4.062 5.849 0.120 0.610 5.465 45.071 46.437 50.536 4.287 45.071 46.437 50.5367 49.133 -2.367 0.037	C.0 0.0 0.00 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000	(SQ.FT.) (SQ.FT.) (CU.FT.) (FT.) (DEG.) (DEG.) (IN.) (FT.) (IN.) (FT.)
E X Centroid loc Area Wetted Area. Volume Sweep Angle.		Str	ake R 0.000 0.000 0.000 0.000 0.000	ear Exte 0.000 0.000 0.000 0.000	nsion	
F U TANK	E L T I	ANKS WEIGHT	DENS	ITY		
WING FUS#1 FUS#2 TOTAL	84. 0. 0.	4103. 0. 0. 4103.	48 50	.62 .62 .00		
MISSION FUEL	REQUIRED:	=	0.			
AVAILABLE FU	EL VOLUME	IN WING	=	444.		
AIRCRAFT WEI AIRCRAFT VOL AIRCRAFT DEN CASE= 4 CALLING	UME =	0.000	Lbs. Cu.Ft. Lbs./C	u.Ft.		

#### TRAJECTORY INPUT

DESLF =, 7.00 ULTLF =11.25 RANGE = 1000. WFUEL = 11130. WFEXT = 0. WFTRAP = 100.	MENDUR = 0. QMAX = 700. XDESC = 80.0 WKFUEL = 1.000 CRMACH = 0.450 WKLAND = 0.570 FLFAC = 0.600 DECEL = 0.250 NLEGCL = 0 TOL = 0.001	IBREG = 0 IENDUR = 0	IPLOT = 0 HMINP = 0. HMAXP = 40000. DELHP = 4000. SMMINP = 0.300 SMMAXP = 0.900 DELMP = 0.100 WCOMBP = 0.50 NLEGLO = 0 NMISS = 1
FWGMAX = 1.200	TOL = 0.001	MILCOM = 0	NMISS = 1 NCODE = 0

MMPROP = 1

## MISSION 1

PHASE	MACH NO. START END	ALTITUDE START END	HORIZONTAL DIST TIME	NO. VIND TURN "G"S	WKFUEL M I	PIXWBAP
CLIMB CRUISE CRUISE COMBAT CRUISE CLIMB CRUISE LOITER	0.00 0.00 0.50 0.50 0.50 0.50 0.60 0.60 0.50 0.50 0.00 0.00 0.50 0.50	100 5000 5000 5000 100 100 100 100 100 5000 5000 5000 5000 500	0.0 0.0 230.0 44.0 40.0 8.0 0.0 30.0 40.0 8.0 0.0 0.0 230.0 44.0 10.0 20.0	0.0 0.0 0.0 0.0 0.0 5.0 0.0 0.0 0.0 0.0 0.0 0.0	1.0000 1 1.0000 1 1.0000 1 1.0000 1 1.0000 1 1.0000 1	2 0 0 0 0 0 0 0 4 0 0 0 0 0 0 0 0 0 0 0

CALLING MODULE NUMBER 3
CALLING MODULE NUMBER 4

#### PROPULSION INPUT VERSION 04-76

#### \*\*\* PROPULSION DATA \*\*\*

```
AENDIA =
            4.350 AENLE = 8.330 AENWT = 1478.000
                              0.000 ATURB =
            0.000
                                                 0.385
ALTI =
                  AM
AENTW =
            0.000
            0.000 AWAENG =
AUAENG =
                              0.157
                                     BA
            0.000 DELT57 =
                             100.000 DEPWCC =
                                                 2,000
DELPR =
           3.860 EAB1 = 0.750 ETAC1 =
                             0.750
DIA1
                                     EB1 =
                                                 0.870
                                     ETAF1 = 0.900
                              0.800
ED1
ETAT1 =
                                     HVF = 18600.000
           0.920 HTR
                              0.550
                              1.100
            1.000 MACH2 =
                                     PCDFAC =
                                                1.000
MACH1 =
                                               100.000
                                     PWCC =
POSA
           29.920 PRFD
                        =
                              1.510
           1.396 P2P1
                             21.000
                                     R10A
                                               -1.000
P11P1 =
                              0.920
R32
                        =
                                     R54N
                                           =
                                                 0.880
     =
            0.970 R54
           0.980 R711N =
R711
                              0.820
                                     SCPR
                                                1.240
           1.000 SFADSP =
                              1.000
SFADP =
                                     SFAUXP =
                                                1.000
SFBEP =
           1.000 SFBPP =
                              1.000
                                     SFBTP =
SFDIVP =
            1.000 SFINSP =
                              1.000
                                     SFIP
            1.000 SFSFC2 =
SFSFC1 =
                              1.000
                                     SFSFC3 =
                                                 1.000
                              2.000
                                               518.000
           0.500 SODG =
                                     TOSA =
SM1
                                               9065.
          520.000
                  TWAB
                              25100.
                                     TWOAB =
TR
                                     T5M
TWTO
                              2697.
                                                 3400.
                         =
                                           =
          0.500
                  Т3
                                           =
                                                  0.
T51
             0.
                  T7M
                         =
                              3400.
                                     T71
                                     XMDES =
           0.980
                              0.000
                                                 0.850
VC1
      =
                  WCWA1 =
                                               0.000
            0.850
                                75.
                                     FRBT
                                           =
                  YREN
                         =
XMT
      =
                                     RLENG =
FRPN
            0.000
                  RDIAM =
                              1.150
                                                1.307
IPR
               3 IPRINT =
                                  O IPLOT =
                                                    0
KERROR =
               0 KODE
                        =
                                  2 KT5
                                            =
                                                    0
KT7
                0
                  MINPR
                        =
                                     NAB
                                            =
                                                     6
                                     NSUMM =
NO22
                  NPROP
                                                     2 (TF30)
                                     IENG
                                            =
THESE VARIABLES ARE USED BY TABLE LOOK UP
          1.000 NDTAIL = 0 IPDBUG = 0 IIPRINT = 0
ALTD =
              0.
                       0.
                              5000.
                                       5000.
                                                5000.
                                                         10000.
           0.000
                    0.500
                                                0.700
                                                          0.700
                              0.500
                                       0.570
XMACH =
           0.000
                    0.300
                              0.600
                                       0.900
                                                1.200
                                                          4.000
XMPRI =
           1.000
                              1.000
                                       1.000
                                                1.000
                                                          1.000
XPRI =
                    1.000
                                                                    0.000
                                                 0.000
                                                          0.000
XMPRI1 =
            0.000
                     0.000
                              0.000
                                        0.000
            0.000
                     0.000
                              0.000
                                                0.000
                                                          0.000
                                                                   0.000
                    0.000
                              0.000
                                       0.000
XPRI1 =
           0.000
           0.000
                    0.000
                              0.000
                              0.000
                                                0.000
                                                          0.000
                                                                   0.000
            0.000
                                       0.000
XMPRI2 =
                     0.000
            0.000
                    0.000
                              0.000
           0.000
                    0.000
                              0.000
                                       0.000
                                                0.000
                                                          0.000
                                                                   0.000
XPRI2 =
           0.000
                    0.000
                              0.000
  CALLING MODULE NUMBER 6
```

## INITIAL WEIGHTS INPUT DATA ACSYNT MODULE NUMBER 6

AIRCRAFT TYPE: BOMBER
TITLE: \*\*\* WEIGHTS DATA \*\*\*

#### CONTROL OPTIONS

## INITIAL ESTIMATES IF CODE = 1, WEIGHT IS FIXED

QUANTIT	Y	VALUE	CODI	Ε	QUANTIT	ľ	VALUE	CODE
WAF	=	15600.	0		WAIRC	=	360.	0
WAPU	=	0.	0		WAMMUN	=	1000.	ī
WARM	=	Ö.	Ō		WBAG	=	0.	ō
WBB1	=	0.	0		WBODY	=	6600.	Ď
WCAND	=	0.	Ō		WCARGO	=	0.	0
WCREW	=	360.	0		WE	=	7800.	0
WELT	=	2520.	Ō		WEP	=	840.	0
WETANK	=	0.	0		WFEQ	=	7200.	0
WFS	=	780.	0		WCA	=	840.	0
WGEAR	=	360.	Ó		WHDP	=	30.	0
WHT	=	1200.	0		WINST	=	180.	Ô
WLG	=	1800.	0		WMISS	=	0.	0
WNA	=	1440.	0		WPA	=	0.	Ô
WPASS	=	0.	0		WPL	=	14000.	1
WPS	=	8400.	0		WSC	=	1800.	Ō
WTSUM	=	60000.	0		WVT	=	540.	0
WWING	=	4800.	0		WBOMB	=	1848.	1
WENVP	=	0.	0		WPIV	=	0.	Ō
WLIFTF	=	Ō.	Ō		WBB2	=	o.	Ō
CALL	ING	MODULE NUM	BER	10				

#### INPUT VALUES TO NAVY MODULE

CLMAX = 1.80 SIGMA = 0.94449 VSOUND = 679.6 ALT = 0.

### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.54000E+05 CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2 WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48771E+05

SLOPE OF WCALC VS WEST LINE = 0.75000E+00

ESTIMATED GROSS WEIGHT = 0.37800E+05

CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2

CALLING MODULE NUMBER

CALCULATED GROSS WEIGHT = 0.44878E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.47117E+05

CALLING MODULE NUMBER 1

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.47118E+05

## \* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALLING MODULE NUMBER 1

```
**FINAL OUTPUT**
NASA/AMES A C S Y N T
                                                     NACELLE LOCATION
   FUSELAGE DEFINITION
                             NACELLE DEFINITION
                                                      X Y
32.00 5.25
                                                                        2
                           X-XNOSE
                                        R
                                              AREA
        R AREA
                         0.00
                                                      32.00
                                                                       0.00
         0.00
                                       2.18
                                              14.92
                   0.00
 0.00
                          2.72 2.18
8.17 2.18
10.89 2.18
                                                                       0.00
                   1.92
                                           14.92
                                                      32.00 -5.25
 1.07
                                            14.92
                   4.98
  2.13
         1.26
         1.63
                                             14.92
                   8.36
  3.20
                   11.69
  4.27
         1.93
         2.17
                   14.74
  5.33
                   17.36
  6.40
         2.35
  7.47
          2.49
                   19.43
         2.58
                   20.86
 8.53
         2.62
                   21.62
 9.60
         2.63
                   21.73
 10.67
 11.73
          2.63
                   21.73
 12.80
          2.63
                   21.73
          2.63
                   21.73
 13.87
                   21.73
 14.93
          2.63
 16.00
          2.63
                   21.73
          2.63
 17.07
                   21.73
                   21.73
 18.13
          2.63
 19.20
          2.63
                   21.73
          2.63
                   21.73
 20.27
                   21.73
 21.33
          2.63
                   21.73
 22.40
          2.63
          2.63
                   21.73
 23.47
 24.53
          2.63
                   21.73
 25.60
          2.63
                   21.67
                   21.53
 26.67
          2.62
 27.73
          2.60
                   21.30
          2.58
                   20.98
 28.80
                   20.58
 29.86
          2.56
 30.93
          2.53
                   20.09
                   19.52
 32.00
          2.49
 33.06
          2.45
                   18.87
          2.40
                   18.15
 34.13
          2.35
                   17.35
 35.20
 36.26
          2.29
                   16.49
                   15.55
          2.23
 37.33
                   14.57
 38.40
          2.15
          2.07
 39.46
                   13.52
          1.99
                   12.43
 40.53
 41.60
          1.90
                   11.30
          1.80
                   10.14
 42.66
                   8.95
 43.73
          1.69
 44.80
          1.57
                    7.75
          1.44
                   6.55
 45.86
 46.93
          1.31
                   5.36
                    4.21
          1.16
 48.00
 49.06
          0.99
                    3.10
          0.81
                   2.08
 50.13
                   1.16
          0.61
 51.20
                   0.42
 52.26
          0.37
          0.00
 53.33
                                        **PODS**
                   **FUSELAGE**
                                          4.359
MAX. DIAMETER..... 5.260
                                  . . . . .
                       10.139
FINENESS RATIO....
                                  ..... 149.095 (EACH)
SURFACE AREA..... 702.864
                     809.360
VOLUME.....
```

# NASA/AMES A C S Y N T \*\*FINAL OUTPUT\*\* DIMENSIONS OF PLANAR SURFACES

	WING	H.TAIL	V.TAIL	CANARD	UNITS
PLAN AREA SURFACE AREA. VOLUME. SPAN. L.E. SWEEP. C/4 SWEEP. T.E. SWEEP. ASPECT RATIO ROOT CHORD. ROOT THICKNESS. ROOT T/C TIP CHORD. TIP THICKNESS. TIP T/C TAPER RATIO MEAN AERO CHORD LE ROOT AT. C/4 ROOT AT. TE ROOT AT. LE M.A.C. AT. TE M.A.C. AT. Y M.A.C. AT. Y M.A.C. AT. LE TIP AT. C/4 TIP AT. TE TIP AT. TE TIP AT. TE LEVATION. VOLUME COEFF.	506.0 1012.4 464.5 57.526 0.000 -1.794 -7.140 6.540 10.598 20.347 0.160 6.994 10.911 0.130 0.660 8.919 22.416 25.065 33.013 22.416 24.645 31.335 13.400 22.416 24.164 24.164 29.410 -2.630	118.4 189.0 67.8 18.816 0.000 -0.096 -0.385 2.990 6.324 9.866 0.130 0.990 6.293 45.406 46.979 51.699 4.696 45.406 46.979 51.699 0.9000 0.900 0.900 0.900 0.900 0.900 0.900 0.900 0.900 0.9000 0.9	54.1 102.8 27.1 9.706 0.000 -3.982 -15.559 1.740 6.929 10.810 0.130 4.227 6.087 0.120 0.610 5.687 44.801 46.533 51.730 44.801 46.223 50.488 4.461 45.857 49.028 -2.367 0.040	0.0 0.0 0.00 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000 0.000	(IN.) (FT.) (IN.) (FT.) (FT.) (FT.)
EXTENS			Dan Pub	!	
Centroid location at Area	• • • • • • • • • • • • • • • • • • • •	rake F 0.000 0.000 0.000 0.000	Rear Exte 0.000 0.000 0.000 0.000	ension	
FUEL T	ANKS WEIGH		SITY		
WING 84. FUS#1 151. FUS#2 0. TOTAL	4103 7341 0 11443	. 48	3.62 3.62 3.00		
MISSION FUEL REQUIRE	D= 11	.443.			
AVAILABLE FUEL VOLUM	E IN WIN	IG=	444.		
AIRCRAFT WEIGHT = AIRCRAFT VOLUME = AIRCRAFT DENSITY = CASE= 4 CALLING MODULE N	34.42	32 Cu.Ft. 24 Lbs./0			

TRAJECTORY OUTPUT

MISSION	1	(PAYLOAD =	14000.	LB)
---------	---	------------	--------	-----

PHASE	M SFC(I) SFC(U)	H THRUST(I) THRUST(U)	CL CD CDINST	ALPHA GAMMA L/D	WFUEL W THR/THA	TIME WA PR	VEL Q X
CLIMB CYCLE	0.50 0.58 0.57	5000. 11233. 0.	0.2887 0.0259 0.0009	2.43 8.82 11.15	103.8 46668.0 2.00	0.92 307.73 1.00	551. 311. 5.
CRUISE CYCLE	0.50 0.84 0.81	6164. 3942. 4086.	0.2993 0.0262 0.0010	2.53 0.00 11.41	2413.8 44254.2 0.72	42.55 245.97 1.00	546. 297. 230.
CRUISE CYCLE	0.50 0.92 0.88	298. 4541. 4715.	0.2370 0.0245 0.0009	1.98 0.00 9.68	505.6 43748.7 0.72		558. 367. 40.
CYCLE	0.60 0.65 0.63	100. 11737. 12018.	0.6475 0.0435 0.0010	5.49 0.00 14.90	3793.9 37106.7 1.94		670. 531. 198.
CRUISE CYCLE	0.50 0.94 0.90	334. 4368. 4540.	0.1987 0.0236 0.0009	1.64 0.00 8.42	500.4 36606.3 0.69	7.26 297.13 1.00	558. 367. 40.
CLIMB	0.48 0.57 0.56	5000. 11354. 0.	0.2466 0.0248 0.0009	2.08 12.35 9.96	77.8 36528.5 2.00	0.70 303.76 1.00	525. 282. 3.
CRUISE CYCLE	0.50 0.88 0.85	6454. 3636. 3776.	0.2343 0.0244 0.0009	1.95 0.00 9.60	2345.1 34183.4 0.67	42.57 242.72 1.00	546. 295. 230.
LOITER	0.27 0.83 0.81	500. 2608. 2652.	0.6370 0.0486 0.0008	6.13 0.00 13.12	717.6 33465.8 0.36		301. 106. 59.

#### FUEL SUMMARIES

MISSION FUEL = 10803. RESERVE FUEL = 540. 540. TRAPPED FUEL = 100.

TOTAL FUEL = 11443.

TAKEOFF FUEL WFT01 = 120. WFTO2 = 225.

FUEL CARRIED :

EXTERNALLY = 0. INTERNALLY = 11443.

#### ADDITIONAL COMBAT PARAMETERS

	CONDITIONS	PS	NZ	TOOT	RADIUS	ALPHA	CL	CD
 0.60 100.	1 G FLIGHT SUSTAINED MAX. INST. COMBAT ENER	0.0 -199.0	4.00	10.68 19.07		5.49	0.647	0.0227 0.0435 0.0913

BLOCK TIME = 2.521 HOURS
BLOCK RANGE = 806.2 N. M.

TAKEOFF FIELD LENGTH (TOTAL RUN) = 2769. FEET
LANDING FIELD LENGTH (TOTAL RUN) = 5266. FEET
LANDING FIELD LENGTH (GROUND RUN) = 1740. FEET
WEIGHT FOR LANDING CALCULATION = 40651. POUNDS
LANDING THRUST TO WEIGHT RATIO = 0.472

TAKEOFF WEIGHT = 47117. POUNDS
LANDING WEIGHT = 33466. POUNDS
CALLING MODULE NUMBER 3

CALLING MODULE NUMBER 3 Detailed Aerodynamics Output

Mach = 0.20 Altitude = 0.

Parasite Drac	7	Induc	ed Drag							
Friction	.0162	Alpha	Cl	Cd	L/D	Cm	е (	Cdtrim D	eltrim Z	one
Body Wing Strakes H. Tail V. Tail Canard Pods	.0032 .0077 .0000 .0015 .0016 .0000	0.0 3.0 6.0 0.0 9.0 12.0 15.0	0.005 0.323 0.617 0.005 0.894 1.160 1.422	0.0263 0.0319 0.0474 0.0263 0.0715 0.1039 0.1449	0.2 10.1 13.0 0.2 12.5 11.2 9.8	0.048 007 062 0.048 119 177 238	0.00 0.91 0.88 0.00 0.86 0.84 0.83	0.0000 0.0000 0.0000 0.0000 0.0000 0.0000	0.0 0.0 0.0 0.0 0.0	2 2 2 2 2 2 2
Engine Cowl Boattail	.0000	18.0 21.0 24.0	1.685 1.953 2.218	0.1950 0.2555 0.3246	8.6 7.6 6.8	302 367 431	0.82 0.81 0.80	0.0000 0.0000 0.0000	0.0 0.0 0.0	2 2 2

.0043 External Slope Factors .0000 ClAlpha 0.0922 Tanks Cdl^.5Alpha 0.0228 Bombs .0000

```
.0000
 Stores
 Extra
              .0043
              .0000
Camber
               .0263
Cdmin
              0.30
Mach
Altitude =
                0.
                      Induced Drag
Parasite Drag
                                                           e Cdtrim Deltrim Zone
                                            L/D
                                                    Cm
Friction
              .0161
                      Alpha
                               Cl
                                       Cd
                        0.0 0.005 0.0262
                                             0.2 0.047
                                                          0.00 0.0000
              .0032
                                                          0.92 0.0000
                                                                             0.0 2
              .0076
 Wing
                        3.0
                            0.329
                                    0.0320
                                             10.3
                                                   -.012
              .0000
                            0.628
                                    0.0479
                                             13.1
                                                  -.070
                                                          0.89
                                                               0.0000
                                                                             0.0
                        6.0
 Strakes
                                                                             0.0
 H. Tail
V. Tail
                                              0.2 0.047
                                                          0.00
                                                               0.0000
                                    0.0262
              .0015
                        0.0
                            0.005
                                                                             0.0
              .0016
                             0.909
                                    0.0726
                                             12.5
                                                   -.129
                                                          0.87
                                                                0.0000
                        9.0
                                                   -.190
                             1.177
                                    0.1056
                                                                0.0000
                                                                             0.0
                                             11.1
                                                          0.85
 Canard
              .0000
                       12.0
                                                                0.0000
                                                                             0.0
                                                  -.253
                                                          0.83
              .0022
                       15.0
                            1.438
                                    0.1470
                                              9.8
 Pods
                       18.0 1.698
21.0 1.967
              .0000
                                    0.1973
                                              8.6
                                                  -.318
                                                          0.82
                                                                0.0000
                                                                             0.0
Engine
                                                                             0.0
                                    0.2583
                                                  -.385
                                                          0.81
                                                               0.0000
                                              7.6
              .0000
 Cowl
                                                                             0.0
              .0000
                       24.0 2.155
                                    0.9130
                                              2.4
                                                  -.517
                                                         0.25 0.0000
 Boattail
              .0058
Interference
               .0000
Wave
              .0043
                                          Slope Factors
External
                                                          0.0896
                                            ClAlpha
 Tanks
               .0000
 Bombs
               .0000
                                            Cd1^.5Alpha 0.0392
              .0000
 Stores
 Extra
               .0043
               .0000
Camber
               .0262
Detailed Aerodynamics Output
              0.60
Altitude =
             5000.
                       Induced Drag
Parasite Drag
              .0156
                      Alpha
                                       Cd
                                            L/D
                                                    Cm
                                                           e Cdtrim Deltrim Zone
                              C1
Friction
                        0.0 0.005
                                             0.2 0.047 0.00 0.0000
                                                                             0.0 2
                                    0.0214
 Body
              .0031
                        3.0 0.370
              .0074
                                    0.0284
                                             13.0
                                                  -.025
                                                          0.95
                                                               0.0000
                                                                             0.0
 Wing
                                    0.0474
                                                          0.92 0.0000
              .0000
                                                   -.095
                                                                             0.0
                        6.0 0.701
                                             14.8
 Strakes
 H. Tail
V. Tail
                                                                             0.0
                                                               0.0000
              .0014
                        0.0 0.005
                                     0.0214
                                              0.2
                                                   0.047
                                                          0.00
                                     0.0759
              .0016
                        9.0 1.003
                                             13.2
                                                   -.164
                                                          0.90
                                                               0.0000
                                                                             0.0
                                     0.2444
                                                          0.33
                                                   -.247
                                                                0.0000
                                                                             0.0
              .0000
                       12.0 1.236
                                              5.1
 Canard
                                                                             0.0
              .0021
                       15.0
                              1.447
                                     0.3612
                                              4.0
                                                   -.326
                                                          0.30
                                                                0.0000
 Pods
                       18.0 1.639
                                     0.5010
                                                   -.411
                                                          0.27
                                                                0.0000
                                                                             0.0
              .0000
                                              3.3
Engine
                                                               0.0000
                                                                             0.0
                                                                                  3
                                                   -.499
                                                          0.25
 Cowl
              .0000
                       21.0 1.805
                                     0.6610
                                              2.7
              .0000
                       24.0 1.936
                                     0.8336
                                              2.3
                                                   -.588
                                                          0.22
                                                                0.0000
                                                                             0.0
                                                                                  3
 Boattail
Interference
              .0058
               .0000
Wave
                                          Slope Factors
              .0000
External
                                                          0.0804
 Tanks
               .0000
                                             ClAlpha
              .0000
                                             Cd1^.5Alpha 0.0375
 Rombs
 Stores
              .0000
               .0000
 Extra
               .0000
Camber
               .0214
Cdmin
```

Mach =	: 0.70									
Altitude =	5000.									
Parasite D	rag	Induc	ed Drag							
Friction	.0154	Alpha	Cl	Cd	L/D	Cm	е (		Deltrim Zo	one
Body	.0031	0.0	0.005	0.0212	0.2	0.047	0.00	0.0000	0.0	2
Wing	.0073	3.0	0.397	0.0291	13.6	031	0.96	0.0000	0.0	2
Strakes	.0000	6.0	0.749	0.0503	14.9	106	0.94	0.0000	0.0	2
H. Tail	.0014	0.0	0.005	0.0212	0.2	0.047	0.00	0.0000	0.0	2
V. Tail	.0015	9.0	1.060	0.1647	6.4	189	0.38	0.0000	0.0	3
Canard	.0000	12.0	1.284	0.2608	4.9	267	0.33	0.0000	0.0	3
Pods	.0021	15.0	1.500	0.3840	3.9	350	0.30	0.0000	0.0	3
Engine	.0000	18.0	1.608	0.5556	2.9	402	0.24	0.0000	0.0	4
Cowl	.0000	21.0	1.701	0.6924	2.5	486	0.21	0.0000	0.0	4
Boattail	.0000	24.0	1.771	0.8377	2.1	572	0.19	0.0000	0.0	4
Interferen	ce .0058									
Wave	.0000									
External	.0000			S	lope F	actors				
Tanks	.0000				ClAlp	ha	0.073	6		
Bombs	.0000				Cdl^.	5Alpha	0.037	6		
Stores	.0000									
Extra	.0000									
Camber	.0000									
Cdmin	.0212									
CALLIN	IG MODULE N	UMBER	4							

#### ENGINE SUMMARY

```
ENGINE DIAMETER =
                         4.35 FEET
ENGINE LENGTH= 8.33 FEET
ENGINE WEIGHT= 1478.00 POUNDS
BYPASS RATIO = 6.23
NO OF ENGINES PER AC =
A/C DRAG REF AREA = 506.00 SQ FEET
INLET CAPTURE AREA PER ENG = 6.190 SQ FEET
        - PERCENT OF ENGINE CORRECTED AIRFLOW
THRUST = ENGINE THRUST (POUNDS PER ENGINE)

    ENGINE SPECIFIC FUEL CONSUMPTION
    ENGINE TOTAL AIRFLOW (LBS/SEC PER ENGINE)

SFC
WTOT
OV EF = ENGINE OVERALL EFFICIENCY
PR EF - ENGINE PROPULSIVE EFFICIENCY
         = INLET TOTAL PRESSURE RECOVERY (TO EN FACE)
TPR
         = NOZZLE PRESSURE RATIO
NPR
        = TURBINE INLET TEMPERATURE (DEG R)
= ENGINE EXHAUST GAS TEMPERATURE
= OVERALL COMPRESSOR PRESSURE RATIO
TIT
EGT
CPR
THRUSTU= THRUST PER ENGINE IN LBS, W/O INSTAL DRAG CORR
SFCU = SFC,1/HR, W/O INSTALLATION DRAG CORR
ABYAC = FREESTREAM BYPASS FLOW AREA/AC
ABLAC = FREESTREAM INLET BLEED FLOW AREA/AC
ANOZ = AREA OF NOZZLE EXIT, FT**2
BETA = NOZZLE BOATTAIL ANGLE IN DEGREES
AO/AC = FREE STREAM TO CAPTURE AREA RATIO
CDINS = TOT INSTALLATION DRAG COEF PER A/C (SWING REF)
CDADD = ADDITIVE DRAG COEF PER A/C (SWING REF)
        = SUBSONIC SPILL DRAG COEFF PER A/C (SWING REF)
CDSP
        = INLET BLEED DRAG COEF PER A/C (SWING REF)
CDBL
        = INLET BYPASS DRAG PER A/C (SWING REF)
CDBP
CDAUX = AUX AIR SYSTEM DRAG COEF PER A/C (SWING REF)
CDDIV = INLET BO. LAYER DIVERT DRAG PER A/C (SWING REF)
CDBT = NOZZLE BOATTAIL DRAG COEF PER A/C (SWING REF)
CDINF = DRAG COEF OF BASE AREA BETWEEN NOZZLES (PER A/C)
 INSTALL DRAG COEF SCALE FACTORS
SFINSP =
                 1.0000
SFADP =
                 1.0000
                 1.0000
SFADSP =
SFBEP =
                 1.0000
SFBPP =
                 1.0000
SFAUXP =
                 1.0000
SFDIVP =
                 1.0000
                1.0000
SFIP =
SFBTP =
                1.0000
```

MACH =	0.000	ALTITUDE =	0.00 FEET
--------	-------	------------	-----------

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF ABLAC	PR EF ANOZ	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0	9065. 9065.	0.364	290. 0.000	0.000	0.000 13.65	1.000 11.17	1.79	2697.	1540.	22.49
	1000.000						0.0000	0.0000	0.0004	0.0000
98.0	8298. 8298.	0.355	285. 0.000	0.000	0.000 13.65	1.000	1.84	2570.	1486.	21.51
	1000.000						0.0000	0.0000	0.0004	0.0000
96.0	7495. 7495.	0.348	279. 0.000	0.000	0.000 13.65	1.000	1.92	2447.	1441.	20.56
	1000.000						0.0000	0.0000	0.0004	0.0000
94.0	6619. 6619.	0.348	273. 0.000	0.000	0.000 13.65	1.000 13.59	2.05	2329.	1405.	19.64
	1000.000						0.0000	0.0000	0.0005	0.0000
92.0	5582. 5582.	0.362	267. 0.000	0.000	0.000 13.65	1.000 14.62	2.25	2214.	1380.	18.75
	1000.000						0.0000	0,0000	0.0005	0.0000
90.0	4076. 4076.	0.431	261. 0.000	0.000	0.000 13.65	1.000 15.69	2.54	2105.	1367.	17.88
	1000.000	0.0005			0.0000		0.0000	0.0000	0.0005	0.0000
88.0	2118. 2118.	0.717	256. 0.000	0.000	0.000 13.65	-1.000 16.01	2.52	1999.	1310.	17.04
	1000.000						0.0000	0.0000	0.0006	0.0000
86.0	1872. 1872.	0.694	250. 0.000	0.000	0.000 13.65	1.000 15.68	2.22	1898.	1218.	16.23
	1000.000						0.0000	0.0000	0.0005	0.0000
84.0	1624. 1624.	0.677	2 <b>44.</b> 0.000	0.000	0.000 13.65	1.000 15.20	1.95	1802.	1131.	15.44
	1000.000						0.0000	0.0000	0.0005	0.0000

- 82.0 1375. 0.668 238. 0.000 0.000 1.000 1.70 1709. 1049. 14.68 1375. 0.668 0.000 0.000 13.65 14.49 1000.000 0.0005 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0005 0.0000 0.0000 0.0000 0.0000 0.0005 0.0000 0.0000 0.0000 0.0000 0.0005 0.0000
- 76.0 458. 1.039 221. 0.000 0.000 1.000 1.09 1456. 828. 12.56 458. 1.039 0.000 0.000 13.65 5.40 1000.000 0.0002 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000

#### MACH = 0.500 ALTITUDE = 0.00 FEET

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF ABLAC	PR EF ANOZ	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0	6143. 6231.	0.594 0.586	336. 0.000	0.237	0.622 13.65	1.000	1.79	2697.	1479.	22.49
			0.0000				0.0000	0.0000	0.0005	0.0004
98.0	5867.	0.619	329.	0.228	0.588	1.000	2.20	2697.	1572.	21.51
	5956. 1.244	0.610	0.000	0.000	13.65 0.0000	11.79	0.0000	0.0000	0.0006	0.0003
96.0	5127.	0.630	323.	0.224	0.586	1.000	2.30	2570.	1526.	20.56
	5216. 1.219	0.619		0.000	13.65	12.55 0.0000	0.0000	0.0000	0.0007	0.0003
94.0	4349. 4439.	0.655 0.642	316. 0.000	0.216	0.571 13.65	1.000	2.46	2446.	1488.	19.64
		0.0010		0.0000			0.0000	0.0000	0.0007	0.0002
92.0	3509.	0.712	309.	0.200	0.533	1.000	2.70	2326.	1460.	18.75
	3599. 1.168	0.694 0.0010	0.000	0.000	13.65 0.0000	14.32	0.0000	0.0000	0.0008	0.0002
90.0	2546. 2637.	0.854 0.825	302. 0.000	0.168	0.451° 13.65	1.000	3.04	2211.	1445.	17.88
		0.0010		0.0000			0.0000	0.0000	0.0008	0.0002
88.0	1917.	0.981	296.	0.148	0.406	1.000	3.01	2100.	1384.	17.04
	2008.	0.936	0.000	0.000	13.65	15.63	0 0000	0.0000	0 0008	0 0001
	T * T T \	0.0010	0.0000	0.0000	0.0000	5.0000	0.0000	0.0000	0.0000	0.0001

86.0	1648. 1739.	0.977	289. 0.000	0.150	0.430 13.65	1.000	2.66	1994.	1288.	16.23
		0.0010		0.0000			0.0000	0.0000	0.0008	0.0002
٤4.0	1383.	0.986	282.	0.150	0.450	1 000	2 24	1000	1100	15 44
0.43	1474.				13.65	1.000 15.08	2.34	1892.	1196.	15.44
				0.0000			0.0000	0.0000	0.0008	0.0002
82.0	1118	1 020	276	0 147	0.493	1.000	2.04	1795.	1109.	14.68
02.0	1207.	0.944	0.000		13.65	14.59	2.04	1795.	1109.	14.00
	1.041			0.0000			0.0000	0.0000	0.0008	0.0002
80.0					0.533	1.000	1.77	1702.	1026.	13.95
	939.				13.65	13.88				
	1.016	0.0009	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0007	0.0002
78.0	57 <b>7</b> .	1.311	262.	0.121	0.581	1.000	1.52	1614.	949.	13.24
		1.145	0.000	0.000	13.65	12.76				
	0.990	0.0009	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0007	0.0002
76.0	000		0.5.5							
76.0	280. 354.	2.122	255. 0.000	0.083	0.621 13.65	1.000	1.30	1530.	876.	12.56
		0.0008					0.0000	0.0000	0 0006	0.0002
										-,0002

# MACH = 0.500 ALTITUDE = 5000.00 FEET

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF ABLAC	PR EF ANOZ	TPR BETA	NPR	TIT	EGT	CPR	
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF	
100.0	5370. 5443.	0.595 0.587	285. 0.000	0.232	0.596 13.65	1.000	2.03	2697.	1523.	22.49	
			0.0000		0.0000		0.0000	0.0000	0.0006	0.0004	
98.0	4865. 4939.	0.604 0.595	279. 0.000	0.229	0.590 13.65	1.000	2.18	2606.	1510.	21.51	
	1.245	0.0010	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0006	0.0003	
96.0	4246. 4320.	0.614	273. 0.000	0.226	0.588 13.65	1.000	2.28	2481.	1464.	20.56	
			0.0000				0.0000	0.0000	0.0007	0.0003	
94.0	3601. 3675.	0.639 0.626	268. 0.000	0.218	0.574° 13.65	1.000	2.44	2361.	1428.	19.64	
	1.194	0.0010	0.0000	0.0000	0.0000		0.0000	0.0000	0.0007	0.0002	

92.0					0.535 13.65	1.000	2.68	2245.	1403.	18.75
	2979. 1.168			0.0000			0.0000	0.0000	0.0008	0.0002
90.0	2104.	0.834	256. 0.000				3.02	2134.	1389.	17.88
	2180. 1.143			0.0000		0.0000	0.0000	0.0000	0.0008	0.0002
88.0				0.149		1.000	2.99	2027.	1331.	17.04
	1658. 1.118			0.0000	13.65 0.0000	15.61 0.0000	0.0000	0.0000	0.0008	0.0001
86.0		0.955			0.432		2.65	1925.	1238.	16.23
	1435. 1.092			0.000	13.65 0.0000	15.38 0.0000	0.0000	0.0000	0.0008	0.0002
84.0	1137. 1213.		239. 0.000	0.151		1.000 15.04	2.32	1827.	1149.	15.44
				0.0000		0.0000	0.0000	0.0000	0.0008	0.0002
82.0	918. 992.	1.000		0.147	0.495 13.65	1.000 14.55	2.03	1733.	1065.	14.68
				0.0000		0.0000	0.0000	0.0000	0.0008	0.0002
80.0	697. 769.	1.084	228. 0.000	0.139		1.000	1.76	1643.	986.	13.95
				0.0000		0.0000	0.0000	0.0000	0.0007	0.0002
78.0	467. 536.			0.120		1.000	1.51	1558.	911.	13.24
				0.0000		12.67 0.0000	0.0000	0.0000	0.0007	0.0002
76.0	218. 279.	2.186	216. 0.000	0.080	0.621 13.65	1.000 10.56	1.29	1477.	841.	12.56
		0.0008				0.0000	0.0000	0.0000	0.0006	0.0002

# MACH = 0.570 ALTITUDE = 5000.00 FEET

PWCC	THRUST THRUSTU	SFC SFCU		OV EF	PR EF	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC		CDADD		CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0					0.638 13.65		2.03	2697.	1506.	22.49
					0.0000		0.0000	0.0000	0.0006	0.0004

98.0	4833. 0.64 4937. 0.63 1.139 0.001		0.620 1.000 13.65 11.70 0.0000 0.0000		. 1536. 21.51 0 0.0007 0.0003
96.0	4311. 0.64	9 285. 0.242 3 0.000 0.000 0 0.0000 0.0000	13.65 12.43		. 1489. 20.56 0 0.0008 0.0003
94.0			0.599 1.000 13.65 13.26 0.0000 0.0000	-	. 1452. 19.64 0 0.0008 0.0002
92.0	2979. 0.72	7 273. 0.216 0 0.000 0.000 1 0.0000 0.0000	13.65 14.17		. 1426. 18.75 0 0.0009 0.0002
90.0	2105. 0.88 2209. 0.84 1.046 0.001	7 267. 0.184 5 0.000 0.000 0 0.0000 0.0000	13.65 15.15	3.18 2165 0.0000 0.000	. 1411. 17.88 0 0.0009 0.0002
88.0	1707. 0.94	8 261. 0.165 5 0.000 0.000 0 0.0000 0.0000	13.65 15.48		. 1352. 17.04 0 0.0009 0.0001
86.0	1366. 1.01 1476. 0.93 1.000 0.001	1 255. 0.166 6 0.000 0.000 1 0.0000 0.0000	13.65 15.27		. 1258. 16.23 0 0.0009 0.0002
84.0	1137. 1.02 1246. 0.93 0.976 0.001		0.482 1.000 13.65 14.96 0.0000 0.0000		. 1168. 15.44 0 0.0009 0.0002
82.0	912. 1.07 1019. 0.95	2 244. 0.162	0.511 1.000 13.65 14.52	2.14 1758	. 1083. 14.68
80.0	686. 1.17 791. 1.01	3 238. 0.153 7 0.000 0.000	0.543 1.000 13.65 13.88	1.85 1667	. 1002. 13.95
78.0	454. 1.42 555. 1.16	7 232. 0.133 7 0.000 0.000	0.573 1.000 13.65 12.87	1.59 1580	. 926. 13.24
76.0	209. 2.43 301. 1.68	5 226. 0.092 9 0.000 0.000	0.563 1.000 13.65 11.14	1.36 1498	. 855. 12.56
78.0	791. 1.01 0.930 0.001 454. 1.42 555. 1.16 0.907 0.001 209. 2.43 301. 1.68	7 0.000 0.000 7 232. 0.133 7 0.000 0.000 9 0.000 0.000 5 226. 0.092	13.65 13.88 0.0000 0.0000 0.573 1.000 13.65 12.87 0.0000 0.0000 0.563 1.000 13.65 11.14	0.0000 0.000 1.59 1580 0.0000 0.000 1.36 1498	0 0.0008 0.000 . 926. 13.2 0 0.0008 0.000

# MACH = 0.700 ALTITUDE = 5000.00 FEET

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF ABLAC	PR EF ANOZ	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0		0.698		0.284	0.699		2.03	2697.	1467.	22.49
	5204. 1.037		0.000	0.000	13.65 0.0000	9.53	0.0000	0.0000	0.0008	0.0005
98.0	4790.	0.727		0.274	0.662	1.000	2.49	2697.	1560.	21.51
	4989. 1.016	0.698	0.000	0.000	13.65 0.0000	11.31	0.0000	0.0000	0.0009	0.0004
96.0	4219. 4422.	0.750	312. 0.000	0.267	0.646 13.65	1.000	2.70	2595.	1543.	20.56
				0.0000			0.0000	0.0000	0.0010	0.0003
94.0	3555. 3763.	0.786	306. 0.000	0.257	0.624 13.65	1.000	2.88	2470.	1505.	19.64
				0.0000			0.0000	0.0000	0.0011	0.0003
92.0	2869. 3074.	0.854	299. 0.000	0.240	0.582 13.65	1.000	3.16	2349.	1477.	18.75
				0.0000			0.0000	0.0000	0.0011	0.0002
90.0	2136. 2329.	0.999 0.916	293. 0.000	0.208	0.505 13.65	1.000	3.56	2233.	1461.	17.88
				0.0000			0.0000	0.0000	0.0011	0.0002
88.0	1643. 1840.	1.123	286. 0.000	0.191	0.463 13.65	1.000	3.53	2121.	1400.	17.04
		0.0013					0.0000	0.0000	0.0011	0.0002
86.0	1375. 1589.	1.149	280. 0.000	0.192	0.475 13.65	1.000	3.12	2014.	1302.	16.23
				0.0000			0.0000	0.0000	0.0012	0.0002
84.0	1124.	1.190	273.	0.192	0.488 13.65	1.000	2.74	1911.	1209.	15.44
	1343. 0.871	0.996 0.0014	0.000			14.75	0.0000	0.0000	0.0012	0.0002
82.0	881.	1.270	267.	0.187	0.502	1.000	2.39	1813.	1121.	14.68
	1098. 0.850	1.019		0.000	13.65 0.0000	14.39	0.0000	0.0000	0.0012	0.0002

80.0					0.507 13.65		2.07	1719.	1038.	13.95
				0.0000			0.0000	0.0000	0.0012	0.0002
78.0					0.489		1.79	1630.	959.	13.24
					13.65 0.0000		0.0000	0.0000	0.0011	0.0003
76.0		3.705 1.650			0.370 13.65		1.53	1545.	886.	12.56
				0.0000			0.0000	0.0000	0.0010	0.0003
74.0	•	-4.310 6.361	241. 0.000		-1.471 13.65	1.000	1.30	1464.	817.	11.90
					0.0000		0.0000	0.0000	0.0008	0.0003

# MACH = 0.700 ALTITUDE = 10000.00 FEET

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF	PR EF ANOZ	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0	4386.	0.696	274.	0.279		1.000	2.30	2697.	1513.	22.49
	4547. 1.037	0.671	0.000	0.000	13.65	10.39	0.0000	0.0000	0.0009	0.0004
98.0	4005.			0.273		1.000	2.56	2628.	1526.	21.51
	4170. 1.017		0.000	0.000	13.65 0.0000	11.45	0.0000	0.0000	0.0010	0.0004
96.0	3468. 3636.	0.732 0.698	263. 0.000	0.269	0.648 13.65	1.000 12.16	2.68	2503.	1479.	20.56
		0.0013					0.0000	0.0000	0.0010	0.0003
94.0	2921. 3092.	0.767	258. 0.000	0.259	0.627 13.65	1.000	2.86	2381.	1442.	19.64
				0.0000			0.0000	0.0000	0.0011	0.0003
92.0	2355. 2525.	0.834		0.241	0.584 13.65	1.000 13.85	3.14	2265.	1416.	18.75
				0.0000	0.0000		0.0000	0.0000	0.0011	0.0002
						-				
90.0	1751. 1912.	0.977	247. 0.000	0.210	0.507 13.65	1.000	3.54	2153.	1402.	17.88
		0.0013					0.0000	0.0000	0.0011	0.0002

```
1344. 1.099 241. 0.192 0.464 1.000 3.51 2045. 1343. 17.04 1508. 0.979 0.000 0.000 13.65 15.14 0.913 0.0013 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0002
88.0
           1123. 1.125 236. 0.193 0.475 1.000
1301. 0.971 0.000 0.000 13.65 14.98
                                                                            3.10 1942. 1250. 16.23
86.0
           0.892 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0012 0.0002
           916. 1.168 230. 0.192 0.489 1.000 2.72 1843. 1160. 15.44 1097. 0.976 0.000 0.000 13.65 14.72 0.871 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0002
84.0
            717. 1.248 225. 0.188 0.502 1.000 896. 0.998 0.000 0.000 13.65 14.36
                                                                           2.37 1748. 1076. 14.68
82.0
            0.851 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0012 0.0002
           519. 1.417 219. 0.177 0.507 1.000 2.06 1658. 996. 13.95 696. 1.057 0.000 0.000 13.65 13.83 0.830 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0002
80.0
            321. 1.846 214. 0.156 0.486 1.000
492. 1.204 0.000 0.000 13.65 13.05
                                                                            1.77 1571.
                                                                                                 920. 13.24
78.0
            0.809 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0011 0.0003
            118. 3.934 208. 0.113 0.354 1.000
279. 1.664 0.000 0.000 13.65 11.78
                                                                            1.51 1489.
                                                                                                 850. 12.56
76.0
            0.788 0.0013 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0010 0.0003

    -98.
    -3.585
    203.
    0.023
    -2.361
    1.000

    42.
    8.302
    0.000
    0.000
    13.65
    9.42

                                                                                                 783. 11.90
                                                                            1.28 1411.
74.0
            0.768 0.0011 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0008 0.0003
```

SEA-LEVEL STATIC THRUST = 9065. (MAX) SEA-LEVEL SFC = 0.364

CALLING MODULE NUMBER 6

WEIGHT STATEMENT - BOMBERS \*\*\* WEIGHTS DATA \*\*\* ACSYNT MODULE NUMBER 6

COMPONENT	POUNDS	KILOGRAMS	PERCENT
AIRFRAME STRUCTURE	12921.	5861.	27.42
WING	5212.	2364.	11.06
FUSELAGE	4454.	2020.	9.45
FUSELAGE HORIZONTAL TAIL	457.	207.	
VERTICAL TAIL	436.	198.	0.93
NACELLES	805.	365.	1.71
ALIGHTING GEAR	1556.	706.	3.30
PROPULSION	3577.	1623.	7.59
ENGINES (2)	3169.	1438.	6.73
PROPULSION ENGINES (2) FUEL SYSTEM	408.	185.	0.87
FIXED EQUIPMENT		2349.	
HYD. + PNEU.	297.	135.	0.63
ELECTRICAL	693.	314.	1.47
AVIONICS	1602.	727.	3.40
INSTRUMENTATION	170.	//.	0.36
DE-ICE/AIR CONDITION	377.	171.	0.80
AUXILIARY GEAR	165.	75.	0.35
FURNISH. + EQPT.	465.	211.	0.99
AUXILIARY GEAR FURNISH. + EQPT. FLIGHT CONTROLS	1411.	640.	3.00
FUEL	11443.	5191.	24.28
PAYLOAD	14000.	6350.	29.71
FLIGHT CREW ( 1)	240.	109.	0.51
ARMAMENT	0.	0.	0.00
	1000.	454.	2.12
MISSILES	0.	0.	0.00
BOMBS	1848.	838.	3.92
EXTERNAL TANKS	0.	0.	0.00
ADV. WEAPONS 1	0.	0.	0.00
EXTERNAL TANKS ADV. WEAPONS 1 ADV. WEAPONS 2	0.	0.	0.00
CALCULATED WEIGHT	47121.	21374.	100.00
ESTIMATED WEIGHT	47117.	21372.	
PERCENT ERROR	0.01		

CALLING MODULE NUMBER 10

#### FINAL VALUES OF NAVY MODULE VARIABLES

#### CATAPULT TAKEOFF CALCULATIONS,

TAKEOFF GROSS WEIGHT = 47117. LBS CATAPULT ENDSPEED =160.4 KNOTS LIFTOFF ENDSPEED =162.5 KNOTS TAKEOFF STALL SPEED = 96.1 KNOTS MINIMUM WIND OVER DECK =-56.7 KNOTS TAKEOFF ACCELERATION =0.269 G"S TAKEOFF CL =2.832 TAKEOFF CD =0.279 ENGINE OUT CLIMB SPEED = -586.9 FT PER MIN TAKEOFF FUEL WEIGHT =11443. LBS TAKEOFF AOA =11.58 DEGS

# ARRESTED LANDING CALCULATIONS

CARRIER LANDING WEIGHT =36486. LBS APPROACH STALL SPEED = 84.6 KNOTS MINIMUM APPROACH SPEED =101.5 KNOTS CABLE ENGAGING SPEED =145.0 KNOTS MINIMUM WIND OVER DECK =-33.3 KNOTS LANDING CL =3.345 LANDING CD =0.406 LANDING RESERVE FUEL = 2660. LBS ENGINE OUT CLIMB SPEED = 646.8 FT PER MIN LANDING AOA =11.78 DEGS

#### OTHER CALCULATIONS

OPERATING EMPTY WEIGHT =22164. LBS FOLDED TAIL HEIGHT = 11.5 FEET NERROR = 0

### SUMMARY --- ACSYNT OUTPUT --- NASA, AMES RESEARCH CENTER

### A-10 THUNDERBOLT

GENERAL	FUSELAGE		WING	HTAIL	VTAIL
WG 47121.	LENGTH 53.3	AREA	506.0	118.4	54.1
W/S 93.1	DIAMETER 5.3	WETTED AREA	1012.4	189.0	102.8
T/W 0.38	VOLUME 809.4	SPAN	57.5	18.8	9.7
N(Z) ULT 11.3	WETTED AREA 702.9	L.E. SWEEP	0.0	0.0	4.0
CREW 1.	FINENESS RATIO 10.1	C/4 SWEEP	-1.8	-0.1	-4.0
PASENGERS 0.		ASPECT RATIO	6.54	2.99	1.74
		TAPER RATIO	0.66	0.99	0.61
engine	WEIGHTS	T/C ROOT	0.16	0.13	0.13
		T/C TIP	0.13	0.13	0.12
NUMBER 2.	W WG	ROOT CHORD	10.6	6.3	6.9
LENGTH 8.3	STRUCT. 12921. 27.4	TIP CHORD	7.0	6.3	4.2
DIAM. 3.8	PROPUL. 3577. 7.6	M.A. CHORD	8.9	6.3	5.7
WEIGHT 1478.0 TSLS 9065. SFCSLS 0.36	FIX. EQ. 5179. 11.0 FUEL 11443. 24.3 PAYLOAD 14000. 29.7	LOC. OF L.E.	22.4	45.4	44.8

#### MISSION SUMMARY

PHASE	MACH	ALT	FUEL	TIME	DIST	L/D	THRUST	SFC	Q
TAKEOFF CLIMB CRUISE CRUISE COMBAT CRUISE CLIMB CRUISE LOITER	0.00 0.50 0.50 0.50 0.60 0.50 0.48 0.50	0. 5000. 6164. 298. 100. 334. 5000. 6454.	345. 104. 2414. 506. 3794. 500. 78. 2345.	7.0 0.9 42.5 7.3 30.0 7.3 0.7 42.6	2769.5 4.9 230.0 40.0 198.4 40.0 3.5 230.0	11.15 11.41 9.68 14.90 8.42 9.96 9.60	11232.9 3942.4 4541.1 11737.4 4368.0 11354.1 3636.0	0.580 0.841 0.915 0.646 0.940 0.569 0.880	310.6 297.4 366.9 531.4 366.5 282.5 294.8
LANDING	0.27	500.	718.	20.0	59.4 5266.4	13.12	2608.0	0.825	106.1

BLOCK TIME = 2.521 HR BLOCK RANGE = 806.2 NM

# COMBAT PHASES

MACH ALT PSIG NZS CLS CDS ALS NZI PSI CLI CDI ALI CBE 0.60 100. 86. 4.0 0.647 0.0435 5.5 7.0 -199. 1.131 0.0913 10.3155192.

XI. EXAMPLE TWO

INTRODUCTION

This example will use the A-10 design developed in the previous example,

only a Sensitivity Study will now be performed on it. In particular, the effect

that the wing taper and overall compressor pressure ratio have on the aircraft

gross weight will be examined. No changes to the aircraft data file other than

the Analysis Method will be made. It is assumed that the data file was

updated after Example 1 was performed so that the design is now "converged".

B. SENSITIVITY INPUTS

After a decision is made concerning the goals of the analysis, the Global

Numbers for the variables must be determined and the desired range for the

Sensitivity Variables should be set. The following information comes from

Tables 1, 4 and 5:

• Sensitivity Objective: Total Aircraft Weight

Global Number: 585

• Sensitivity Variable #1: Wing Taper Ratio

Global Number: 514

Range: 0.1 - 0.99

• Sensitivity Variable #2: Overall Compressor Press. Ratio

Global Number: 337

Range: 16.0 - 25.0

110

With the information in hand, start CREATE and complete the following steps:


- Start CREATE and open the "A10" data file.
- Select (1), Change Analysis Method
- Select (3), Sensitivity
- Enter a project title of "A-10 Sensitivity Study"
- One Sensitivity Objective
- Sensitivity Objective Global Number: 585
- Two Sensitivity Variables
- Sensitivity Variable #1: 514
- Upper Bound: 0.99
- Lower Bound: 0.1
- Sensitivity Variable #2: 337
- Upper Bound: 25.0
- Lower Bound: 16.0
- Aircraft (3), Bomber
- No change to the Module selection.
- No further changes. Complete CREATE to the end.

Now run ACSYNT again. This analysis will take about 18 minutes.

The design is re-converged for each of the 14 variable values (seven values for

each Sensitivity Variable). The output from this study is on the following pages. The first part (pages 114 - 131) is similar to the Simple Analysis and is just to show the initial values. The convergence information starts on page 121.

The results of the Sensitivity Study starts on page 131. The taper ratio is examined first and is in the "X" column, with the corresponding gross weights in the F(X) column. Due to a bug in ACSYNT, the initial values (in this case for taper = 0.5) are not printed, so the first indicated value is 0.58. It is apparent that the gross weight declines slightly as the taper ratio increases (Fig 5). The compressor pressure ratio clearly has a greater impact on the gross weight (Fig 6), brought about by fuel savings. These results are shown graphically on the following page.

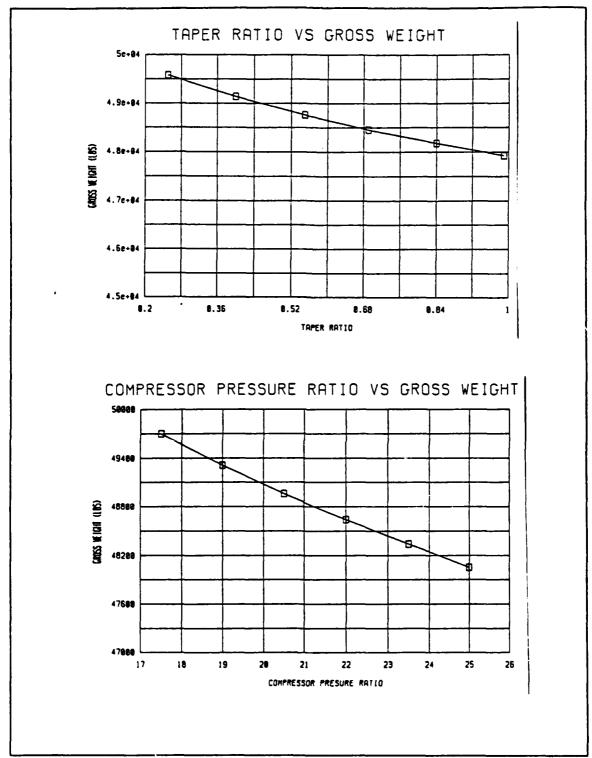

6. Sensitivity Study Results

AAAI	AAAA	CCCCCC	SSSSSS	Y	Y	N		N	TTTTTTT
A	A	С	S	Y	Y	NN		N	T
A	A	С	S	Y	Y	N P	1	N	T
AAA	AAAA	С	SSSSSS		ľ	N	N	N	T
A	A	С	S	3	Y	N	N	N	T
A	A	Ċ	S	3	Y	N	1	M	T
A	A	CCCCCC	SSSSSS	3	Y	N		N	T

NASA-AMES PROGRAM

FOR

AIRCRAFT SYNTHESIS

NAVAL POSTGRADUATE SCHOOL VERSION

TITLE

A-10 SENSITIVITY STUDY

AIRCRAFT TYPE - BOMBER

# TITLE: A-10 SENSITIVITY STUDY

#### AIRCRAFT TYPE - BOMBER

CONTROL PARAMETERS: MREAD = MEXEC = A READ CONTROL, EXECUTION CONTROL, MWRITE = 6 WRITE CONTROL, NUMBER IDENTIFYING CONVERGENCE VARIABLE FOR CONVERGED VEHICLE, IOBJ = 570 NUMBER IDENTIFYING COMPARISON VARIABLE FOR CONVENGENCE
SUMMARY OUTPUT PRINT CODE, IPSUM =
RGLOBP =
TAILTY = VARIABLE FOR CONVERGED VEHICLE, JOBJ = 585
UMMARY OUTPUT PRINT CODE, IPSUM = 1 0 GLOBAL COMMON INITIALIZATION CODE, INIT = DEBUG PRINT CODE, IPDBG = 0 ī GLOBAL PLOT CONTROL, IGPLT = DATA TRANSFER INFORMATION FILE, IRDDTR = DATA TRANSFER INFORMATION PRINT, IPDTR =

VEHICLE CONVERGENCE INFORMATION:
CONVERGENCE TOLERANCE, TOL = 0.10000E-03
ESTIM WCALC VS WEXT SLOPE = 0.75000E+00
BOUNDING WEIGHT, WGMAX = 0.60000E+05

#### MODULE IDENTIFICATION NUMBERS:

NUMBER	MODULE
1	GEOMETRY
2	TRAJECTORY
3	<b>AERODYNAMICS</b>
4	PROPULSION
5	STABILITY AND CONTROL
6	WEIGHTS
8	GLOBAL I/O
10	NAVY
11	SUMMARY OUTPUT
14	TAKEOFF AND LANDING

```
GEOMETRY DATA CARDS
 1*** GEOMETRY DATA ***
 2 SWING
       AR= 6.54,
                      AREA= 506.00, DIHED= 7.00,
LFLAPC=0.12, SWEEP= 0.00,
 3
       FDENWG= 48.62, LFLAPC=0.12,
       SWFACT=0.99,
                                      TCROOT=0.16,
 5
                      TAPER=0.66.
                      TFLAPC=0.35,
                                      WFFRAC=0.19,
 6
       TCTIP=0.13,
       XWING=0.47,
                      ZROOT=-1.00,
                                      KSWEEP=0,
       OUTCOD=2,
 8
 9
       $END
10
   SHTAIL
       AR= 2.99,
                      AREA= 118.40, CVHT=1.00,
11
12
       HTFRAC=0.234, SWEEP= 0.00,
                                      SWFACT=1.10,
                      TCROOT=0.13,
       TAPER=0.99,
                                      TCTIP=0.13,
13
14
       XHTAIL-0.97,
                      ZROOT=0.00,
                                      KSWEEP=0.
15
       OUTCOD=2,
                      SIZIT=F,
16
       $END
17 $VTAIL
       AR= 1.74,
18
                      AREA= 54.10, CVVT=0.10,
       SWEEP= 0.00,
                      SWFACT=1.10,
19
                                      TAPER=0.61
       TCROOT=0.13,
                      TCTIP=0.12,
20
                                      VTFRAC=0.107,
                                      YROOT=0.00,
21
       VTNO=2.0,
                      XVTAIL=0.97,
22
       ZROOT=-.90,
                      KSWEEP=0,
                                      OUTCOD=2,
       SIZIT=F,
23
24
       $END
25 $FPOD
       DIAM- 4.88,
THETA- 0.00,
26
                      LENGTH= 10.89, SOD= 0.20,
27
                      X=0.6,
                                      OUTCOD=2,
       SYMCOD=0,
28
29
       $END
30 $FUS
       BDMAX= 5.26,
                                      DRADAR= 0.00,
31
                      BODL= 53.33,
       FRAB= 5.50,
                      FRATIO= 0.00,
32
                     FRATIO- 1.00,
                                      FRN= 1.94,
       LRADAR= 0.00,
33
                                      WALL- 0.00,
       WFUEL= 11443.0, OUTCOD=2,
34
                                      ITAIL=1,
35
       SEND
36 SCREW
       LENGTH= 0.00, WIDTH= 0.00, NCREW= 1,
37
       OUTCOD=2,
                      TAND-T.
38
39
       SEND
40 SFUEL
       DEN=48.62,
                      FRAC=1.00,
41
                                      WFUEL-
                                                  0.0,
       OUTCOD=2,
42
43
       SEND
END OF GEOMETRY DATA CARDS
  43 CARDS READ
CREW SEATING REQUIREMENTS
 NUMBER OF CREW.....
                                  1.0
 TANDEM SEATING.....
                                   T
                                  0.0
 CREW LENGTH REQUIRED.....
 CREW WIDTH REQUIRED.....
                                  3.5
```

```
ACSYNT
                              **INITIAL OUTPUT**
NASA/AMES
   FUSELAGE DEFINITION
                    AREA
           R
    X
          0.00
  0.00
                    0.00
  1.07
          0.78
                    1.92
                    4.98
  2.13
          1.26
  3.20
          1.63
                    8.36
  4.27
          1.93
                   11.69
  5.33
          2.17
                   14.74
  6.40
          2.35
                   17.36
          2.49
                   19.43
  7.47
  8.53
          2.58
                   20.86
  9.60
          2.62
                   21.62
 10.67
                   21.73
          2.63
 11.73
          2.63
                   21.73
 12.80
          2.63
                   21.73
 13.87
          2.63
                   21.73
 14.93
          2.63
                   21.73
                   21.73
 16.00
          2.63
 17.07
          2.63
                   21.73
 18.13
          2.63
                   21.73
 19.20
          2.63
                   21.73
 20.27
          2.63
                   21.73
 21.33
          2.63
                   21.73
 22.40
          2.63
                   21.73
 23.47
          2.63
                   21.73
 24.53
                   21.73
          2.63
 25.60
          2.63
                   21.67
 26.67
          2.62
                   21.53
 27.73
          2.60
                   21.30
 28.80
          2.58
                   20.98
                   20.58
 29.86
          2.56
 30.93
          2.53
                   20.09
 32.00
          2.49
                   19.52
          2.45
                   18.87
 33.06
 34.13
          2.40
                   18.15
 35.20
                   17.35
          2.35
 36.26
          2.29
                   16.49
 37.33
          2.23
                   15.55
 38.40
          2.15
                   14.57
 39.46
          2.07
                   13.52
 40.53
          1.99
                   12.43
 41.60
          1.90
                   11.30
 42.66
          1.80
                   10.14
 43.73
          1.69
                    8.95
 44.80
          1.57
                    7.75
 45.86
          1.44
                    6.55
 46.93
          1.31
                    5.36
 48.00
          1.16
                    4.21
 49.06
          0.99
                    3.10
 50.13
          0.81
                    2.08
 51.20
          0.61
                    1.16
          0.37
 52.26
                    0.42
 53.33
          0.00
                    0.00
                   **FUSELAGE**
MAX. DIAMETER.....
                        5.260
FINENESS RATIO....
                       10.139
SURFACE AREA.....
                      702.864
VOLUME.....
                      809.360
```

# NASA/AMES A C S Y N T \*\*INITIAL OUTPUT\*\* DIMENSIONS OF PLANAR SURFACES

	WING	H.TAIL	V.TAIL	CANARD	UNITS
PLAN AREA	506.0	118.4	54.1	0.0	(SQ.FT.)
SURFACE AREA	1012.4	189.0	102.7	0.0	(SQ.FT.)
VOLUME	464.5	67.8	27.1	0.0	(CU.FT.)
SPAN	57.526	18.815	9.702	0.000	(FT.)
L.E. SWEEP	0.000	0.000	0.000	0.000	(DEG.)
C/4 SWEEP	-1.794	-0.096	-3.982	0.000	(DEG.)
T.E. SWEEP	-7.140	-0.385	-15.559	0.000	(DEG.)
ASPECT RATIO	6.540	2.990	1.740	0.000	
ROOT CHORD	10.598	6.324	6.927	0.000	(FT.)
ROOT THICKNESS	20.347	9.866	10.806	0.000	(IN.)
ROOT T/C	0.160	0.130	0.130	0.000	
TIP CHORD	6.994	6.261	4.225	0.000	(FT.)
TIP THICKNESS	10.911	9.767	6.084	0.000	(IN.)
TIP T/C	0.130	0.130	0.120	0.000	
TAPER RATIO	0.660	0.990		0.000	
MEAN AERO CHORD	8.919	6.293	5.685	0.000	
LE ROOT AT	22.416	45.406	44.803	0.000	(FT.)
C/4 ROOT AT	25.065	46.987	46.535	0.000	(FT.)
TE ROOT AT	33.013	51.730	51.730	0.000	(FT.)
LE M.A.C. AT	22.416	45.406	44.803	0.000	(FT.)
C/4 M.A.C. AT	24.645	46.979	46.225	0.000	• •
TE M.A.C. AT	31.335	51.699	50.488	0.000	(FT.)
Y M.A.C. AT	13.400	4.696	4.459	0.000	
LE TIP AT	22.416	45.406		0.000	<b>,</b>
C/4 TIP AT	24.164	46.971	45.860	0.000	(FT.)
TE TIP AT	29.410	51.667	49.029	0.000	
ELEVATION	-2.630	0.000	-2.367	0.000	(FT.)
VOLUME COEFF		0.586	0.040	0.000	
EXTENS			Rear Exte	neion	
Controld location at			0 000		

	Strake	Rear	Extension
Centroid location at	. 0.000	0.	.000
Area	. 0.000	0.	.000
Wetted Area	0.000	0.	.000
Volume		0.	.000
Sweep Angle		)	

TANK	FUEL T	anks Weight	DENSITY
WING	84.	4103.	48.62
FUS#1	0.	0.	48.62
FUS#2	0.	0.	50.00
TOTAL		4103.	

MISSION FUEL REQUIRED= 0.

AVAILABLE FUEL VOLUME IN WING-444.

AIRCRAFT WEIGHT = 0.000 Lbs.
AIRCRAFT VOLUME = 1368.697 Cu.Ft.
AIRCRAFT DENSITY = 0.000 Lbs./Cu.Ft. CASE- 4

CALLING MODULE NUMBER 2

### TRAJECTORY INPUT

TIMT01 = 5.0	MENDUR = 0.	NCRUSE = 4	IPLOT =	0
TIMTO2 = 2.0	QMAX = 700.	IPSIZE =-3	HMINP =	Ο.
FRFURE = 0.05	XDESC = 80.0	IPSTO1 = 5	HMAXP =	40000.
DESLF =, 7.00	WRFUEL = 1.000	IPSTO2 = 2	DELHP =	4000.
ULTLF =11.25	CRMACH = 0.450	IBREG = 0	SMMINP =	0.300
<b>RANGE = 1000.</b>	WKLAND = 0.570	IENDUR = 0	SMMAXP =	0.900
WFUEL = 11130.	FLFAC = 0.600	IPRINT = 0	DELMP =	0.100
WFEXT = 0.	DECEL = 0.250	KERROR = 2	WCOMBP =	0.50
WFTRAP = 100.	NLEGCL = 0	NLEGCR = 0	NLEGLO =	0
FWGMAX = 1.200	TOL = 0.001	MILCOM = 0	NMISS =	1
			NCODE =	0

MMPROP = 1

#### MISSION 1

PHASE	MACH NO. START END	ALTITUDE START END	HORIZONTAL DIST TIME	NO. VIND TURN "G"S	WKFUEL M	IP IX W B A P
CLIMB	0.00 0.00	100 5000	0.0 0.0	0.0 0.0	1.0000 1	2 0 0 0 0 0
CRUISE	0.50 0.50	5000 -1	230.0 44.0	0.0 0.0	1.0000 1	4 0 0 0 0 0
CRUISE	0.50 0.50	100 -1	40.0 8.0	0.0 0.0	1.0000 1	4 0 0 0 0 0
COMBAT	0.60 0.60	100 -1	0.0 30.0	0.0 5.0	1.0000 1	3 0 0 1 1 0
CRUISE	0.50 0.50	100 -1	40.0 8.0	0.0 0.0	1.0000 1	4 0 0 0 0 0
CLIMB	0.00 0.00	100 5000	0.0 0.0	0.0 0.0	1.0000 1	2 0 0 0 0 0
CRUISE	0.50 0.50	5000 -1	230.0 44.0	0.0 0.0	1.0000 1	4 0 0 0 0 0
LOITER	0.27 0.27	500 -1	10.0 20.0	0.0 0.0	1.0000 1	4 0 0 0 0 0

CALLING MODULE NUMBER 3
CALLING MODULE NUMBER 4

### PROPULSION INPUT VERSION 04-76

# \*\*\* PROPULSION DATA \*\*\*

AENDIA =	4.350	aenle =	8.330	aenwt -	24.0.000		
ALTI =	0.000	AM =	0.000	ATURB •	0.385		
Aentw =	0.000						
AUAENG =	0.000	AWAENG =	0.157	BA -	0.250		
DELPR =	0.000	DELT57 =	100.000	DEPWCC =			
DIA1 -	3.860	EAB1 =	0.750	EB1 =			
ED1 =	0.750	ETAC1 =	0.800	ETAF1 =			
ETAT1 =	0.920	HTR =	0.550	_	18600.000		
MACH1 =	1.000	MACH2 =	1.100	PCDFAC =			
POSA =	29.920	PRFD =	1.510	PWCC -			
P11P1 =	1.396	P2P1 =	21.000	R10A =			
R32 =	0.970	R54 =	0.920	R54N =			
R711 =	0.980	R711N =	0.820	SCPR =			
SFADP =	1.000	SFADSP =	1.000	SFAUXP =	2.000		
SFBEP -	1.000	SFBPP =	1.000	SFBTP -			
SPDIVP =	1.000	SFINSP =	1.000	SFIP =			
SFSFC1 =	1.000	SFSFC2 -	1.000	SFSFC3 =			
SM1 -	0.500	SODG =	2.000	TOSA -			
TR =	520.000	TWAB =	25100.	TWOAB =			
TWTO =	0.500	T3 =	2697.	T5M =			
T51 =	0.	T7M =	3400.	T71 =	• •		
VC1 =	0.980	WCWA1 =	0.000	XMDES -			
XMT = FRPN =	0.850	YREN = RDIAM =	75.	FRBT =	0.000		
FRPN -	0.000	RDIAM =	1.150	RLENG =	1.307		
IPR =	3	IPRINT =	0	IPLOT =	• 0		
Kerror =	0	Kode =	2	KT5 =	• 0		
KT7 =	0	MINPR -	1	NAB =	•		
Nozz =	0	NPROP =	6	nsumm =			
				ieng =	2	(TF30)	
THESE VAR		USED BY TA					
est -	1.000	RDIAIL -	O IPDBUG	. = 0 11	PRINT = 0		
ALTD =	0.	0.	5000.	5000.	5000.	10000.	
XMACH =	0.000	0.500	0.500	0.570	0.700	0.700	
XMPRI =	0.000	0.300	0.600	0.900	1.200	4.000	
XPRI =	1.000	1.000	1.000	1.000	1.000	1.000	
XMPRI1 =	0.000	0.000	0.000	0.000	0.000	0.000	0.000
	0.000	0.000	0.000				
XPRI1 =	0.000	0.000	0.000	0.000	0.000	0.000	0.000
	0.000	0.000	0.000				
XMPRI2 =	0.000	0.000	0.000	0.000	0.000	0.000	0.000
	0.000	0.000	0.000				
XPRI2 =	0.000	0.000	0.000	0.000	0.000	0.000	0.000
	0.000	0.000	0.000				
CALLIN	G MODULE N	UMBER 6		••			

# INITIAL WEIGHTS INPUT DATA ACSYNT MODULE NUMBER 6

AIRCRAFT TYPE: BOMBER
TITLE: \*\*\* WEIGHTS DATA \*\*\*

#### CONTROL OPTIONS

IPRINT	=	1	<b>IGRAPH</b>	=	1	ITAIL	=	0	KERROR	#	0	
IDELT	=	0	IOBLIQ	=	0	KWING	=	3	KBODY	=	1	
K1	=	1.00	K2	=	1.00	K3	-	1.0	K4	=	1.0	
K5	=	1.00	K6	=	1.00	AFMACH	=	0.70	MAXIT	-	1	
KB	-	0.00	KP1	-	0.00	KP2	=	0.00				
FR	=	1.00	TECHG	=	1.00	WGTO	=	4	7121.			
STRESS	=	30	0000.			DENS	=	0.0	56	FLI	FTF =0	.000
TECHI	=	1.00	1.00	1	1.00	1.00	1.0	00 1	.00 1.	00	1.00	1.00
SLOPE(1)	=	1.10	1.20	1	1.20	1.00	2.0	2 0	.90 0.	90	1.00	
SLOPE (9)	-	1.30	1.00	1	1.00	1.00	1.0	00 1	.00 1.	00	1.37	1.00

#### INITIAL ESTIMATES

IF CODE = 1, WEIGHT IS FIXED

QUANTIT	ľ	VALUE	CODE	YTITMAUQ	VALUE	CODE
WAF	_	12251.	0	WAIRC -	283.	0
WAPU	=	0.	0	WAMMUN =	1000.	1
WARM	-	0.	0	WBAG =	0.	0
WBB1	-	0.	0	WBODY =	5183.	0
WCAND	=	0.	0	WCARGO =	0.	0
WCREW	=	283.	0	WE =	6126.	0
WELT	_	1979.	0	WEP -	660.	0
WETANK	=	0.	0	WFEQ =	5655.	0
WFS	-	613.	0	WCA =	660.	0
WGEAR	_	283.	0	WHDP =	24.	0
WHT	=	942.	Ö	WINST =	141.	Ö
WLG	=	1414.	Ó	WMISS =	0.	Ó
WNA	-	1131.	Ö	WPA =	0.	Ō
WPASS	=	0.	0	WPL =	14000.	1
WPS	-	6597.	Ö	WSC =	1414.	ō
WTSUM	-	47121.	Ö	WVT =	424.	Ō
WWING	-	3770.	Ō	WBOMB =	1848.	1
WENVP	_	0.	Õ	WPIV =	0.	ō
WLIFTF	_	o.	ŏ	WBB2 =	Ŏ.	ŏ
CALL	ING	MODULE NUM	BER 1	0		

### INPUT VALUES TO NAVY MODULE

CLMAX = 1.80 SIGMA = 0.94449 VSOUND = 679.6 ALT = 0.

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.47121E+05 CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2 WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49355E+05

SLOPE OF WCALC VS WEST LINE = 0.75000E+00

ESTIMATED GROSS WEIGHT = 0.56058E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.51610E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.50109E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.50120E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.50124E+05

CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.50122E+05

# \* \* \* END VEHICLE CONVERGENCE

# 3 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

#### INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.50124E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49715E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.48759E+05 CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2
WARNING: Combat load factor reduced from input value of 5.000000
CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49380E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.49581E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49582E+05

#### \* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.49581E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49244E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.48457E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48972E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.49137E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49137E+05

#### \* \* \* END VEHICLE CONVERGENCE

# 2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

#### INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.49137E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48852E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.48187E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48624E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.48762E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48762E+05

#### \* \* \* END VEHICLE CONVERGENCE

# 2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

#### INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.48762E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48532E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT - 0.47996E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48350E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.48461E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48460E+05

#### \* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.48461E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48246E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.47744E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48078E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.48180E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48179E+05

### \* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.48180E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.47989E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.47544E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2
WARNING: Combat load factor reduced from input value of 5.000000
CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.47843E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.47932E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.47933E+05

#### \* \* \* END VEHICLE CONVERGENCE

# 2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.47932E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49262E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.52366E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.50361E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.49700E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49699E+05

#### \* \* \* END VEHICLE CONVERGENCE

#### 2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

#### INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.49700E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49409E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.48729E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER

CALCULATED GROSS WEIGHT = 0.49164E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.49311E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49312E+05

#### \* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.49311E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49049E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.48438E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48832E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.48962E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48960E+05

#### \* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.48962E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48720E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.48156E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48517E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.486391+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48638E+05

#### \* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.48639E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48411E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.47879E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48223E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.48336E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48336E+05

\* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.48336E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48118E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.47608E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.47937E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.48045E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.48047E+05

# \* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### STANDARD SENSITIVITY ANALYSIS RESULTS (NCALC=3)

# TITLE A-10 SENSITIVITY STUDY

NUMBER OF SENSITIVITY VARIABLES, NSV = 2 NUMBER OF SENSITIVITY OBJECTIVES, NSOBJ = 1

GLOBAL NUMBERS ASSOCIATED WITH SENSITIVITY VARIABLES 514 337

GLOBAL NUMBERS ASSOCIATED WITH SENSITIVITY OBJECTIVES 585

#### NOMINAL DESIGN INFORMATION

VALUES OF SENSITIVITY VARIABLES 0.10000E+00 0.16000E+02

VALUES OF SENSITIVITY OBJECTIVE FUNCTIONS 0.50122E+05

#### SENSITIVITY ANALYSIS RESULTS

### GLOBAL VARIABLE 514

x	F(X)
0.2500E+00	0.4958E+05
0.4000E+00	0.4914E+05
0.5500E+00	0.4876E+05
0.6900E+00	0.4846E+05
0.8400E+00	0.4818E+05
0.9900E+00	0.4793E+05

# GLOBAL VARIABLE 337

x	F(X)
0.1750E+02	0.4970E+05
0.1900E+02	0.4931E+05
0.2050E+02	0.4896E+05
0.2200E+02	0.4864E+05
0.2350E+02	0.4834E+05
0.2500E+02	0.4805E+05

XII. EXAMPLE THREE

**OVERVIEW** 

This example will demonstrate the use of the Optimization Method of

analysis. The goal of this exercise is to reduce the take-off gross weight by

reducing the wing reference area, subject to a constraint on the turning rate

during combat. In this case, a hypothetical contract for the aircraft under

development specifies a minimum turning rate of 10 degrees per second while

delivering weapons.

В. **OPTIMIZATION INPUTS** 

The following inputs will be needed for this analysis:

• Objective Variable: Total Aircraft Weight

Global Number: 585

• Design Variable #1: Wing Reference Area.

Global Number: 422

Range: 300.0 - 800.0 ft<sup>2</sup>

• Constraint #1: Sustained Turning Rate, Phase 4 (combat)

Global Number: 450

Range: 10.0 - 12.0 deg/s

Use the following procedure:

Start CREATE and open the A10 data file.

132

• Change the Analysis Method to (2) Optimization

• Title: A-10 Optimization Study

• Objective Variable Global Number: 585

• Minimize

• 1 Design Variable

• Design Variable #1 Global Number: 422

• Upper Bound: 800.0

• Lower Bound: 300.0

• 1 Constraint

• Constraint #1 Global Number: 450

• Upper Bound: 12.0 deg/s

• Lower Bound: 10.0 deg/s

• Aircraft Type: Bomber

• Proceed through the rest of CREATE without changes.

This run will take approximately 15 minutes. The output is quite long for the Optimization Method. The first part of the output is a complete convergence run using a starting value (provided by CREATE) for the design variable and has been omited here for the sake of brevity. The Optimization process begins with the model converged using a wing area of 550 square feet. ACSYNT then proceeds to determine the minimum weight achievable within the given constraint. The final values are shown on page 144. The weight is

46068 lbs with a wing area of 387.54 square feet, giving a turning radius of 9.998 degrees/second. Compare this to the original weight of 47121 lbs. A final printout is then made using this new wing area.

Obviously, this minimum wing area should be taken with a grain of salt. While ACSYNT can perform the mission given with this wing, it does not take into account the real-world requirements (such as bomb station spacing). The A-10 also has additional wing area built in as a survivability enhancement feature. ACSYNT is only concerned with satisfying the mission trajectory.

INITIAL FUNCTION INFORMATION

OBJ = 0.477200E+05

DECISION VARIABLES (X-VECTOR)

1) 0.55000E+03

CONSTRAINT VALUES (G-VECTOR)

1) -0.77487E-01 -0.10209E+00

# \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.47718E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.47802E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.47997E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.47871E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.47830E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.47831E+05

#### \* \* \* END VEHICLE CONVERGENCE

#### 2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

## INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.47830E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.47319E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.46127E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46915E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.47160E+05

CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.47158E+05

#### \* \* \* END VEHICLE CONVERGENCE

#### 2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

#### INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.47160E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.45679E+05

#### SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.42222E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.44317E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.45115E+05

CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.45103E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.45099E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING NODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.45100E+05

#### \* \* \* END VEHICLE CONVERGENCE

3 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.45099E+05 CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.45840E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+0)

ESTIMATED GROSS WEIGHT = 0.47570E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46449E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.46082E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46084E+05

\* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

\* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.46082E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46146E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.46293E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46195E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.46165E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46167E+05

\* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED

CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.46165E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.45398E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.43610E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.44694E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.45107E+05 CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.45102E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.45099E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.45100E+05

#### \* \* \* END VEHICLE CONVERGENCE

3 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.45099E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.45165E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.45317E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.45226E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.45191E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.45191E+05

#### \* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.45191E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of CALLING MODULE NUMBER 6 5.000000

CALCULATED GROSS WEIGHT = 0.45849E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.47384E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46393E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.46066E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING : Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46068E+05

#### \* \* \* END VEHICLE CONVERGENCE

#### 2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

## INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.46066E+05

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46129E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.46277E+05

CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46180E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.46149E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46149E+05

## \* \* \* END VEHICLE CONVERGENCE

2 CONVERGENCE ITERATIONS REQUIRED

CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### FINAL OPTIMIZATION INFORMATION

OBJ = 0.460680E + 05

DECISION VARIABLES (X-VECTOR)

1) 0.38754E+03

CONSTRAINT VALUES (G-VECTOR)

1) 0.10319E-03 -0.16675E+00

THERE ARE 1 ACTIVE CONSTRAINTS CONSTRAINT NUMBERS ARE

O VIOLATED CONSTRAINTS THERE ARE

THERE ARE O ACTIVE SIDE CONSTRAINTS

TERMINATION CRITERION

ABS(OBJ(I)-OBJ(I-1)) LESS THAN DABFUN FOR 3 ITERATIONS

NUMBER OF ITERATIONS =

OBJECTIVE FUNCTION WAS EVALUATED 10 TIMES

CONSTRAINT FUNCTIONS WERE EVALUATED 10 TIMES

#### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.46149E+05 CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46087E+05

SLOPE OF WCALC VS WEST LINE = 0.70000E+00

ESTIMATED GROSS WEIGHT = 0.45943E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.46038E+05

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.46068E+05

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

WARNING : Combat load factor reduced from input value of 5.000000 CALLING MODULE NUMBER 6

## CALCULATED GROSS WEIGHT = 0.46068E+05

- \* \* \* END VEHICLE CONVERGENCE
- 2 CONVERGENCE ITERATIONS REQUIRED CALLING MODULE NUMBER 10

INSUFFICIENT THRUST IF ENGINE LOST OFF CATAPULT

#### OPTIMIZATION RESULTS

OBJECTIVE FUNCTION

GLOBAL LOCATION 585 FUNCTION VALUE 0.46068E+05

DESIGN VARIABLES

D. V. GLOBAL LOWER UPPER NO. VAR. NO. BOUND VALUE BOUND 1 422 0.30000E+03 0.38754E+03 0.80000E+03 ID

DESIGN CONSTRAINTS

GLOBAL LOWER UPPER VAR. NO. BOUND VALUE BOUND 450 0.10000E+02 0.99985E+01 0.12000E+02 ID

CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2

WARNING: Combat load factor reduced from input value of 5.000000

CALLING MODULE NUMBER 6
CALLING MODULE NUMBER 1

```
Nasa/ames
             ACSYNT
                            **FINAL OUTPUT**
                              NACELLE DEFINITION
                                                      NACELLE LOCATION
   FUSELAGE DEFINITION
                                                               Y
                                                                       Z
          R
                    AREA
                            X-XNOSE
                                        r Area
                                                       X
   X
                                                                       0.00
         0.00
                    0.00
                              0.00
                                       2.18
                                              14.92
                                                      32.00
                                                              5.25
  0.00
                                                              -5.25
                                                                       0.00
                                              14.92
                                                      32.00
  1.07
          0.78
                    1.92
                               2.72
                                       2.18
         1.26
                    4.98
                               8.17
                                       2.18
                                              14.92
  2.13
                                              14.92
                    8.36
                              10.89
                                       2.18
  3.20
          1.63
  4.27
          1.93
                   11.69
                   14.74
         2.17
  5.33
  6.40
         2.35
                   17.36
         2.49
  7.47
                   19.43
                   20.86
  8.53
  9.60
         2.62
                   21.62
          2.63
                   21.73
 10.67
                   21.73
 11.73
          2.63
 12.80
         2.63
                   21.73
 13.87
         2.63
                   21.73
 14.93
          2.63
                   21.73
 16.00
          2.63
                   21.73
 17.07
         2.63
                   21.73
 18.13
          2.63
                   21.73
                   21.73
          2.63
 19.20
 20.27
         2.63
                   21.73
                   21.73
 21.33
          2.63
                   21.73
 22.40
          2.63
 23.47
          2.63
                   21.73
 24.53
          2.63
                   21.73
                   21.67
 25.60
          2.63
 26.67
          2.62
                   21.53
 27.73
          2.60
                   21 30
 28.80
          2.58
                   20.98
 29.86
         2.56
                   20.58
 30.93
                   20.09
          2.53
 32.00
          2.49
                   19.52
 33.06
         2.45
                   18.87
          2.40
 34.13
                   18.15
 35.20
          2.35
                   17.35
 36.26
         2.29
                   16.49
                   15.55
 37.33
          2.23
 38.40
          2.15
                   14.57
 39.46
         2.07
                   13.52
 40.53
         1.99
                   12.43
          1.90
                   11.30
 41.60
          1.80
 42.66
                   10.14
 43.73
         1.69
                    8.95
                    7.75
 44.80
          1.57
 45.86
          1.44
                    6.55
 46.93
          1.31
                    5.36
 48.00
                    4.21
          1.16
 49.06
          0.99
                    3.10
 50.13
          0.81
                    2.08
          0.61
 51.20
                    1.16
 52.26
          0.37
                    0.42
 53.33
          0.00
                    0.00
                   **FUSELAGE**
                                         **PODS**
MAX. DIAMETER.....
                        5.260
                                            4.359
                                  . . . . .
FINENESS RATIO....
                       10.139
                      702.864
                                  ..... 149.095 (EACH)
SURFACE AREA.....
VOLUME.....
                      809.360
```

# NASA/AMES A C S Y N T \*\*FINAL OUTPUT\*\* DIMENSIONS OF PLANAR SURFACES

	WING	H.TAIL	V.TAIL	CANARD	UNITS
PLAN AREA	387.5	118.4	54.1	0.0	(SQ.FT.)
SURFACE AREA	775.4	189.0	102.7	0.0	(SQ.FT.)
VOLUME	311.3	67.8	27.1	0.0	(CU.FT.)
SPAN	50.344	18.815	9.702	0.000	(FT.)
L.E. SWEEP	0.000	0.000	0.000	0.000	(DEG.)
C/4 SWEEP	~1.794	-0.096	-3.982	0.000	(DEG.)
T.E. SWEEP	-7.140	-0.385	-15.559	0.000	(DEG.)
ASPECT RATIO	6.540	2.990	1.740	0.000	
ROOT CHORD	9.275	6.324	6.927	0.000	(FT.)
ROOT THICKNESS	17.807	9.866	10.806	0.000	(IN.)
ROOT T/C	0.160	0.130	0.130	0.000	
TIP CHORD	6.121	6.261	4.225	0.000	(FT.)
TIP THICKNESS	9.549	9.767	6.084	0.000	(IN.)
TIP T/C	0.130	0.130	0.120	0.000	
TAPER RATIO	0.660	0.990	0.610	0.000	
MEAN AERO CHORD	7.805	6.293		0.000	(FT.)
LE ROOT AT	22.746	45.406	44.803	0.000	(FT.)
C/4 ROOT AT	25.065	46.987	46.535	0.000	(FT.)
TE ROOT AT	32.021	51.730	51.730	0.000	(FT.)
LE M.A.C. AT	22.746	45.406	44.803	0.000	(FT.)
C/4 M.A.C. AT	24.698	46.979	46.225	0.000	(FT.)
TE M.A.C. AT	30.552	51.699	50.488	0.000	(FT.)
Y M.A.C. AT	11.727	4.696	4.459	0.000	
LE TIP AT	22.746	45.406		0.000	<b>.</b> ,
C/4 TIP AT	24.277	46.971	45.860	0.000	
TE TIP AT	28.868	51.667	49.029	0.000	(FT.)
ELEVATION	-2.630	0.000	-2.367	0.000	(FT.)
VOLUME COEFF		0.872	0.060	0.000	

## EXTENSIONS

	Strake Rea	r Extension
Centroid location at	. 0.000	0.000
Area	. 0.000	0.000
Wetted Area	. 0.000	0.000
Volume	. 0.000	0.000
Sweep Angle		

	F U	EL T	ANKS	
TANK		VOLUME	Weight	DENSITY
WING		57.	2750.	48.62
FUS#1		179.	8689.	48.62
TUS#2		0.	0.	50.00
TOTAL			11438.	

MISSION FUEL REQUIRED- 11438.

AVAILABLE FUEL VOLUME IN WING- 298.

AIRCRAFT WEIGHT = 46067.734 Lbs.
AIRCRAFT VOLUME = 1215.551 Cu.Ft.
AIRCRAFT DENSITY = 37.899 Lbs./Cu.Ft.

CALLING MODULE NUMBER 2

## TRAJECTORY OUTPUT

MISSION 1 (PAYLOAD = 14000. LB)

PHASE	M SFC(I) SFC(U)		CL CD CDINST	ALPHA GAMMA L/D	WFUEL W THR/THA	Time Wa Pr	VEL Q X
CLIMB	0.53	5000.	0.3494	2.81	99.3	0.87	576.
	0.59	11118.	0.0308	8.89	45623.4	311.98	340.
CYCLE	0.58	. 0.	0.0012	11.34	2.00	1.00	5.
CRUISE	0.50	5000.	0.3686	3.01	2412.6	42.46	549.
	0.90	3778.	0.0317	0.00	43210.8	254.79	308.
CYCLE	0.86	3925.	0.0012	11.64	0.67	1.00	230.
CRUISE	0.50	100.	0.3004	2.42	495.2	7.26	558.
	0.98	4164.	0.0292	0.00	42715.6	298.70	369.
CYCLE	0.94	4335.	0.0012	10.29	0.65	1.00	40.
COMBAT	0.60	100.	0.7751	6.41	3794.1	30.00	670.
	0.65	11741.	0.0567	0.00	36073.5	356.43	531.
CYCLE	0.63	12018.	0.0013	13.68	1.94	1.00	198.
CRUISE	0.50	100.	0.2506	2.00	471.3	7.26	558.
	0.98	3966.	0.0277	0.00	35602.2	296.53	369.
CYCLE	0.94	4143.	0.0012	9.04	0.62	1.00	40.
CLIMB	0.51	5000.	0.2721	2.17	73.3	0.65	563.
	0.59	11178.	0.0283	12.39	35528.9	309.69	324.
CYCLE	0.58	0.	0.0012	9.62	2.00	1.00	3.
CRUISE	0.50	5000.	0.2844	2.28	2341.3	42.46	549.
	0.96	3425.	0.0287	0.00	33187.6	253.66	308.
CYCLE	0.92	3569.	0.0012	9.92	0.61	1.00	230.
LOITER	0.27	500.	0.8075	7.59	766.3	20.00	301.
	0.82	2791.	0.0678	0.00	32421.3		106.
CYCLE	0.81	2835.	0.0011	11.90	0.38	1.00	59.

#### FUEL SUMMARIES

MISSION FUEL = 10798.
RESERVE FUEL = 540.
TRAPPED FUEL = 100.

TOTAL FUEL = 11438.

TAKEOFF FUEL WFT01 = 120. WFT02 = 225.

FUEL CARRIED :

EXTERNALLY = 0. INTERNALLY = 11438.

## ADDITIONAL COMBAT PARAMETERS

CONDITIONS PS NZ TDOT RADIUS ALPHA CL CD

M= 0.60
H= 100. SUSTAINED 0.0 3.77 10.00 3837. 6.41 0.775 0.0567
MAX. INST. -550.2 5.96 16.17 2372. 11.00 1.225 0.2264
COMBAT ENERGY = 0.177918E+06

BLOCK TIME = 2.516 HOURS
BLOCK RANGE = 806.2 N. M.

TAKEOFF FIELD LENGTH (TOTAL RUN) = 3268. FEET
LANDING FIELD LENGTH (GROUND RUN) = 6438. FEET
LANDING FIELD LENGTH (GROUND RUN) = 2193. FEET
WEIGHT FOR LANDING CALCULATION = 39605. POUNDS
LANDING THRUST TO WEIGHT RATIO = 0.485

TAKEOFF WEIGHT = 46068. POUNDS LANDING WEIGHT = 32421. POUNDS

#### CALLING MODULE NUMBER 3

## Detailed Aerodynamics Output

Mach = 0.20 Altitude = 0.

Parasite Drag	,	Induce	d Drag							
Friction	.0190	Alpha	Cl	Cd	L/D	Cm	• C	dtrim Del	ltrim Zo	ne
Body	.0042	0.0	0.005	0.0306	0.2	0.048	0.00	0.0000	0.0	2
Wing	.0079	3.0	0.338	0.0368	9.2	037	0.89	0.0000	0.0	2
Strakes	.0000	6.0	0.644	0.0541	11.9	122	0.86	0.0000	0.0	2
H. Tail	.0019	0.0	0.005	0.0306	0.2	0.048	0.00	0.0000	0.0	2
V. Tail	.0021	9.0	0.930	0.0810	11.5	208	0.84	0.0000	0.0	2
Canard	.0000	12.0	1.205	0.1173	10.3	298	0.82	0.0000	0.0	2
Pods	.0028	15.0	1.475	0.1632	9.0	391	0.80	0.0000	0.0	2
Engine	.0000	18.0	1.747	0.2196	8.0	489	0.79	0.0000	0.0	2
Cowl	.0000	21.0	2.026	0.2878	7.0	589	0.78	0.0000	0.0	2
Boattail	.0000	24.0	2.301	0.3657	6.3	686	0.77	0.0000	0.0	2
Interference	.0059									
Wave	.0000									
External	.0057			S	lope Fa	actors				
Tanks	.0000				ClAlp	ha	0.095	7		
Bombs	.0000				Cd1^.	5Alpha	0.024	1		

Stores	.0000									
Extra	.0057									
Camber	.0000									
Cdmin	.0306									
Mach =	0.30									
Altitude =	0.									
Parasite Dra	ıg	Induc	ed Drag							
Friction	.0189	Alpha	Cl	Cd	L/D	Cm	e C	dtrim Del	<b>Ltrim Zo</b>	ne
Body	.0042	Ō.0	0.005	0.0305	0.2	0.047	0.00	0.0000	0.0	2
Wing	.0078	3.0	0.345	0.0369	9.3	042	0.90	0.0000	0.0	2
Strakes	.0000	6.0	0.655	0.0546	12.0	130	0.87	0.0000	0.0	2
H. Tail	.0019	0.0	0.005	0.0305	0.2	0.047	0.00	0.0000	0.0	2
V. Tail	.0021	9.0	0.945	0.0821	11.5	219	0.84	0.0000	0.0	2
Canard	.0000	12.0	1.222	0.1190	10.3	311	0.82	0.0000	0.0	2
Pods	.0028	15.0	1.492	0.1654	9.0	407	0.80	0.0000	0.0	2
Engine	.0000	18.0	1.762	0.2220	7.9	506	0.79	0.0000	0.0	2
Cowl	.0000	21.0	2.041	0.2909	7.0	608	0.78	0.0000	0.0	2
Boattail	.0000	24.0	2.239	0.9546	2.3	796	0.26	0.0000	0.0	3
Interference	.0059									
Wave	.0000									
External	.0057			S	lope F	actors				
Tanks	.0000				ClAlp	ha	0.093	1		
Bombs	.0000					5Alpha	0.040	1		
Stores	.0000					•				
Extra	.0057									
Camber	.0000									
Cdmin	.0305									

Detailed Aerodynamics Output

Mach = 0.60 Altitude = 5000.

Parasite Drag	7	Induce	ed Drag							
Friction	.0183	Alpha	Cl	Cd	L/D	Cm	• 0	dtrim Del	trim Zo	ne
Body	.0041	·0.0	0.005	0.0242	0.2	0.047	0.00	0.0000	0.6	2
Wing	.0076	3.0	0.386	0.0320	12.1	057	0.94	0.0000	0.0	2
Strakes	.0000	6.0	0.730	0.0529	13.8	157	0.90	0.0000	0.0	2
H. Tail	.0019	0.0	0.005	0.0242	0.2	0.047	0.00	0.0000	0.0	2
V. Tail	.0020	9.0	1.041	0.0844	12.3	258	0.88	0.0000	0.0	2
Canard	.0000	12.0	1.283	0.2572	5.0	379	0.34	0.0000	0.0	3
Pods	.0027	15.0	1.503	0.3789	4.0	495	0.31	0.0000	0.0	3
Engine	.0000	18.0	1.704	0.5252	3.2	618	0.28	0.0000	0.0	3
Cowl	.0000	21.0	1.882	0.6933	2.7	748	0.26	0.0000	0.0	3
Boattail	.0000	24.0	2.022	0.8750	2.3	878	0.23	0.0000	0.0	3
Interference	.0059									
Wave	.0000									
External	.0000			S	lope F	actors				
Tanks	.0000				Clalp	ha	0.084	1		
Bombs	.0000				Cdl^.	5Alpha	0.038	4		
Stores	.0000					-				
Extra	.0000									
Camber	.0000									
Cdmin	.0242									

Mach =	0.70									
Altitude =	5000.									
Parasite Dra	ন্ত্ৰ	Induc	ed Drag							
Friction	.0180	Alpha	Cl	Cd	L/D	Cm	• 0	dtrim	Deltrim Z	one
Body	.0040	0.0	0.005	0.0240	0.2	0.047	0.00	0.0000	0.0	2
Wing	.0075	3.0	0.414	0.0327	12.7	064	0.96	0.0000	0.0	2
Strakes	.0000	6.0	0.779	0.0559	13.9	170	0.92	0.0000	0.0	2
H. Tail	.0018	0.0	0.005	0.0240	0.2	0.047	0.00	0.0000	0.0	2
V. Tail	.0020	9.0	1.100	0.1739	6.3	288	0.39	0.0000	0.0	3
Canard	.0000	12.0	1.331	0.2738	4.9	401	0.35	0.0000	0.0	3
Pods	.0027	15.0	1.557	0.4020	3.9	522	0.31	0.0000	0.0	3
Engine	.0000	18.0	1.675	0.5792	2.9	614	0.25	0.0000	0.0	4
Cowl	.0000	21.0	1.778	0.7240	2.5	740	0.22	0.0000	0.0	4
Boattail	.0000	24.0	1.859	0.8785	2.1	867	0.20	0.0000	0.0	4
Interference	.0059									
Wave	.0000									
External	.0000			S	lope F	actors				
Tanks	.0000				Clalp		0.077	2		
Bomba	.0000					5Alpha	0.038	5		
Stores	.0000					-				
Extra	.0000									
Camber	.0000									
Cdmin	.0240									
	MODULE N	UMBER -	4							

#### ENGINE SUMMARY

```
ENGINE DIAMETER =
                       4.35 FEET
ENGINE LENGTH= 8.33 FEET
ENGINE WEIGHT= 1478.00 POUNDS
BYPASS RATIO = 6.23
NO OF ENGINES PER AC =
A/C DRAG REF AREA = 387.54 SQ FEET
INLET CAPTURE AREA PER ENG = 6.190 SQ FEET
       = FERCENT OF ENGINE CORRECTED AIRFLOW
THRUST - ENGINE THRUST (POUNDS PER ENGINE)
SFC - ENGINE SPECIFIC FUEL CONSUMPTION
WTOT - ENGINE TOTAL AIRFLOW (LBS/SEC PER ENGINE)
OV EF - ENGINE OVERALL EFFICIENCY
PR EF - ENGINE PROPULSIVE EFFICIENCY
       - INLET TOTAL PRESSURE RECOVERY (TO EN FACE)
TPR
NPR
       = NOZZLE PRESSURE RATIO
TIT
       = TURBINE INLET TEMPERATURE (DEG R)
       - ENGINE EXHAUST GAS TEMPERATURE
EGT
CPR
       = OVERALL COMPRESSOR PRESSURE RATIO
THRUSTU- THRUST PER ENGINE IN LBS. W/O INSTAL DRAG CORR
SFCU = SFC,1/HR, W/O INSTALLATION DRAG CORR
ABYAC = FREESTREAM BYPASS FLOW AREA/AC
ABLAC - FREESTREAM INLET BLEED FLOW AREA/AC
      = AREA OF NOZZLE EXIT, FT**2
ANOZ
BETA
       - NOZZLE BOATTAIL ANGLE IN DEGREES
AO/AC - FREE STREAM TO CAPTURE AREA RATIO
CDINS = TOT INSTALLATION DRAG COEF PER A/C (SWING REF)
CDADD = ADDITIVE DRAG COEF PER A/C (SWING REF)
CDSP = SUBSONIC SPILL DRAG COEFF PER A/C (SWING REF)
       = INLET BLEED DRAG COEF PER A/C (SWING REF)
CDBL
       - INLET BYPASS DRAG PER A/C (SWING REF)
CDBP
CDBY = INLET BIRASS DAME FOR A/C (SWING REF)

CDDIV = INLET BO. LAYER DIVERT DRAG PER A/C (SWING REF)

CDBT = NOZZLE BOATTAIL DRAG COEF PER A/C (SWING REF)
CDINF - DRAG COEF OF BASE AREA BETWEEN NOZZLES (PER A/C)
 INSTALL DRAG COEF SCALE FACTORS
SFINSP =
               1.0000
               1.0000
SFADP =
SFADSP =
               1.0000
SFBEP =
               1.0000
SFBPP
               1.0000
SFAUXP =
               1.0000
               1.0000
SFDIVP =
SFIP =
               1.0000
SFBTP =
               1.0000
```

## MACH = 0.000 ALTITUDE = 0.00 FEET

PWCC	THRUST THRUSTU	sfc sfcu	WTOT ABYAC	OV EF	PR EF ANOZ	TPR BETA	NPR	TIT	egt	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0	9065. 9065.	0.364			0.000 13.65	1.000 11.17	1.79	2697.	1540.	22.49
	1000.000						0.0000	0.0000	0.0005	0.0000
98.0	8298. 8298.	0.355 0.355		0.000	0.000 13.65	1.000	1.84	2570.	1486.	21.51
	1000.000						0.0000	0.0000	0.0005	0.0000
96.0					0.000		1.92	2447.	1441.	20.56
	7495. 1000.000	0.348			13.65 0.0000	12.66 0.0000	0.0000	0.0000	0.0006	0.0000
94.0	6619.	0.348	273.	0.000	0.000	1.000	2.05	2329.	1405.	19.64
	6619. 1000.000	0.348			13.65 0.0000	13.59 0.0000	0.0000	0.0000	0.0006	0.0000
92.0	5582.	0.362	0.000	0.000	0.000 13.65	14.62		2214.		18.75
	1000.000	0.0007	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0007	0.0000
90.0	4076. 4076.	0.431 0.431			0.000 13.65	1.000 15.69	2.54	2105.	1367.	17.88
	1000.000						0.0000	0.0000	0.0007	0.0000
88.0			256.		0.000	1.000	2.52	1999.	1310.	17.04
	2118. 1000.000				13.65 0.0000	16.01 0.0000	0.0000	0.0000	0.0007	0.0000
86.0	1872.	0.694	250.	0.000	0.000	1.000	2.22	1898.	1218.	16.23
	1872. 1000.000	0.694	0.000		13.65	15.68			0.0007	
			• • •							
84.0	1624.		0.000		13.65	1.000	1.95	1802.	1131.	
	1000.000	J. 0007	0.0000	J.0000	0.0000	0.0000	0.0000	0.0000	0.0007	0.0000
82.0	1375. 1375.	0.668	238. 0.000	0.000		1.000	1.70	1709.	1049.	14.68
	1000.000						0.0000	0.0000	0.0007	0.0000

- 80.0 1114. 0.678 232. 0.000 0.000 1.000 1.48 1621. 971. 13.95 1114. 0.678 0.000 0.000 13.65 13.36 1000.000 0.0006 0.0000

## MACH = 0.500 ALTITUDE = 0.00 FEET

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF	PR EF ANOZ	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0	6143. 6231.	0.594 0.586	336. 0.000	0.237	0.622 13.65	1.000	1.79	2697.	1479.	22.49
			0.0000				0.0000	0.0000	0.0007	0.0005
98.0	5867.	0.619	329.	0.228	0.588	1.000	2.20	2697.	1572.	21.51
	5956.	0.610	0.000	0.000	13.65	11.79				
	1.244	0.0012	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0008	0.0004
96.0	5127.	0.630	323.	0.224	0.586	1.000	2.30	2570.	1526.	20.56
	5216. 1.219	0.619	0.000	0.000	13.65 0.0000	12.55	0.0000	0.0000	0.0009	0.0004
94.0	4349.	0.655	316.	0.216	0.571	1.000	2.46	2446.	1488.	19.64
34.0	4439.	0.642	0.000	0.000	13.65	13.39				
	1.194	0.0013	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0009	0.0003
92.0	3509.	0.712	309.	0.200	0.533	1.000	2.70	2326.	1460.	18.75
	3599. 1.168	0.694	0.000	0.000	13.65 0.0000	14.32	0.0000	0.0000	0.0010	0.0003
90.0	2546.	0.854	302.	0.168	0.451	1.000	3.04	2011	1445	17.00
50.0	2637.	0.825	0.000	0.000	13.65	15.30	3.04	2211.	1445.	17.88
	1.143	0.0013	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0010	0.0002
88.0	1917.	0.981	296.	0.148	0.406	1.000	3.01	2100.	1384.	17.04
	2008. 1.117	0.936	0.000	0.000	13.65	15.63	0.0000	0.0000	0.0011	0.0002
					3				0.0011	3.0002

86.0	1648.	0.977	289.		0.430	1.000 15.40	2.66	1994.	1288.	16.23
	1739. 1.092	0.925	0.000	0.0000	13.65 0.0000		0.0000	0.0000	0.0011	0.0002
84.0	1383.	0.986	282.	0.150	0.459	1.000	2.34	1892.	1196.	15.44
	1474. 1.067	0.925 0.0013	0.000	0.000	13.65 0.0000		0.0000	0.0000	0.0010	0.0002
82.0	1118.	1.020	276.	0.147	0.493	1.000	2.04	1795.	1109.	14.68
	1207. 1.041	0.944 0.0012	0.000	0.000	13.65 0.0000		0.0000	0.0000	0.0010	0.0002
80.0	852.	1.101	269.	0.139	0.533	1,000	1.77	1702.	1026.	13.95
	939.	0.999	0.000		13.65					
78.0	£ 7.7	1.311	262	0 121	0.581	1.000	1 50	1614.	040	13.24
78.0	660.	1.145	0.000		13.65	12.76		0.0000		
76.0	280. 354.	2.122 1.675	255. 0.000	0.003	13.65	10.73			876.	
	0.965	0.0010	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0007	0.0003

## MACH = 0.500 ALTITUDE = 5000.00 FEET

PWCC	THRUST THRUSTU AO/AC	SFC SFCU CDINS	WTOT ABYAC CDADD	OV EF ABLAC CDSP	PR EF ANOZ CDBL	TPR BETA CDBP	npr CDAUX	TIT CDDIV	egt CDBT	CPR CDINF
100.0	5370. 5443.	0.595 0.587	285. 0.000	0.232	0.596 13.65	1.000	2.03		1523.	
	1.270	0.0012	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0008	0.0005
98.0	4865. 4939.	0.604 0.595	279. 0.000	0.229	0.590 13.65	1.000 11.76	2.18	2606.	1510.	21.51
	1.245	0.0012	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0008	0.0004
96.0	4246. 4320.	0.614 0.604	273. 0.000	0.226	0.588 13.65	1.000	2.28	2481.	1464.	20.56
	1.219	0.0012	0.0000	0.0000			0.0000	0.0000	0.0009	0.0004
94.0	3601. 3675.	0.639 0.626	268. 0.000	0.218	0.574 13.65	1.000 13.35	2.44	2361.	1428.	19.64
	1.194		0.0000				0.0000	0.0000	0.0009	0.0003

92.0		262. 0.202 0.000 0.000	0.535 1.000		2245.	1403. 18	3.75
		0.0000 0.0000			0.0000	0.0010 0.0	0003
90.0	2104. 0.834	256. 0.169			2134.	1389. 17	7.88
	2180. 0.805		13.65 15.28				
	1.143 0.0013	0.0000 0.0000	0.0000 0.0000	0.0000	0.0000	0.0011 0.0	)002
88.0	1582 0 956	250. 0.149	0.407 1.000	2.99	2027	1331. 13	7.04
00.0	1658. 0.915		13.65 15.61		2027.	1551.	
		0.0000 0.0000			0.0000	0.0011 0.0	002
86.0	1359. 0.955	245. 0.151	0.432 1.000	2.65	1925.	1238. 16	5.23
	1435. 0.905		13.65 15.38				
	1.092 0.0013	0.0000 0.0000	0.0000 0.0000	0.0000	0.0000	0.0011 0.0	)002
84.0	1137. 0.966	239, 0.151	0.461 1.000	2.32	1827.	1149. 1	5.44
01.0	1213. 0.906		13.65 15.04		202		,
	1.067 0.0013	0.0000 0.0000	0.0000 0.0000	0.0000	0.0000	0.0010 0.0	0002
82.0	918. 1.000	233. 0.147 0.000 0.000			1733.	1065. 14	.68
		0.0000 0.0000			0.0000	0.0010 0.0	0002
80.0	697. 1.084	228. 0.139	0.536 1.000	1.76	1643.	986. 13	3.95
	769. 0.982		13.65 13.83				
	1.016 0.0012	0.0000 0.0000	0.0000 0.0000	0.0000	0.0000	0.0010 0.0	)003
78.0	467. 1.302	222. 0.120	0.584 1.000	1.51	1558.	911. 13	3.24
. +	536. 1.134		13.65 12.67		•		🗕 -
	0.991 0.001	.2 0.0000 0.0000	0.0000 0.000	0.000	0.000	0.0009 0	.0003
74.0							
76.0	218. 2.186 279. 1.70!	5 216. 0.080 5 0.000 0.000			1477.	841. 12	4.56
		0.0000 0.0000			0 0000	0 0007 0	2003
	0.303 0.00I(	, 0.0000 0.0000	0.0000 0.0000	J. 0000	V. UUUU	0.0007 0.0	,,,,

## MACH = 0.570 ALTITUDE = 5000.00 FEET

PWCC	THRUST	SFC SFCU		OV EF	PR EF	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD		CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0					0.638			2697.	1506.	22.49
	5332. 1.162				13.65			0.0000	0.0008	0.0005

4833. 0.647 291. 0.246 0.620 1.000 2.30 2643. 1536. 21.51 4937. 0.633 0.000 0.000 13.65 11.70 1.139 0.0013 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 98.0 
 4207.
 0.659
 285.
 0.242
 0.616
 1.000

 4311.
 0.643
 0.000
 0.000
 13.65
 12.43
 96.0 2.41 2517. 1489. 20.56 1.116 0.0013 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0010 0.0004 3561. 0.687 279. 0.233 0.599 1.000 2.57 2395. 1452. 19.64 3666. 0.667 0.000 0.000 13.65 13.26 94.0 1.093 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0003 2872. 0.747 273. 0.216 0.559 1.000 2.82 2278. 1426. 18.75 2979. 0.720 0.000 0.000 13.65 14.17 92.0 1.069 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0011 0.0003 2105. 0.887 267. 0.184 0.478 1.000 3.18 2165. 1411. 17.88 2209. 0.845 0.000 0.000 13.65 15.15 90.0 1.046 0.0013 0.0000 0.0000 0.0000 0.0000 0.0000 0.0001 0.0002 1601. 1.008 261. 0.165 0.434 1.000 3.15 2057. 1352. 17.04 1707. 0.945 0.000 0.000 13.65 15.48 88.0 1.023 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0012 0.0002 1366. 1.011 255. 0.166 0.456 1.000 2.79 1953. 1258. 16.23 1476. 0.936 0.000 0.000 13.65 15.27 B6.0 1.000 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0002 1137. 1.029 249. 0.166 0.482 1.000 2.45 1853. 1168. 15.44 1246. 0.939 0.000 0.000 13.65 14.96 84.0 0.976 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0002 0.0002 912. 1.072 244. 0.162 0.511 1.000 2.14 1758. 1083. 14.68 1019. 0.959 0.000 0.000 13.65 14.52 0.953 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0002 82.0 686. 1.173 238. 0.153 0.543 1.000 791. 1.017 0.000 0.000 13.65 13.88 80.0 1.85 1667. 1002. 13.95 0.930 0.0014 0.0000 0.0000 0.0000 0.0000 0.0000 0.0001 0.0003 78.0 454. 1.427 232. 0.133 0.573 1.000 1.59 1580. 926. 13.24 555. 1.167 0.000 0.000 13.65 12.87 0.907 0.0013 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0010 0.0003 209. 2.435 226. 0.092 0.563 1.000 1.36 1498. 855. 12.56 301. 1.689 0.000 0.000 13.65 11.14 76.0 0.883 0.0012 0.0000 0.0000 0.0000 0.0000 0.0000 0.0009 0.0003

## MACH = 0.700 ALTITUDE = 5000.00 FEET

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF	PR EF ANOZ	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0	5013. 5204.	0.698 0.673	325. 0.000	0.284	0.699 13.65	1.000 9.53	2.03	2697.	1467.	22.49
			0.0000			0.0000	0.0000	0.0000	0.0010	0.0006
98.0	4790.	0.727	319.	0.274	0.662	1.000	2.49	2697.	1560.	21.51
	4989. 1.016	0.698	0.000	0.000	13.65 0.0000	11.31	0.0000	0.0000	0.0012	0.0005
96.0	4219.	0.750	312.	0.267	0.646	1.000	2.70	2595.	1543.	20.56
	4422. 0.996	0.716	0.000	0.000	13.65	12.20	0.0000	0.0000	0.0013	0.0004
94.0	3555.	0.786	306.	0.257	0.624	1.000	2.88	2470.	1505.	19.64
	3763. 0.975	0.743 0.0018	0.000	0.000	13.65 0.0000	13.00	0.0000	0.0000	0.0014	0.0004
92.0	2069.	0.854	299.	0.240	0.582	1.000	3.16	2349.	1477.	18.75
	3074.	0.797	0.000	0.000	13.65	13.88				
	••••	0.0020	0.0000	0.000	0.0000	0.0000	0.0000	0.0000	0.0014	0.0003
90.0	2136. 2329.	0.999 0.916	293. 0.000	0.208	0.505 13.65	1.000	3.56	2233.	1461.	17.88
			0.0000			0.0000	0.0000	0.0000	0.0014	0.0002
88.0	1643. 1840.	1.123	286. 0.000	0.191	0.463	1.000	3.53	2121.	1400.	17.04
			0.0000		13.65 0.0000	15.16 0.0000	0.0000	0.0000	0.0015	0.0002
86.0	1375.	1.149	280.	0.192	0.475	1.000	3.12	2014.	1302.	16.23
	1589. 0.892	0.994	0.000	0.000	13.65 0.0000	15.00 0.0000	0.0000	0.0000	0.0016	0.0002
84.0	1124.	1.190	273.	0.192	0.488	1.000	2.74	1911.	1209.	15.44
	1343. 0.871	0.996	0.000	0.000	13.65	14.75				0.0003
			,,,,,,,	3		3.5000	3.0000	3.000	3.0010	J.0003
82.0	881. 1098.	1.270 1.019	267. 0.000	0.187	0.502 13.65	1.000 14.39	2.39	1813.	1121.	14.68
			0.0000				0.0000	0.0000	0.0016	0.0003

80.0		1.434		0.178	0.507 13.65		2.07	1719.	1038.	13.95
	0.830	0.0018	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0015	0.0003
78.0					0.489		1.79	1630.	959.	13.24
		1.218			13.65					
	0.809	0.0018	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0014	0.0003
76.0	157.	3.705	247.	0.116	0.370	1.000	1.53	1545.	886.	12.56
	353.	1.650	0.000	0.000	13.65	11.89				
	0.788	0.0017	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0013	0.0004
74.0		-4.310 6.361			-1.471 13.65	1.000	1.30	1464.	817.	11.90
		0.0015			_		0.0000	0.0000	0.0010	0.0004

## MACH = 0.700 ALTITUDE = 10000.00 FEET

PWCC	THRUST THRUSTU AO/AC	SFC SFCU CDINS	WTOT ABYAC CDADD	OV EF ABLAC CDSP	PR EF ANOZ CDBL	TPR BETA CDBP	NPR CDAUX	TIT	EGT CDBT	CPR CDINF
	AO/AC	CDING	CDADD	CDSE	CDBD	CDBF	CDAOX	CDDIV	CDBI	CDINE
100.0	4386.	0.696		0.279	0.673	1.000	2.30	2697.	1513.	22.49
	4547.	0.671	0.000	0.000	13.65	10.39				
	1.037	0.0017	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0011	0.0005
98.0	4005.	0.715		0.273	0.656	1.000	2.56	2628.	1526.	21.51
	4170.	0.686	0.000	0.000	13.65	11.45				
	1.017	0.0017	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0012	0.0005
96.0	3468.	0.732	263.	0.269	0.648	1.000	2.68	2503.	1479.	20.56
	3636.	0.698	0.000	0.000	13.65	12.16				
	0.996		0.0000			0.0000	0.0000	0.0000	0.0013	0.0004
94.0	2921.	0.767	258.	0.259	0.627	1.000	2.86	2381.	1442.	19.64
	3092.	0.724	0.000	0.000	13.65	12.97				
	0.975	0.0018	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0014	0.0004
92.0	2355.	0.834	252.	0.241	0.584	1.000	3.14	2265.	1416.	18.75
	2525.	0.778	0.000	0.000	13.65	13.85				
	0.954	0.0018	0.0000	0.0000		0.0000	0.0000	0.0000	0.0015	0.0003
90.0	1751.	0.977	247.	0.210	0.507	1.000	3.54	2153.	1402.	17.88
	1912.	0.894	0.000	0.000	13.65	14.80				
	0.934		0.0000			0.0000	0.0000	0.0000	0.0014	0.0002

88.0	1344. 1508.	1.099		0.192			3.51	2045.	1343.	17.04
			0.000	0.0000	13.65		0 0000	0 0000	0.0015	0.0002
	0.315	0.0017	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0015	0.0002
86.0	1123.	1.125	236.	0.193	0.475	1.000	3.10	1942.	1250.	16.23
	1301.	0.971	0.000	0.000	13.65	14.98				
	0.892	0.0018	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0016	0.0002
04.0	016	1 160	220	0 100	0.480	1 000	0.70	1042	1160	15 44
84.0	1097.	0.976	0.000	0.192	13.65	1.000	2.72	1843.	1160.	15.44
				0.0000			0 0000	0 0000	0.0016	0.0003
	0.671	0.0019	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0016	0.0003
82.0	717.	1.248	225.	0.188	0.502	1.000	2.37	1748.	1076.	14.68
	896.	0.998	0.000		13.65					
	0.851	0.0019	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0016	0.0003
80.0	519.	1.417	219	0.177	0.507	1.000	2.06	1658.	996.	13.95
00.0	696.	1.057			13.65	13.83	2.00	1050.	330.	13.33
				0.0000			0.0000	0.0000	0.0015	0.0003
78.0	321.	1.846	214.	0.156	0.486	1.000	1.77	1571.	920.	13.24
	492.	1.204	0.000	0.000	13.65	13.05				
	0.809	0.0018	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0014	0.0004
76.0	110	3.934	208	0 113	0.354	1.000	1.51	1489.	050	10 50
76.0	279.	1.664	0.000		13.65	11.78	1.51	1489.	850.	12.56
				0.0000			0 0000	0.0000	0.0013	0.0004
	3		2.000		3.0000	J.0000			0.0013	0.0004
74.0		-3.585	203.	0.023		1.000	1.28	1411.	783.	11.90
	42.	8.302	0.000	0.000		9.42				
	0.768	0.0014	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0010	0.0004

SEA-LEVEL STATIC THRUST = 9065. (MAX)
SEA-LEVEL SFC = 0.364
CALLING MODULE NUMBER 6

## WEIGHT STATEMENT - BOMBERS \*\*\* WEIGHTS DATA \*\*\* ACSYNT MODULE NUMBER 6

COMPONENT	POUNDS	KILOGRAMS	PERCENT
AIRFPAME STRUCTURE	12005.	5445.	26.06
WING	4300.	1951.	9.34
FUSELAGE	4419.	2004.	9.59
HORIZONTAL TAIL	523.	237.	1.14
VERTICAL TAIL	436.	198.	0.95
NACELLES	805.	365.	1.75
ALIGHTING GEAR	1522.	690.	3.30
PROPULSION	3577.	1623.	7.76
ENGINES (2)	3169.	1438.	6.88
FUEL SYSTEM	408.	185.	0.89
FIXED EQUIPMENT	5048.	2290.	10.96
HYD. + PNEU.	290.	132.	0.63
ELECTRICAL	677.	307.	1.47
AVIONICS	1566.	710.	3.40
Instrumentation	166.	75.	ი.36
DE-ICE/AIR CONDITION	369.	167.	0.80
AUXILIARY GEAR	161.	73.	0.35
FURNISH. + EQPT.	465.	211.	1.01
FLIGHT CONTROLS	1353.	614.	2.94
FUEL	11438.	5108.	24.83
PAYLOAD	14000.	6350.	30.39
FLIGHT CREW ( 1)	240.	109.	0.52
ARMAMENT	0.	0.	0.00
<b>AMMUNITION</b>	1000.	454.	2.17
Missiles	0.	0.	0.00
BOMBS	1848.	838.	4.01
EXTERNAL TANKS	0.	0.	0.00
ADV. WEAPONS 1	0.	0.	0.00
ADV. WEAPONS 2	0.	0.	0.00
CALCULATED WEIGHT	46068.	20896.	100.00
ESTIMATED WEIGHT	46068.	20896.	

PERCENT ERROR 0.00

CALLING MODULE NUMBER 10

#### FINAL VALUES OF NAVY MODULE VARIABLES

## CATAPULT TAKEOFF CALCULATIONS,

TAKEOFF GROSS WEIGHT = 46068. LBS
CATAPULT ENDSPEED =161.4 KNOTS
LIFTOFF ENDSPEED =164.3 KNOTS
TAKEOFF STALL SPEED =108.2 KNOTS
MINIMUM WIND OVER DECK =-45.3 KNOTS
TAKEOFF ACCELERATION =0.277 G"S
TAKEOFF CL =2.856
TAKEOFF CL =0.285
ENGINE OUT CLIMB SPEED = -41.0 FT PER MIN
TAKEOFF FUEL WEIGHT =11438. LBS

TAKEOFF AOA =11.57 DEGS

## ARRESTED LANDING CALCULATIONS

CARRIER LANDING WEIGHT =35441. LBS
APPROACH STALL SPEED = 94.9 KNOTS
MINIMUM APPROACH SPEED =113.8 KNOTS
CABLE ENGAGING SPEED =145.0 KNOTS
MINIMUM WIND OVER DECK =-19.8 KNOTS
LANDING CL =3.349
LANDING CD =0.408
LANDING RESERVE FUEL = 2660. LBS
ENGINE OUT CLIMB SPEED = 814.0 FT PER MIN
LANDING AOA =11.75 DEGS

#### OTHER CALCULATIONS

OPERATING EMPTY WEIGHT =21119. LBS FOLDED TAIL HEIGHT = 11.5 FEET NERROR = 0

CALLING MODULE NUMBER 11

## SUMMARY --- ACSYNT OUTPUT --- NASA, AMES RESEARCH CENTER

## A-10 OPTIMIZATION STUDY

GENERAL FUSELAGE WING HTAIL V	TAIL
WG 46068. LENGTH 53.3 AREA 387.5 118.4 5	4.1
W/S 118.9 DIAMETER 5.3 WETTED AREA 775.4 189.0 10	2.7
T/W 0.39 VOLUME 809.4 SPAN 50.3 18.8	9.7
N(Z) ULT 11.3 WETTED AREA 702.9 L.E. SWEEP 0.0 0.0	4.0
	4.0
PASENGERS 0. ASPECT RATIO 6.54 2.99 1	.74
	.61
ENGINE WEIGHTS T/C ROOT 0.16 0.13 0	.13
T/C TIP 0.13 0.13 0	.12
NUMBER 2. W WG ROOT CHORD 9.3 6.3	6.9
	4.2
DIAM. 3.8 PROPUL. 3577. 7.8 M.A. CHORD 7.8 6.3	5.7
	4.8
TSLS 9065. FUEL 11438. 24.8	
SFCSLS 0.36 PAYLOAD 14000. 30.4	

## MISSION SUMMARY

PHASE	MACH	ALT	FUEL	TIME	DIST	L/D	THRUST	SFC	Q
ضنت سن جيب ہ	-		20 Ng 44				*****		
TAKEOFF	0.00	0.	345.	7.0	3268.0				
CLIMB	0.53	5000.	99.	0.9	4.9	11.34	11117.9	0.591	340.2
CRUISE	0.50	5000.	2413.	42.5	230.0	11.64	3778.3	0.898	308.2
CRUISE	0.50	100.	495.	7.3	40.0	10.29	4163.5	0.980	369.0
COMBAT	0.60	100.	3794.	30.0	198.4	13.68	11740.9	0.646	531.4
CRUISE	0.50	100.	471.	7.3	40.0	9.04	3965.6	0.982	369.0
CLIMB	0.51	5000.	73.	0.6	3.5	9.62	11178.2	0.585	324.3
CRUISE	0.50	5000.	2341.	42.5	230.0	9.92	3425.4	0.962	308.2
LOITER	0.27	500.	766.	20.0	59.4	11.90	2790.7	0.824	106.1
LANDING					6438.5				

BLOCK TIME = 2.516 HR BLOCK RANGE = 806.2 NM

## COMBAT PHASES

MACH ALT PSIG NZS CLS CDS ALS NZI PSI CLI CDI ALI CBE 0.60 100. 99. 3.8 0.775 0.0567 6.4 6.0 -550. 1.225 0.2264 11.0177918.

## XIII. EXAMPLE FOUR

## A. OVERVIEW

This final example will show the lower weight range that ACSYNT is capable of handling. This will be an oblique wing Unmanned Air Vehicle (UAV) for supersonic intercepts (inspired by Ref 10). It is designed for catapult launch and parachute recovery. The engine is a generic turbojet with 9500 lbs of thrust at sea-level with afterburner. The configuration is shown in Fig 7.

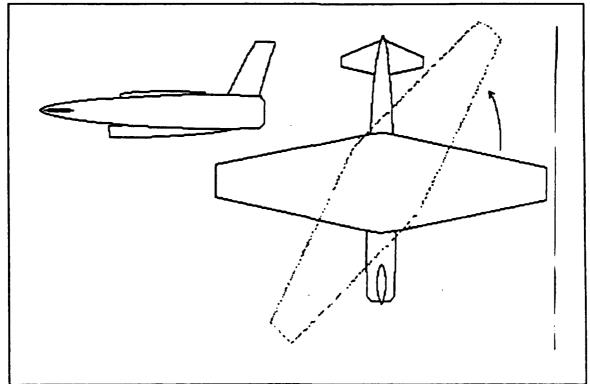


Figure 7. Oblique Wing UAV

## B. EXAMPLE FOUR INPUTS

The information required for this design is given below. It is assumed that the user is now familiar with how to navigate through CREATE and many of the steps have been condensed.

- Start CREATE and open a new file with a name of "UAV", select Simple Analysis.
- Enter a project title of "OBLIQUE WING UAV".
- Select item (1) (FIGHTER).
- No change to the selected Modules.
- Maximum weight for convergence: 10000.0
- Geometry Selection Menu: select oblique wing, vertical tail, canards, fuselage pod, fuselage and fuselage fuel (2, 5, 6, 8, 9 and 11).
- Oblique Wing Geometry:
  - Aspect Ratio: 5.50
  - Surface Area: 160.0 (ft²)
  - Dihedral: 0.0 deg
  - Leading Edge Flap Width: 0.0
  - Wetted Area Multiplier: 0.95
  - Taper Ratio: 0.3
  - T/C Ratio, Wing Root: 0.06
  - T/C Ratio, Wing Tip: 0.06
  - Trailing Edge Flap Width (% chord): 0.0
  - Position of Wing Quarter Chord: 0.55
  - Elevation of Wing on Fuselage: 1.0
  - Fraction of Wing Volume Filled with Fuel: 0.0
  - Fuel Density: 48.62
- Vertical Tail Geometry:
  - Aspect Ratio: 3.0
  - Surface Area: 20.0 (the area of 1 tail)
  - Tail Volume Coefficient: N/A

- LE Sweep: 30.0
- Wetted Area Multiplier: 0.9
- Taper Ratio: 0.50
- T/C Ratio, Root: 0.07
- T/C Ratio, Tip: 0.06
- Number of Vertical Tails: 1.0
- X Location of TE of the Root Chord: 1.0
- Elevation of the Root Chord of the Tail on Fuselage: 1.0
- Sizing Logic: F
- Vertical Tail Sizing Fraction: N/A

## Canard Geometry

- Aspect Ratio: 2.4
- Reference Area: 25.0 ft<sup>2</sup>
- Canard Volume Coefficient: N/A
- Leading Edge Sweep: 30.0 deg
- Wetted Area Multiplyer: 0.8
- Taper: 0.4
- T/C Ratio, Root: 0.06
- T/C Ratio, Tip: 0.06
- X Location of Canard LE: 0.05
- Elevation of Canard on Fuselage: 0.0
- Canard Location: 1
- Sizing Logic: F
- Sizing Fraction: N/A

## • 1 Fuselage Pod

- Fuselage Pod Geometry:
  - Engine Pod Diameter: 0.00 (will be sized as engine is sized)
  - Engine Pod Length: 0.00
  - Stand-Off Distance: -2.0
  - Angular Orientation: 0.0
  - X Location of Pod Leading Edge: 0.5
  - Wing Pod Symmetry: 1
- Fuselage Geometry:
  - Maximum Fuselage Diameter: 3.00
  - Fuselage Length: 19.0
  - Diameter of Nose RadarDish: 0.0
  - Afterbody Fineness Ratio: 1.9
  - Fuselage Fineness Ratio: 0.0

- Nose Fineness Ratio: 3.0
- Length of Radar Equipment Behind Radar: 0.0
- Surface Area Complexity Factor: 1.1 (10% more area to account for inlet)
- Fuselage Wall Thickness: N/A
- Mission Fuel Weight Estimate: 2000.0
- Tail Type: 1
- 1 Fuselage Fuel Bay
  - Fuel Density: 48.62 (JP-4)
- Trajectory Page 1:
  - Cruise Mach Number: 0.8
  - Mach Number for Max Endurance: 0.5
  - Design Load Factor: 10.0
  - Ultimate Load Factor: 15.0
  - Aircraft Range: 600.0
  - Maximum Dynamic Pressure: 1500.0
  - Take-Off Obstacle Requirement: N/A
- Trajectory Page 2:
  - Time for Warm-up and Taxi: 5.0
  - Power Setting During Warm-up and Taxi: 5
  - Time for Take-off: 0.5
  - Power Setting for Take-off: 1
  - Breguet Altitude Search Flag: 0
  - Loiter Altitude Search Flag: 0
- Trajectory Page 3:
  - Fuel Reserve: 0.05
  - Total Internal Fuel: 2500.0
  - External Fuel: 0.0
  - Weight of Trapped Fuel: 20.0
  - Engine Sizing Flag: -2
  - Number of Cruise Phases (see below): 2
  - Total number of Trajectory Phases (see below): 6
  - Debug Option: 0
- Trajectory Phases. Use 6.0 g's during combat.

TABLE 10. UAV Mission

Phase	Mach Start	Mach End	Alt Start	Alt End	Horiz Dist	Horiz Time	Power Setting
Climb	0.00	0.00	0	30000	0.0	0.0	2
Cruise	0.8	0.8	30000	-1	240	30.0	4
Accel	0.8	1.6	30000	-1	0	2.0	1
Combat	1.6	1.6	30000	-1	0	4.0	1
Cruise	0.8	0.8	30000	-1	160	20.0	4
Descent	0.00	0.00	30000	0	0.0	0.0	5

## • Aerodynamics Page 1:

- Ratio of Body Base Area to Max Body Area: 0.15
- Angle of Attack for Cl max: 35.0
- Maximum Angle of Attack: 40.0
- Width of the Fuselage at the Nose: 0.
- Boat Tail Exposure Factor: 0.0
- Cl max Scaling Factor for clean aircraft: 1.0
- Laminar-Turbulent Weighting Factor: 0.7

## • Aerodynamics Page 2:

- Ref Mach Number Array: 0.1, 0.2, 0.3, 0.4, 0.5, 0.6, 0.7, 0.8, 0.9, 1.0
- Cl at Zero AOA for Body: 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00

# • Aerodynamics Page 3:

- Variable Wing Sweep Flag: T
- Normal Mach Number Calculation Code: 0
- Desired Normal Component: 0.7
- Max Sweep: 60.0 - Min Sweep: 0.0

## • Aerodynamics page 4:

- Wing Airfoil Section Code: 1
- Wing LE Radius/Chord Ratio: N/A
- Canard Airfoil Section Code: 1
- Canard LE Radius/Chord Ratio: N/A
- Distance Between the Twin Nacelles: N/A
- Supercritical Wing Flag: 0
- Body Cross-section Code: 0

## • Aerodynamics Page 5:

- Pod Cowl Exposure Factor: 0.0
- Friction Drag Multiplying Factor: 0.7
- Canard Incidence: N/A
- Average Flap Chord: 0.
- Total Area of Both Wing Flap: 0.0
- Total Span of Both Flaps: 0.0
- Desired Location of CG: 0.25
- Static Margin for CG: 0.10
- Height of CG Above Fuselage Centerline: 0.0
- Horizontal Tail Incidence: 0.0

## • Aerodynamics Page 6:

- Mach Numbers for Detailed Aero Output: 0.6, 0.7, 0.8, 0.9, 1.0, 1.2, 1.4, 1.6
- Total Number of Requested Mach Numbers: 8
- Altitudes for Detailed Aero Output: 10000.0, 30000.0, 30000.0, 30000.0, 30000.0, 30000.0, 30000.0

## • Aerodynamics Page 7:

- Drag due to External Bombs: 0.0
- Drag due to External Stores: 0.0
- Drag due to Drop Tanks: 0.0
- Drag due to Additional Items: 0.0

## Aerodynamics Page 8:

- C<sub>L</sub> max for Landing: -1.0
- C<sub>L</sub> max for Take-off: -1.0
- TE Flap Angle for Landing: 0.0
- TE Flap Angle for Take-off: 0.0
- LE Slat Angle for Landing: 0.0
- LE Slat Angle for Take-off: 0.0

- L/D Ratio for Landing: -1.0
- L/D Ratio for Take-off: -1.0
- Enter "0" to Continue
- Engine Type: Change to Type 1 (J-85)
- Propulsion Page 1:
  - Engine Diameter: 0.0
  - Engine Length: 0.0
  - Engine Weight: 0.0
  - Inner Turbine Flow Area: 0.385
  - Bypass Ratio: 0.0
  - Engine Face Diameter: 1.365
  - Nozzle Fineness Ratio: 0.0
  - Cowl Fineness Ratio: 0.0
  - Enter "0" to Continue
- Propulsion Page 2:
  - Engine Hub/Tip Ratio: 0.6
  - Fuel Heat Value: 18600.0
  - Scaling Factor for Inlet Capture Area: 1.0
  - Engine Percent Corrected Airflow: 100.0
  - Maximum Nacelle Diameter Factor: 1.15
  - Total Nacelle Length Factor: 1.5
  - Engine Face Mach Number: 0.7
  - Distance Between Nozzles/Nozzle Diameter: 1.0
  - Nozzle Velocity Coefficient: 0.98
- Propulsion Page 3:
  - Cooling/Primary Airflow Ratio: 0.0
  - Year of Installation: 95.0
  - Thrust w/Afterburner: 9500.0
  - Thrust w/o Afterburner: N/A
  - Thrust/Weight Ratio at Take-off: N/A
  - Afterburner Adiabatic Efficiency: 0.9
  - Combustor Adiabatic Efficiency: 0.93
  - Ductburner Adiabatic Efficiency: N/A
  - Compressor Adiabatic Efficiency: 0.9
- Propulsion Page 4:
  - Fan Adiabatic Efficiency: N/A
  - Turbine Adiabatic Efficiency: 0.92
  - Design Fan Pressure Ratio: N/A

- Outer Compressor Pressure Ratio: 2.0
- Overall Compressor Pressure Ratio: 19.0
- Combustor Pressure Ratio: 0.95
- Afterburner Pressure Ratio: 0.95
- Afterburner Pressure Ratio, Not Lit: 0.95
- Ductburner Pressure Ratio: N/A
- Ductburner Pressure Ratio, Not Lit: N/A

## • Propulsion Page 5:

- Average Compressor Stage Rise: 1.27
- Turbine Inlet Temp: 2600.0
- Afterburner Max Temp: 3000.0
- Ductburner Max Temp: 0.0
- Incremental Inlet Total Press Recovery Reduction: 0.0
- Number of Engines: 1
- Inlet Pressure Recovery Code: 1

## • Propulsion Page 6:

- SFC Multiplying Factor for Condition One: 1.0
- Upper Limit on Mach Number for Condition One: 1.0
- SFC Multiplying Factor for Condition Two: 1.0
- Lower Limit on Mach Number for Condition Two: 1.1
- SFC Multiplying Factor for Burner Lit: 1.0
- Scale Factor for Nozzle Boat-Tail drag: 0.0
- Scale Factor for Total Installation Drag: 1.0
- Scale Factor for Nozzle Interference Drag: 0.0

## • Propulsion Page 7:

- Altitudes for Detailed Output: 0.0, 1000.0, 30000.0, 30000.0, 30000.0
- Mach Numbers for Detailed Output: 0.0, 0.6, 0.8, 1.0, 1.2, 1.6
- Number of Altitude/Mach Number Combinations without the Afterburner lit: 3
- Engine Type Indicator: 0
- Afterburner Indicator: 2
- Ductburner Indicator: 0
- Nozzle Type Indicator: 1

## Weights Page 1:

- Wing Slope: 0.8 (all composite construction)
- Fuselage Slope: 0.8
- Horizontal Tail: 0.0
- Vertical Tail: 0.8

- Nacelles: 0.0
- Landing Gear: 0.5 (parachute)
- Engines: 1.0 - Fuel System: 1.0 - Hydraulics: 1.0
- Weights Page 2:
  - Electrical System: 1.0
  - Avionics: 1.0
  - Instrumentation: 1.0
  - Environmental System: 0.0
  - Passenger Accommodations: 0.0
  - APU: 0.0
  - Flight Controls: 1.0
  - Crew Accommodations: 0.0
  - Payload: 400.0
- Weights Page 3:
  - Wing Pivot Factor: 1.0
  - External Tank Factor: 0.0
  - Maximum Mach Number: N/A
  - Oblique Wing Material Density: .056 (graphite/epoxy)
  - Oblique Wing Allowable Stress: 30000.0
  - Wing Weight Equation: N/A
  - Oblique Wing Weight Equation: 1
  - Tail Indicator: 0
  - Body Equation: 1
  - Wing Weight Technique: N/A
  - Estimate of Take-off Gross Weight: 5000.0
- Weights Page 4:
  - Weight of Ammunition: 0.0
  - Weight of Bombs: 0.0
  - Weight of Missiles: 0.0
  - Weight of External Tanks: 0.0

CCCCCC	0000	0000	PPP	PPPP	EEEEEE	SSSSSS
С	0	0	P	P	E	S
С	0	0	P	P	E	S
С	0	0	PPP	PPPP	EEEE	SSSSSS
С	0	0	P		E	S
C	0	O	P		E	S
cccccc	0000	0000	P		EEEEEEE	SSSSSS

CONTROL PROGRAM

FOR

ENGINEERING SYNTHESIS

TITLE

OBLIQUE WING UAV

#### TITLE: OBLIQUE WING UAV

CONTROL PAPAMETERS; CALCULATION CONTROL, NCALC = NUMBER OF GLOBAL DESIGN VARIABLES, NDV = NUMBER OF SENSITIVITY VARIABLES, NSV = 0 0 NUMBER OF FUNCTIONS IN TWO-SPACE, N2VAR = NUMBER OF APPROXIMATING VAR. NXAPRX = INPUT INFORMATION PRINT CODE, IPNPUT = NEURO PRINT CODE, INPUT = NEURO PRINT CODE 0 INPUT INFORMATION PRINT CODE, DEBUG PRINT CODE, IPDBG =

# CALCULATION CONTROL, NCALC

VALUE MEANING

- SINGLE ANALYSIS OPTIMIZATION 1
- SENSITIVITY
- TWO-VARIABLE FUNCTION SPACE
- OPTIMUM SENSITIVITY 5
- APPROXIMATE OPTIMIZATION

#### \* \* ESTIMATED DATA STORAGE REQUIREMENTS

	REAL			INTEGER	
INPUT	EXECUTION	AVAILABLE	INPUT	EXECUTION	AVAILABLE
9	9	5000	1	1	1000

AAAA	AAA	cccccc	SSSSSS	Y	Y	N	N	TTTTTTT
A	A	C	S	Y	Y	NN	N	T
A	A	C	S	Y	Y	n n	N	T
AAAA	AAA	Ċ	SSSSSSS	7	<b>Y</b>	n n	N	T
A	A	C	S	1	ľ	N	n n	T
A	Ä	Ċ	S	7	<b>r</b>	N	NN	T
A	A	cccccc	SSSSSSS	•	Ľ	N	N	T

NASA-AMES PROGRAM

FOR

AIRCRAFT SYNTHESIS

NAVAL POSTGRADUATE SCHOOL VERSION

TITLE

OBLIQUE WING UAV

AIRCRAFT TYPE - FIGHTER

# TITLE: OBLIQUE WING UAV

#### AIRCRAFT TYPE - FIGHTER

CONTROL PARAMETERS:			
READ CONTROL,	MREAD	_	5
EXECUTION CONTROL,	MEXEC	=	3
WRITE CONTROL, M	WRITE	_	5
NUMBER IDENTIFYING CONVERGENCE			
VARIABLE FOR CONVERGED VEHICLE,	IOBJ	=	570
NUMBER IDENTIFYING COMPARISON			
VARIABLE FOR CONVERGED VEHICLE,	JOBJ	-	585
SUMMARY OUTPUT PRINT CODE,	IPSUM	=	1
GLOBAL ERROR PRINT CODE, K	GLOBP	=	0
GLOBAL COMMON INITIALIZATION CODE,	INIT	=	0
DEBUG PRINT CODE,	IPDBG	_	2
GLOBAL PLOT CONTROL,	IGPLT	=	1
DATA TRANSFER INFORMATION FILE, IRD	DTR	=	7
DATA TRANSFER INFORMATION PRINT, IP	DTR	=	0

VEHICLE CONVERGENCE INFORMATION:
CONVERGENCE TOLERANCE, TOL = 0.10000E-03
ESTIM WCALC VS WEXT SLOPE = 0.75000E+00
BOUNDING WEIGHT, WGMAX = 0.10000E+05

#### MODULE IDENTIFICATION NUMBERS:

NUMBER	MODULE
1	GEOMETRY
2	TRAJECTORY
3	<b>AERODYNAMICS</b>
4	PROPULSION
5	STABILITY AND CONTROL
6	WEIGHTS
8	GLOBAL I/O
10	NAVY
11	SUMMARY OUTPUT
14	TAKEOFF AND LANDING

MODULES ARE CALLED FOR EXECUTION IN THE FOLLOWING ORDER: 1  $^{2}$ 

MODULES ARE CALLED FOR OUTPUT IN THE FOLLOWING ORDER: 1 2 3 4 6 CALLING MODULE NUMBER 1

```
GEOMETRY DATA CARDS
 1*** GEOMETRY DATA ***
 2 SQWING
                        AREA= 160.00, DIHED= 0.00,
       AR= 5.50,
       LFLAPC=0.00,
                        SWFACT=0.95,
                                         TAPER=0.30,
                        TCTIP=0.06.
                                         TFLAPC=0.00,
       TCROOT=0.06,
 5
       XWING=0.55, ZROOT= 1.
FDENWG= 48.62, OUTCOD=2,
                        ZROOT= 1.00,
                                         WFFRAC=0.00,
 7
 8
       $END
 9 SVTAIL
 10
                         AREA= 20.00,
SWFACT=0.90,
        AR= 3.00,
                                          CVVT=0.08,
                                          TAPER=0.50,
         SWEEP=30.00,
 11
        TCROOT=0.07,
 12
                         TCTIP=0.06,
                                          VTFRAC=0.000,
                                          YROOT=0.00.
                         XVTAIL=1.00,
 13
         VTNO=1.0,
                                          OUTCOD=2,
 14
        ZROOT=1.00,
                         KSWEEP=0,
 15
        SIZIT=F,
 16
         SEND
 17 $CANARD
                         AREA= 25.00,
                                          CVCAN=-0.80,
         AR= 2.40,
 18
                          SWFACT=0.80,
         SWEEP=30.00,
                                          TAPER=0.40.
 19
 20
         TCROOT=0.06,
                          TCTIP=0.06,
                                          XCAN=0.05,
         ZROOT= 0.00,
                                          NCAN=1,
 21
                          OUTCOD=2,
                                          SIZIT=F,
 22
         KSWEEP=0,
 23
         CFRAC=0.000,
                          $END
 24 SFPOD
                         LENGTH= 0.00, SOD=-2.00,
 25
        DIAM- 0.00,
         THETA= 0.00,
                         X=0.5,
                                          OUTCOD=2,
 26
 27
         SYMCOD=1,
 28
         $END
 29 SFUS
                         BODL= 19.00,
                                          DRADAR= 0.00,
         BDMAX= 3.00,
 30
                         FRATIO= 0.00,
                                          FRN= 3.00,
 31
         FRAB= 1.90,
         LRADAR= 0.00, SFFACT= 1
WFUEL= 2000.0, OUTCOD=2,
                         SFFACT= 1.10,
                                          WALL- 0.00,
 32
                                          ITAIL=0,
 33
         $END
 35 SFUEL
                          FRAC=1.00,
                                          WFUEL=
                                                       0.0,
 36
         DEN=48.62,
 37
         OUTCOD=2,
 38
         SEND
```

END OF GEOMETRY DATA CARDS 38 CARDS READ

```
ACSYNT
                              **INITIAL OUTPUT**
NASA/AMES
    FUSELAGE DEFINITION
                    AREA
           R
  0.00
          0.00
                    0.00
                    0.17
          0.23
  0.38
                    0.46
  0.76
          0.38
          0.51
                    0.82
  1.14
                    1.22
  1.52
          0.62
  1.90
          0.72
                    1.64
          0.81
                    2.08
  2.28
                    2.53
  2.66
          0.90
  3.04
          0.97
                    2.97
          1.04
                    3.41
  3.42
                    3.84
  3.80
          1.11
          1.16
                    4.26
  4.18
                    4.65
          1.22
  4.56
  4.94
          1.26
                    5.02
          1.31
                    5.37
  5.32
                    5.69
  5.70
          1.35
                    5.98
  6.08
          1.38
          1.41
                    6.24
  6.46
                    6.47
  6.84
          1.43
  7.22
          1.46
                    6.66
  7.60
          1.47
                    6.81
                    6.93
  7.98
          1.49
  8.36
          1.49
                    7.02
  8.74
                    7.06
          1.50
                    7.07
  9.12
          1.50
  9.50
          1.50
                    7.07
                    7.07
  9.88
          1.50
                    7.07
 10.26
          1.50
          1.50
                    7.07
 10.64
                    7.07
 11.02
                    7.07
 11.40
          1.50
                    7.07
          1.50
 11.78
                     7.07
          1.50
 12.16
 12.54
          1.50
                    7.07
                    7.07
 12.92
          1.50
                     7.07
 13.30
          1.50
 13.68
          1.49
                    7.02
                     6.88
 14.06
          1.48
 14.44
          1.45
                     6.65
                     6.33
 14.82
          1.42
          1.37
                     5.92
 15.20
 15.58
          1.32
                     5.44
                     4.89
 15.96
          1.25
                     4.28
 16.34
          1.17
 16.72
          1.07
                     3.62
                     2.93
 17.10
          0.97
 17.48
           0.84
                     2.22
           0.70
                     1.53
 17.86
                     0.88
           0.53
 18.24
 18.62
           0.32
                     0.33
 19.00
           0.00
                    0.00
                    **FUSELAGE**
MAX. DIAMETER.....
                      3.000
                         6.333
FINENESS RATIO....
                      155.787
SURFACE AREA.....
VOLUME.....
                       91.598
```

# NASA/AMES A C S Y N T \*\*INITIAL OUTPUT\*\* DIMENSIONS OF PLANAR SURFACES

	WING	H.TAIL	V.TAIL	CANARD	UNITS		
PLAN AREA	160.0	0.0	20.0	25.0	(SQ.FT.)		
SURFACE AREA	304.5	0.0	36.1	20.5	(SQ.FT.)		
VOLUME	39.7	0.0	2.5		(CU.FT.)		
SPAN	29.665	0.000	7.746	7.746			
L.E. SWEEP	5.592	0.000	30.000	30.000	(DEG.)		
C/4 SWEEP	0.000	0.000	27.555	21.741	(DEG.)		
T.E. SWEEP	-16.368	0.000	19.551	-7.797	(DEG.)		
ASPECT RATIO	5.500	0.000	3.000	2.400			
ROOT CHORD	8.298	0.000	3.443	4.611	(FT.)		
ROOT THICKNESS	5.974	0.000	2.892	3.320	(IN.)		
ROOT T/C	0.060	0.000	0.070	0.060			
TIP CHORD	2.489	0.000	1.721	1.844	(FT.)		
TIP THICKNESS	1.792	0.000	1.239	1.328	(IN.)		
TIP T/C	0.060	0.000	0.060	0.060			
TAPER RATIO	0.300	0.000	0.500	0.400			
MEAN AERO CHORD	5.915	0.000	2.678	3.425	(FT.)		
LE ROOT AT	8.376	0.000	15.557	0.950	(FT.)		
C/4 ROOT AT	10.450	0.000	16.418	2.103	(FT.)		
TE ROOT AT	16.673	0.000	19.000	5.561	(FT.)		
LE M.A.C. AT	8.971	0.000	17.545	1.908	(FT.)		
C/4 M.A.C. AT	10.450	0.000	18.214	2.765	(FT.)		
TE M.A.C. AT	14.886	0.000	20.223	5.333	(FT.)		
Y M.A.C. AT	6.085	0.000	3.443	1.660			
LE TIP AT	9.828	0.000	20.029	3.186	(FT.)		
C/4 TIP AT	10.450	0.000	20.460	3.647	(FT.)		
TE TIP AT	12.317	0.000	21.751	5.030	(FT.)		
ELEVATION	1.500	0.000	1.500	0.000	(FT.)		
VOLUME COEFF		0.000	0.033	-0.203			
EXTENSIONS Strake Rear Extension							

	Strake F	<b>lear Extensi</b> o	מכ
Centroid location at	. 0.000	0.000	
Area	. 0.000	0.000	
Wetted Area	. 0.000	0.000	
Volume	. 0.000	0.000	
Sweep Angle			

TANK	FUEL TA VOLUME	n K S Weight	DENSITY
WING	0.	ο.	48.62
FUS#1	0.	ο.	48.62
FUS#2	0.	0.	50.00
TOTAL		0.	

MISSION FUEL REQUIRED= 0.

AVAILABLE FUEL VOLUME IN WING- 32.

AIRCRAFT WEIGHT = 0.000 Lbs.
AIRCRAFT VOLUME = 137.419 Cu.Ft.
0.000 Lbs./Cu.Ft.

CASE= 4

CALLING MODULE NUMBER 2

# TRAJECTORY INPUT

TIMTO1 = 5.0	MENDUR = 0.	NCRUSE = 2	IPLOT = 0
TIMTO2 = 0.5	QMAX = 1500.	IPSIZE =-2	HMINP = 0.
FRFURE = 0.05	XDESC = 80.0	IPSTO1 = 5	HMAXP = 40000.
DESLF =, 10.00	WKFUEL = 1.000	IPSTO2 = 1	DELHP = 4000.
ULTLF =15.00	CRMACH = 0.800	IBREG = 0	SMMINP = 0.300
RANGE = 600.	WKLAND = 0.570	IENDUR = 0	SMMAXP = 0.900
WFUEL = 2500.	FLFAC = 0.600	IPRINT = 0	DELMP = 0.100
WFEXT = 0.	DECEL = 0.250	KERROR = 2	WCOMBP = 0.50
WFTRAP = 20.	NLEGCL = 0	NLEGCR = 0	NLEGLO = 0
FWGMAX = 1.200	TOL = 0.001	MILCOM = 0	NMISS = 1
			NCODE = 0
$\mathbf{MMPROP} = 1$			

# MISSION 1

PHASE	MACH N		TUDE	HORIZ DIST	ONTAL TIME	NO. TURN	VIND "G"S	WKFUEL	M	IP	IX	W	B	A	P
CLIMB	0.00 0.	00 0	30000	0.0	0.0	0.0	0.0	1.0000	1	2	0	0	0	0	0
CRUISE	0.80 0.	80 30000	-1	240.0	30.0	0.0	0.0	1.0000	1	4	0	0	0	0	0
ACCEL	0.80 1.	60 30000	-1	0.0	2.0	0.0	0.0	1.0000	1	1	0	0	0	0	0
COMBAT	1.60 1.	60 30000	-1	0.0	4.0	0.0	6.0	1.0000	1	1	0	0	0	0	0
CRUISE	0.80 0.	80 30000	-1	160.0	20.0	0.0	0.0	1.0000	1	4	0	0	0	0	0
DESCENT	0.00 0.	00 30000	0	0.0	0.0	0.0	0.0	1.0000	1	5	0	0	0	0	0

CALLING MODULE NUMBER 3
CALLING MODULE NUMBER 4

#### PROPULSION INPUT VERSION 04-76

#### \*\*\* PROPULSION DATA \*\*\*

AENDIA =	0.000	Aenle =	0.000	AENWT	-	0.000		
ALTI =	0.000	AM =	0.000	ATURB	-	0.385		
AENTW -	0.000							
AUAENG =	0.000	AWAENG =	0.157		•	0.000		
DELPR =	0.000	DELT57 =	100.000	DEPWCC	=	2.000		
DIA1 -	1.365	eabi -	0.900	EB1	-	0.930		
ED1 -	0.750	ETAC1 =	0.900	ETAF1		0.900		
ETAT1 -	0.920	HTR =	0.600	HVF	<b>= 1860</b>	000.00		
MACH1 =	1.000	MACH2 =	1.100	PCDFAC	-	1.000		
POSA =	29.920	PRFD =	1.000	PWCC	<b>~</b> 10	000.00		
P11P1 -	2.000	P2P1 =	21.000	R10A	-	-1.000		
R32 =	0.950	R54 =	0.950	R54N	=	0.950		
R711 =	0.980	R711N =	0.820	SCPR	=	1.270		
SPADP =	1.000	SFADSP =	1.000	SFAUXP	=	1.000		
SPBEP =	1.000	SFBPP =	1.000	SFBTP	-	0.000		
SPDIVP =	1.000	SFINSP =	1.000	SFIP	-	0.000		
SFSFC1 =	1.000	SFSFC2 =	1.000	SFSFC3	-	1.000		
SM1 =	0.700	SODG =	1.000	TOSA	<b>=</b> 51	18.000		
TR =	520.000	TWAB =	9500.	TWOAB	=	2720.		
TWTO =	0.500	T3 =	2600.	T5M	=	3400.		
T51 =	3000.	T7M =	3400.	T71	=	0.		
VC1 =	0.980	WCWA1 =	0.000	XMDES	*	0.850		
XMT =	0.850	YREN =	95.	FRBT	=	0.000		
FRPN =	0.000	RDIAM =	1.150	RLENG	=	1.500		
7DD	1	Indiam -	0	IPLOT	•	0		
IPR = KERROR =	0	IPRINT = KODE =	ŏ	RT5	_	2		
	Ö	MINPR =	ĭ	NAB	=	3		
_	1		6	NSUMM	_	15		
NOZZ =	1	NPROP =	•	ieng	-	13	(J85 )	
				IENG	-	-	(065 /	
These var Esf =	RIABLES ARE 1.000	USED BY THE NOTALL =	ABLE LOOK 0 IPDBUG		iprin'	r = 0		
ALTD =	0.	10000.	30000.	30000.	. 31	0000.	30000.	
XMACH =	0.000	0.600	0.800	1.000	) :	1.200	1.600	
XMPRI =	0.000	0.300	0.600	0.900	) ;	1.200	4.000	
XPRI =	1.000	1.000	1.000	1.000	) :	1.000	1.000	
XMPRI1 =	0.000	0.000	0.000	0.00	00	0.000	0.000	0.000
	0.000	0.000	0.000					
XPRI1 -	0.000	0.000	0.000	0.000	) (	0.000	0.000	0.000
	0.000	0.000	0.000	, <del>-</del> -		-		
XMPRI2 =	0.000	0.000	0.000	0.00	00	0.000	0.000	0.000
	0.000	0.000	0.000		-		· · · ·	
XPRI2 =	0.000	0.000	0.000	0.000	)	0.000	0.000	0.000
	0.000	0.000	0.000	2.30				
CALLI	NG MODULE I							

# INITIAL WEIGHTS INPUT DATA ACSYNT MODULE NUMBER 6

AIRCRAFT TYPE: FIGHTER
TITLE: \*\*\* WEIGHTS DATA \*\*\*

#### CONTROL OPTIONS

#### INITIAL ESTIMATES

IF CODE = 1, WEIGHT IS FIXED

QUANTITY		ANTITY VALUE CODE		YTITMAUQ	VALUE	CODE	
WAF	-	1500.	0	WAIRC =	50.	0	
WAPU	=	0.	0	WAMMUN =	0.	0	
WARM	=	0.	0	WBAG =	0.	0	
WBB1	=	0.	0	WBODY =	800.	0	
WCAND	-	0.	0	WCARGO =	0.	0	
WCREW	=	100.	0	WE =	550.	0	
WELT	=	200.	0	WEP =	125.	0	
WETANK	_	0.	0	WFEO =	690.	0	
WFS	=	140.	Ō	WCA =	140.	Ó	
WGEAR	=	15.	0	WHDP =	60.	0	
WHT	-	55.	Ö	WINST =	55.	Ö	
WLG	-	200.	0	WMISS =	0.	Ó	
WNA	-	50.	Ō	WPA =	0.	Ö	
WPASS	=	0.	Ö	WPL =	400.	1	
WPS	-	690.	Ö	WSC =	150.	ō	
WTSUM	-	5000.	0	WVT =	50.	Ó	
WWING	=	400.	Ö	WBOMB =	0.	ŏ	
WENVP	-	0.	Ö	WPIV =	0.	ŏ	
WLIFTF	-	ŏ.	ŏ	WBB2 =	o.	ŏ	

### \* \* \* BEGIN VEHICLE CONVERGENCE

ESTIMATED GROSS WEIGHT = 0.50000E+04
CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

HN = 0.0000000E+00 A = 0.1116450E+04 SMN = 0.2613667E+00
RHO = 0.2376891E-02 Q = 0.1011949E+03

DXCRUS = 0.0000000E+00 W = 0.3301159E+04

# CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49873E+04

SLOPE OF WCALC VS WEST LINE = 0.75000E+00

ESTIMATED GROSS WEIGHT = 0.49494E+04

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER

A = 0.1116450E+04SMN = 0.2594699E+00RHO = HN = 0.0000000E+00

0.2376891E-02 Q = 0.9973146E+02

DXCRUS = 0.0000000E+00 W = 0.3258455E+04

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49751E+04

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.49833E+04

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER 2

HN = 0.0000000E+00A = 0.1116450E+04SMN = 0.2605657E+00RHO =

0.2376891E-02 Q = 0.1005756E+03

DXCRUS = 0.0000000E+00 W = 0.3286344E+04

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49896E+04

SLOPE OF WCALC VS WEST LINE = 0.30000E+00

ESTIMATED GROSS WEIGHT = 0.49895E+04

CALLING MODULE NUMBER 1

CALLING MODULE NUMBER

HN = 0.0000000E+00A = 0.1116450E+04SMN = 0.2607631E+00RHO =

Q = 0.1007281E+030.2376891E-02

DXCRUS = 0.0000000E+00W = 0.3291383E+04

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49923E+04

SLOPE OF WCALC VS WEST LINE = 0.43083E+00

ESTIMATED GROSS WEIGHT = 0.49944E+04 CALLING MODULE NUMBER 1 CALLING MODULE NUMBER 2

HN = 0.0000000E+00A = 0.1116450E+04SMN = C.2609215E+00RHO =

0.2376891E-02 Q = 0.1008505E+03

DXCRUS = 0.0000000E+00 W = 0.3295425E+04

CALLING MODULE NUMBER 6

CALCULATED GROSS WEIGHT = 0.49943E+04

\* \* \* END VEHICLE CONVERGENCE

4 CONVERGENCE ITERATIONS REQUIRED

CALLING MODULE NUMBER 1
CALLING MODULE NUMBER 2

SUMMARY OF NON FATAL ERRORS ENCOUNTERED IN PROP

P5 IS LESS THAN P6S 1 TIMES

SUMMARY OF NON FATAL ERRORS ENCOUNTERED IN PROP

P5 IS LESS THAN P6S TIMES SUMMARY OF NON FATAL ERRORS ENCOUNTERED IN PROP P5 IS LESS THAN P6S 1 TIMES SUMMARY OF NON FATAL ERRORS ENCOUNTERED IN PROP P5 IS LESS THAN P6S 1 TIMES SUMMARY OF NON FATAL ERRORS ENCOUNTERED IN PROP P5 IS LESS THAN P6S 1 TIMES SUMMARY OF NON FATAL ERRORS ENCOUNTERED IN PROP P5 IS LESS THAN P6S 1 TIMES SUMMARY OF NON FATAL ERRORS ENCOUNTERED IN PROP P5 IS LESS THAN P6S 1 TIMES SUMMARY OF NON FATAL ERRORS ENCOUNTERED IN PROP P5 IS LESS THAN P6S 1 TIMES SUMMARY OF NON FATAL ERRORS ENCOUNTERED IN PROP P5 IS LESS THAN P6S 1 TIMES SUMMARY OF NON FATAL ERRORS ENCOUNTERED IN PROP P5 IS LESS THAN P6S 1 TIMES

HN = 0.00000000E+00 A = 0.1116450E+04 SMN = 0.2609196E+00 RHO = 0.2376891E-02 Q = 0.1008490E+03 DXCRUS = 0.0000000E+00 W = 0.3295376E+04

CALLING MODULE NUMBER 6 CALLING MODULE NUMBER 1

```
**FINAL OUTPUT**
NASA/AMES
            ACSYNT
                                                     NACELLE LOCATION
                              NACELLE DEFINITION
   FUSELAGE DEFINITION
                                              AREA
                                                      X Y
                                                                       Z
                 AREA
                           X-XNOSE
                                       R
          R
                                       1.04
                                                       9.50
                                                               0.46
                                                                      0.00
                                               3.41
          0.00
                    0.00
                            0.00
  0.00
                                      1.04
                              1.98
                                               3.41
                   0.17
  0.38
          0.23
                                      1.04
                                              3.41
                               5.93
  0.76
          0.38
                   0.46
                                     1.04
  1.14
          0.51
                   0.82
                               7.91
                                               3.41
          0.62
                    1.22
  1.52
  1.90
          0.72
                    1.64
          0.81
                    2.08
  2.28
                   2.53
  2.66
          0.90
          0.97
  3.04
                    2.97
                   3.41
          1.04
  3.42
  3.80
          1.11
                   3.84
          1.16
                    4.26
  4.18
          1.22
  4.56
                   4.65
  4.94
          1.26
                   5.02
  5.32
          1.31
                   5.37
                   5.69
  5.70
          1.35
  6.08
          1.38
                   5.98
                   6.24
  6.46
          1.41
                   6.47
  6.84
          1.43
          1.46
                   6.66
  7.22
          1.47
                   6.81
  7.60
  7.98
          1.49
                    6.93
          1.49
                   7.02
  8.36
          1.50
                    7.06
  8.74
  9.12
          1.50
                    7.07
  9.50
          1.50
                   7.07
                    7.07
          1.50
  9.88
 10.26
          1.50
                    7.07
 10.64
          1.50
                    7.07
 11.02
          1.50
                    7.07
 11.40
          1.50
                    7.07
          1.50
                    7.07
 11.78
                    7.07
 12.16
          1.50
          1.50
                    7.07
 12.54
                    7.07
          1.50
 12.92
 13.30
          1.50
                    7.07
 13.68
          1.53
                    7.37
 14.06
          1.55
                    7.57
 14.44
          1.56
                    7.68
          1.56
                    7.69
 14.82
                    7.59
 15.20
          1.55
          1.53
 15.58
                    7.39
 15.96
          1.50
                    7.08
 16.34
          1.46
                    6.67
 16.72
          1.40
                    6.15
 17.10
          1.33
                    5.54
 17.48
          1.24
                    4.82
 17.86
          1.13
                    4.02
          1.00
                    3.14
 18.24
 18.62
           0.83
                    2.16
                    0.93
 19.00
          0.54
                   **FUSELAGE**
                                         **PODS**
                                            2.082
MAX. DIAMETER.....
                        3.000
FINENESS RATIO....
                         6.333
                                   .... 51.755 (EACH)
                     166.616
SURFACE AREA.....
                      101.658
VOLUME.....
```

#### NASA/AMES A C S Y N T \*\*FINAL OUTPUT\*\* DIMENSIONS OF PLANAR SURFACES

	WING	H.TAIL	V.TAIL	CANARD	UNITS
PLAN AREA	160.0	0.0	20.0	25.0	(SQ.FT.)
SURFACE AREA	304.5	0.0	36.1	20.5	(SQ.FT.)
VOLUME	39.7	0.0	2.5	3.6	(CU.FT.)
SPAN	29.665	0.000	7.746	7.746	(FT.)
L.E. SWEEP	5.592	0.000	30.000	30.000	(DEG.)
C/4 SWEEP	0.000	0.000	27.555	21.741	(DEG.)
T.E. SWEEP	-16.368	0.000	19.551	-7.797	(DEG.)
ASPECT RATIO	5.500	0.000	3.000	2.400	
ROOT CHORD	8.298	0.000	3.443	4.611	(FT.)
ROOT THICKNESS	5.974	0.000	2.892	3.320	(IN.)
ROOT T/C	0.060	0.000	0.070	0.060	
TIP CHORD	2.489	0.000	1.721	1.844	(FT.)
TIP THICKNESS	1.792	0.000	1.239	1.328	(IN.)
TIP T/C	0.060	0.000	0.060	0.060	
TAPER RATIO	0.300	0.000	0.500	0.400	
MEAN AERO CHORD	5.915	0.000	2.678	3.425	(FT.)
LE ROOT AT	8.376	0.000	15.557	0.950	(FT.)
C/4 ROOT AT	10.450	0.000	16.418	2.103	(FT.)
TE ROOT AT	16.673	0.000	19.000	5.561	(FT.)
LE M.A.C. AT	8.971	0.000	17.545	1.908	(FT.)
C/4 M.A.C. AT	10.450	0.000	18.214	2.765	(FT.)
TE M.A.C. AT	14.886	0.000	20.223	5.333	(FT.)
Y M.A.C. AT	6.085	0.000	3.443	1.660	
LE TIP AT	9.828	0.000	20.029	3.186	(FT.)
C/4 TIP AT	10.450	0.000	20.460	3.647	(FT.)
TE TIP AT	12.317	0.000	21.751	5.030	(FT.)
ELEVATION	1.500	0.000	1.500	0.000	(FT.)
VOLUME COEFF		0.000	0.033	-0.203	
		•			

#### EXTENSIONS

	Strake	Rear	Extension
Centroid location at	0.000	0.	.000
Area	0.000	0.	.000
Wetted Area	0.000	0.	.000
Volume	0.000	0.	.000
Sweep Angle	0.000	)	

	FUEL T	ANKS	
TANK	volume	<b>WEIGHT</b>	DENSITY
WING	0.	0.	48.62
FUS#1	37.	1804.	48.62
FUS#2	0.	0.	50.00
TOTAL		1804.	

MISSION FUEL REQUIRED= 1804.

32. AVAILABLE FUEL VOLUME IN WING-

AIRCRAFT WEIGHT = 4994.351 Lbs.
AIRCRAFT VOLUME = 147.479 Cu.Ft.
AIRCRAFT DENSITY = 33.865 Lbs./Cu.Ft.

CASE= 4

CALLING MODULE NUMBER 2

TRAJECTORY OUTPUT

MISSION 1 (PAYLOAD = 400. LB)

PHASE	M	н	CL	ALPHA	WFUEL	TIME	VEL
	SFC(I)	THRUST(I)	CD	GAMMA	W	WA	Q
	SFC(U)	THRUST (U)	CDINST	L/D	THR/THA	PR	x
	SEC (0)	IRCSI(U)	CDINGI	2,0	TOTAL TARRE	- • •	
CLIMB	0.94	30000.	0.0627	0.89	49.4	0.62	936.
	1.00	3283.	0.0067	36.81	4772.4	43.78	390.
CYCLE	0.99	0.	0.0007	9.29	1.00	1.00	з.
V. V.		• •					
CRUISE	0.80	30000.	0.1030	1.25	181.9	30.54	796.
	1.02	348.	0.0077	0.00	4590.5	28.41	282.
CYCLE	1.02	348.	0.0000	13.35	0.11	1.00	240.
V-V-							
ACCEL	1.60	30000.	0.0248	0.77	130.8	0.73	1592.
	1.74	8601.	0.0345	0.00	4459.6	81.96	1128.
CYCLE	1.71	8733.	0.0007	0.72	1.86	0.95	9.
COMBAT	1.60	30000.	0.1450	4.19	891.9	4.00	1592.
	1.66	8061.	0.0445	0.00	3567.8	81.96	1128.
CYCLE	1.63	8733.	0.0007	3.26	1.74	0.95	63.
		•					
CRUISE	0.80	30000.	0.0773	0.93	115.6	20.36	796.
••••	1.06	321.	0.0071	0.00	3452.2	28.31	282.
CYCLE	1.06	321.	0.0000	10.91	0.10	1.00	160.
V. V.		7			*****		
DESCENT	0.26	0.	0.2480	3.08	156.8	23.98	291.
	1.29	435.	0.0143	3.30	3295.4	50.04	101.
CYCLE	1.29	435.	0.0000	17.37	0.06	1.00	85.

#### FUEL SUMMARIES

1699. MISSION FUEL = 85. RESERVE FUEL = TRAPPED FUEL = 20.

TOTAL FUEL = 1804.

TAKEOFF FUEL WFT01 = 56. WFT02 = 116.

FUEL CARRIED :

EXTERNALLY = 0. INTERNALLY = 1804.

#### ADDITIONAL COMBAT PARAMETERS

CONDITIONS PS NZ TDOT RADIUS ALPHA CL CD 
 1 G FLIGHT
 848.2
 1.00
 0.00
 0.76
 0.025
 0.0345

 SUSTAINED
 0.0
 6.85
 7.85
 11619.
 4.73
 0.165
 0.0475

 MAX. INST.
 -835.1
 10.00
 11.52
 7915.
 6.20
 0.221
 0.0573
 M= 1.60 H=30000. COMBAT ENERGY = 0.203564E+06

BLOCK TIME = 1.337 HOURS
BLOCK RANGE = 559.5 N. M.

TAKEOFF FIELD LENGTH (TOTAL RUN) = 2417. FEET
LANDING FIELD LENGTH (TOTAL RUN) = 12617. FEET
LANDING FIELD LENGTH (GROUND RUN) = 2742. FEET
WEIGHT FOR LANDING CALCULATION = 3978. POUNDS

LANDING THRUST TO WEIGHT RATIO = 2.388

TAKEOFF WEIGHT = 4994. POUNDS LANDING WEIGHT = 3295. POUNDS

CALLING MODULE NUMBER 3 Detailed Aerodynamics Output

Mach = 0.60Altitude = 10000.

Parasite Drag	•	Induce	ed Drag							
Friction	.0055	Alpha	C1	Cd	L/D	Cm	e 0	dtrim D	eltrim Zo	ne
Body	.0016	Ō.O	0.000	0.0070	0.0	0.000	0.00	0.0000	0.0	3
Wing	.0032	3.0	0.268	0.0157	17.1	0.029	0.48	0.0000	0.0	3
Strakes	.0000	6.0	0.512	0.0440	11.7	0.053	0.41	0.0000	0.0	3
H. Tail	.0000	0.0	0.000	0.0070	0.0	0.000	0.00	0.0000	0.0	3
V. Tail	.0005	9.0	0.732	0.0910	8.1	0.072	0.37	0.0000	0.0	3
Canard	.0003	12.0	0.927	0.1544	6.0	0.087	0.34	0.0000	0.0	3
Pods	.0000	15.0	1.096	0.2316	4.7	0.099	0.31	0.0000	0.0	3
Engine	.0000	18.0	1.240	0.3198	3.9	0.108	0.28	0.0000	0.0	3
Cowl	.0000	21.0	1.363	0.4193	3.3	0.115	0.26	0.0000	0.0	3
Boattail	.0000	24.0	1.474	0.5421	2.7	0.121	0.24	0.0000	0.0	3
Interference	.0015			·						
Wave	.0000									
External	.0000			s	lope Fa	actors				
Tanks	.0000				Clalp	ha	0.061	4		
Bombs	.0000				Cd1^.	5Alpha	0.030	5		

Stores Extra	.0000
Camber	.0000
Cdmin	.0070

# FOR AN OBLIQUE WING

SWEEP = 0.00 YAWED ASPECT RATIO = 5.50 DRAG RISE MACH NO. = 0.000

#### FOR VARIABLE SWEEP

SWEEP = 0.00 SWEPT ASPECT RATIO = 5.50 DRAG RISE MACH NO. = 0.000

Mach = 0.70 Altitude = 30000.

Parasite Drag	•	Induc	ed Drag							
Friction	.0054	Alpha	C1	Cd	L/D	Cm	• (	Cdtrim	Deltrim Zo	ne
Body	.0016	·o.o	0.000	0.0069	0.0	0.000	0.00	0.0000	0.0	3
Wing	.0031	3.0	0.280	0.0165	16.9	0.024	0.47	0.0000	0.0	3
Strakes	.0000	6.0	0.535	0.0475	11.3	0.043	0.41	0.0000	0.0	3
H. Tail	.0000	0.0	0.000	0.0069	0.0	0.000	0.00	0.0000	0.0	3
V. Tail	.0005	9.0	0.764	0.0985	7.8	0.058	0.37	0.0000	0.0	3
Canard	.0003	12.0	0.967	0.1670	5.8	0.069	0.34	0.0000	0.0	3
Pods	.0000	15.0	1.143	0.2498	4.6	0.077	0.31	0.0000	0.0	3
Engine	.0000	18.0	1.294	0.3440	3.8	0.083	0.29	0.0000	0.0	3
Cowl	.0000	21.0	1.421	0.4497	3.2	0.087	0.26	0.0000	0.0	3
Boattail	.0000	24.0	1.537	0.5795	2.7	0.090	0.24	0.0000	0.0	3
Interference	.0015									
Wave	.0000									
External	.0000			S	lope F	actors				
Tanks	.0000				Clalp	ha	0.064	10		
Bombs	.0000				Cdl^.	5Alpha	0.031	.5		
Stores	.0000					•				
Extra	.0000									
Camber	.0000									
Cdmin	.0069									

# FOR AN OBLIQUE WING

SWEEP = 0.05 YAWED ASPECT RATIO = 5.50 DRAG RISE MACH NO. = 0.000

#### FOR VARIABLE SWEEP

SWEEP = 0.05 SWEPT ASPECT RATIO = 5.50 DRAG RISE MACH NO. = 0.000

# Detailed Aerodynamics Output

Mach = 0.80 Altitude = 30000.

Parasite Drag	1	Induce	d Drag							
Friction	.0049	Alpha	Cl	Cd	L/D	Cm	• 0	dtrim De	ltrim Zo	ne
Body	.0015	0.0	0.000	0.0063	0.0	0.000	0.00	0.0000	0.0	3
Wing	.0026	3.0	0.241	0.0149	16.1	002	0.50	0.0000	0.0	3
Strakes	.0000	6.0	0.459	0.0420	10.9	005	0.44	0.0000	0.0	3
H. Tail	.0000	0.0	0.000	0.0063	0.0	0.000	0.00	0.0000	0.0	3
V. Tail	.0005	9.0	0.655	0.0862	7.6	009	0.40	0.0000	0.0	3
Canard	.0003	12.0	0.829	0.1453	5.7	014	0.37	0.0000	0.0	3
Pods	.0000	15.0	0.981	0.2167	4.5	019	0.34	0.0000	0.0	3
Engine	.0000	18.0	1.112	0.2980	3.7	024	0.31	0.0000	0.0	3
Cowl	.0000	21.0	1.226	0.3899	3.1	030	0.29	0.0000	0.0	3
<b>Boattail</b>	.0000	24.0	1.335	0.5062	2.6	037	0.26	0.0000	0.0	3
Interference	.0015									
Wave	.0000									
External	.0000			s	lope F	actors				
Tanks	.0000				Claip	ha	0.055	6		
Bombs	.0000				Cdl^.	5Alpha	0.029	5		
Stores	.0000					_				
Extra	.0000									
Camber	.0000									
Cdmin	.0063									

# FOR AN OBLIQUE WING

SWEEP = 29.01 YAWED ASPECT RATIO = 4.31 DRAG RISE MACH NO. = 0.000

# FOR VARIABLE SWEEP

SWEEP = 29.01 SWEPT ASPECT RATIO = 4.31 DRAG RISE MACH NO. = 0.000

Mach = 0.90 Altitude = 30000.

Parasite Drag	:	Induce	d Drag							
Friction	.0046	Alpha	C1 T	Cđ	L/D	Cm	• 0	dtrim De	ltrim Zo	ne
Body	.0015	ō.o	0.000	0.0061	0.0	0.000	0.00	0.0000	0.0	3
Wing	.0024	3.0	0.213	0.0140	15.2	007	0.52	0.0000	0.0	3
Strakes	.0000	6.0	0.405	0.0385	10.5	015	0.46	0.0000	0.0	3
H. Tail	.0000	0.0	0.000	0.0061	0.0	0.000	0.00	0.0000	0.0	3
V. Tail	.0005	9.0	0.577	0.0783	7.4	023	0.42	0.0000	0.0	3
Canard	.0003	12.0	0.729	0.1310	5.6	031	0.39	0.0000	0.0	3
Pods	.0000	15.0	0.864	0.1944	4.4	040	0.36	0.0000	0.0	3
Engine	.0000	18.0	0.981	0.2668	3.7	048	0.34	0.0000	0.0	3
Cowl	.0000	21.0	1.085	0.3492	3.1	057	0.31	0.0000	0.0	3
Boattail	.0000	24.0	1.241	0.5258	2.4	074	0.27	0.0000	0.0	3
Interference	.0015									
Wave	.0000									
External	.0000			S	lope F	actors				
Tanks	.0000				Clalp	ha	0.051	7		
Bombs	.0000				Cdl^.	5Alpha	0.030	0		

 Stores
 .0000

 Extra
 .0000

 Camber
 .0000

Cdmin ,0061

#### FOR AN OBLIQUE WING

SWEEP = 38.99
YAMED ASPECT RATIO = 3.49
DRAG RISE MACH NO. = 0.000

#### FOR VARIABLE SWEEP

SWEEP = 38.99 SWEPT ASPECT RATIO = 3.49 DRAG RISE MACH NO. = 0.000 Detailed Aerodynamics Output

Mach = 1.00 Altitude = 30000.

Parasite Drag	<b>?</b>	Induce	d Drag							
Friction	.0044	Alpha	C1	Cd	L/D	Cm.	• 0	dtrim Del		Ue
Body	.0015	0.0	0.000	0.0346	0.0	0.000	0.00	0.0000	0.0	3
Wing	.0022	3.0	0.192	0.0420	4.6	010	0.54	0.0000	0.0	3
Strakes	.0000	6.0	0.365	0.0648	5.6	020	0.48	0.0000	0.0	3
H. Tail	.0000	0.0	0.000	0.0346	0.0	0.000	0.00	0.0000	0.0	3
V. Tail	.0005	9.0	0.519	0.1014	5.1	031	0.44	0.0000	0.0	3
Canard	.0002	12.0	0.656	0.1497	4.4	041	0.41	0.0000	0.0	3
Pods	.0000	15.0	0.824	0.2375	3.5	064	0.37	0.0000	0.0	3
Engine	.0000	18.0	0.930	0.3133	3.0	080	0.34	0.0000	0.0	3
Cowl	.0000	21.0	1.024	0.3992	2.6	096	0.31	0.0000	0.0	3
Boattail	.0000	24.0	1.109	0.5017	2.2	111	0.29	0.0000	0.0	3
Interference	.0003									
Warra	0200									

Interference .0003
Wave .0298
External .0000 Slope Factors
Tanks .0000 ClAlpha 0.0462
Bombs .0000 Cd1^.5Alpha 0.0285
Stores .0000
Extra .0000
Camber .0000

# FOR AN OBLIQUE WING

Cdmin

SWEEP = 45.62 YAWED ASPECT RATIO = 2.91 DRAG RISE MACH NO. = 0.000

.0346

#### FOR VARIABLE SWEEP

SWEEP = 45.62 SWEPT ASPECT RATIO = 2.91 DRAG RISE MACH NO. = 0.000 Mach = 1.20 Altitude = 30000.

Parasite Drag	Ī	Induce	ad Drag							
Friction	.0041	Alpha	Cl	Cd	L/D	Cm	e 0	dtrim Del	ltrim Zo	ne
Body	.0014	0.0	0.000	0.0360	0.0	0.000	0.00	0.0000	0.0	5
Wing	.0020	3.0	0.170	0.0444	3.8	0.000	0.51	0.0000	0.0	5
Strakes	.0000	6.0	0.364	0.0742	4.9	0.000	0.51	0.0000	0.0	6
H. Tail	.0000	0.0	0.000	0.0360	0.0	0.000	0.00	0.0000	0.0	5
V. Tail	.0004	9.0	0.394	0.0911	4.3	0.000	0.42	0.0000	0.0	6
Canard	.0002	12.0	0.493	0.1274	3.9	0.000	0.39	0.0000	0.0	6
Pods	.0000	15.0	0.611	0.1778	3.4	0.000	0.39	0.0000	0.0	6
Engine	.0000	18.0	0.741	0.2468	3.0	0.000	0.39	0.0000	0.0	6
Cowl	.0000	21.0	0.878	0.3362	2.6	0.000	0.38	0.0000	0.0	6
Boattail	.0000	24.0	1.008	0.4414	2.3	0.000	0.37	0.0000	0.0	6
Interference	.0002									
Wave	.0317									
External	.0000			s	lope Fa	actors				
Tanks	.0000				CIAlp		0.042	0		
Bombs	.0000				-	5Alpha	0.026	5		
Stores	.0000					•				
Extra	.0000									
Camber	.0000									
Cdmin	.0360									

# FOR AN OBLIQUE WING

SWEEP = 54.36 YAWED ASPECT RATIO = 2.15 DRAG RISE MACH NO. = 0.000

#### FOR VARIABLE SWEEP

SWEEP = 54.36 SWEPT ASPECT RATIO = 2.15 DRAG RISE MACH NO. = 0.000 Detailed Aerodynamics Output

Mach = 1.40 Altitude = 30000.

Parasite Drag	ı	Induce	d Drag							
Friction	.0038	Alpha	Cl	Cd	L/D	Cm	• C	dtrim Del	trim Zo	пe
Body	.0013	ō.o	0.000	0.0351	0.0	0.000	0.00	0.0000	0.0	5
Wing	.0018	3.0	0.100	0.0403	2.5	0.000	0.36	0.0000	0.0	5
Strakes	.0000	6.0	0.210	0.0563	3.7	0.000	0.39	0.0000	0.0	5
H. Tail	.0000	0.0	0.000	0.0351	0.0	0.000	0.00	0.0000	0.0	5
V. Tail	.0004	9.0	0.318	0.0821	3.9	0.000	0.40	0.0000	0.0	6
Canard	.0002	12.0	0.437	0.1199	3.6	0.000	0.42	0.0000	0.0	6
Pods	.0000	15.0	0.560	0.1695	3.3	0.000	0.44	0.0000	0.0	6
Engine	.0000	18.0	0.687	0.2325	3.0	0.000	0.45	0.0000	0.0	6
Cowl	.0000	21.0	0.831	0.3183	2.6	0.000	0.46	0.0000	0.0	6
Boattail	.0000	24.0	0.971	0.4201	2.3	0.000	0.46	0.0000	0.0	6
Interference	.0002			-						
Wave	.0311									
External	.0000			S	lope F	actors				
Tanks	.0000				ClAlp	ha	0.040	5		
Bombs	.0000				Cdl^.	5Alpha	0.025	9		

Stores .0000 Extra .0000 Camber .0000

Cdmin .0351

# FOR AN OBLIQUE WING

SWEEP = 60.00 YAWED ASPECT RATIO = 1.70 DRAG RISE MACH NO. = 0.000

#### FOR VARIABLE SWEEP

SWEEP = 60.00 SWEPT ASPECT RATIO = 1.70 DRAG RISE MACH NO. = 0.000

Mach = 1.60 Altitude = 30000.

Parasite Drag	;	Induce	d Drag							
Friction	.0036	Alpha	C1	Cd	L/D	Cm	• C	dtrim Del		
Body	.0013	ō.o	0.000	0.0341	0.0	0.000	0.00	0.0000	0.0	5
Wing	.0017	3.0	0.102	0.0394	2.6	0.000	0.37	0.0000	0.0	5
Strakes	.0000	6.0	0.214	0.0558	3.8	0.000	0.40	0.0000	0.0	5
H. Tail	.0000	0.0	0.000	0.0341	0.0	0.000	0.00	0.0000	0.0	5
V. Tail	. 0004	9.0	0.333	0.0840	4.0	0.000	0.42	0.0000	0.0	5
Canard	.0002	12.0	0.456	0.1242	3.7	0.000	0.43	0.0000	0.0	5
Pods	.0000	15.0	0.563	0.1710	3.3	0.000	0.43	0.0000	0.0	6
Engine	.0000	18.0	0.689	0.2347	2.9	0.000	0.44	0.0000	0.0	6
Cowl	.0000	21.0	0.830	0.3202	2.6	0.000	0.45	0.0000	0.0	6
Boattail	.0000	24.0	0.973	0.4249	2.3	0.000	0.45	0.0000	0.0	6
Interference	.0002									
Wave	.0304									
External	.0000			S	lope F					
Tanks	.0000				Clalp	ha	0.040	5		
Bombs	.0000				Cd1^.	5Alpha	0.026	0		
Stores	.0000					-				
Extra	.0000									
Camber	.0000									

#### FOR AN OBLIQUE WING

Cdmin

SWEEP = 60.00 YAMED ASPECT RATIO = 1.70 DRAG RISE MACH NO. = 0.000

.0341

#### FOR VARIABLE SWEEP

SWEEP = 60.00 SWEPT ASPECT RATIO = 1.70 DRAG RISE MACH NO. = 0.000 CALLING MODULE NUMBER 4

#### ENGINE SUMMARY

```
ENGINE DIAMETER = 1.81 FEET
ENGINE LENGTH= 5.27 FEET
ENGINE WEIGHT= 841.06 POUNDS
BYPASS RATIO = 0.00
NO OF ENGINES PER AC =
                      160.00 SQ FEET
A/C DRAG REF AREA =
INLET CAPTURE AREA PER ENG = 1.587 SQ FEET
      - PERCENT OF ENGINE CORRECTED AIRFLOW
PWCC
THRUST - ENGINE THRUST (POUNDS PER ENGINE)
      = ENGINE SPECIFIC FUEL CONSUMPTION
= ENGINE TOTAL AIRFLOW (LBS/SEC PER ENGINE)
SFC
WTOT
OV EF - ENGINE OVERALL EFFICIENCY
PR EF = ENGINE PROPULSIVE EFFICIENCY
      = INLET TOTAL PRESSURE RECOVERY (TO EN FACE)
TPR
NPR
      - NOZZLE PRESSURE RATIO
       - TURBINE INLET TEMPERATURE (DEG R)
TIT
EGT
      - ENGINE EXHAUST GAS TEMPERATURE
       = OVERALL COMPRESSOR PRESSURE RATIO
CPR
THRUSTU- THRUST PER ENGINE IN LBS, W/O INSTAL DRAG CORR
SFCU
      = SFC, 1/HR, W/O INSTALLATION DRAG CORR
ABYAC = FREESTREAM BYPASS FLOW AREA/AC
ABLAC = FREESTREAM INLET BLEED FLOW AREA/AC
ANOZ
      = AREA OF NOZZLE EXIT, FT**2
      = NOZZLE BOATTAIL ANGLE IN DEGREES
BETA
AO/AC = FREE STREAM TO CAPTURE AREA RATIO
CDINS - TOT INSTALLATION DRAG COEF PER A/C (SWING REF)
CDADD = ADDITIVE DRAG COEF PER A/C (SWING REF)
CDSP
       = SUBSONIC SPILL DRAG COEFF PER A/C (SWING REF)
      - INLET BLEED DRAG COEF PER A/C (SWING REF)
CDBL
      - INLET BYPASS DRAG PER A/C (SWING REF)
CDBP
CDAUX = AUX AIR SYSTEM DRAG COEF PER A/C (SWING REF)
CDDIV = INLET BO. LAYER DIVERT DRAG PER A/C (SWING REF)
CDBT = NOZZLE BOATTAIL DRAG COEF PER A/C (SWING REF)
CDINF - DRAG COEF OF BASE AREA BETWEEN NOZZLES (PER A/C)
 INSTALL DRAG COEF SCALE FACTORS
SFINSP =
            1.0000
SFADP =
             1.0000
SFADSP =
             1.0000
             1.0000
SFBEP =
SFBPP =
             1.0000
SFAUXP =
             1.0000
SFDIVP =
             1.0000
SFIP =
             0.0000
SFBTP =
             0.0000
```

	MACH =	0.000	ALTITUDE =	O.OO FEET
--	--------	-------	------------	-----------

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF	PR EF Anoz	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIA	CDBT	CDINF
100.0	6844.	0.816 0.816		0.000	0.000 3.12	1.000 15.89	4.95	2600.	1917.	22.54
	1000.000						0.0000	0.0000	0.0000	0.0000
98.0	6268.	0.781	73.	0.000	0.000	1.000	4.45	2457.	1782.	21.47
	6268. 1000.000	0.781	0.000	0.000	3.12	15.89		0.0000		
							***************************************	************		
96.0	5711. 5711.		71. 0.000	0.000	0.000 3.12	1.000 15.86	3.99	2319.	1653.	20.44
	1000.000						0.0000	0.0000	0.0000	0.0000
94.0	5171.	0.714	70.	0.000	0.000	1.000	3.56	2188.	1530.	19.43
	5171. 1000.000	0.714		0.000				0.0000		0 0000
	1000.000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
92.0	4648. 4648.	0.681	68. 0.000	0.000			3.15	2062.	1413.	18.47
	1000.000			0.000			0.0000	0.0000	0.0000	0.0000
22.0	44.25		45							
90.0		0.650		0.000	0.000 3.12	15.44	2.77	1943.	1302.	17.53
	1000.000						0.0000	0.0000	0.0000	0.0000
88.0	3636.	0.620	65.		0.000	1.000	2.42	1829.	1197.	16.64
	3636. 1000.000			0.000	3.12	15.14		0.0000		
	1000.000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
86.0	3142. 3142.	0.593 0.593		0.000			2.10	1721.	1098.	15.77
	1000.000						0.0000	0.0000	0.0000	0.0000
84.0	2646.	0.572	63.	0.000	0.000	1.000	1.81	1618.	1005.	14.94
	2646.	0.572	0.000	0.000	3.12	13.99		_		
	1000.000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
82.0		_					1.55	1521.	918.	14.13
	2135. 1000.000		0.000				0.0000	0.0000	0.0000	0.0000

- 80.0 1580. 0.583 60. 0.000 0.000 1.000 1.31 1429. 836. 13.37 1580. 0.583 0.000 0.000 3.12 10.80 1000.000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000
- 78.0 877. 0.767 58. 0.000 0.000 1.000 1.10 1342. 761. 12.63 877. 0.767 0.000 0.000 3.12 4.93 1000.000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000

#### MACH = 0.600 ALTITUDE = 10000.00 FEET

PWCC	THRUST	SFC SFCU	WTOT	OV EF	PR EF ANOZ	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
	,						•	****		
100.0	5041.		65.	0.166		1.000	6.31	2596.	1914.	22.54
	5041.	0.970	0.000	0.000		14.89				
	1.126	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
98.0	4558.	0.541			0.375		5.68	2452.	1779.	21.47
	4558.	0.941				14.92				
	1.104	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
96.0	4093.	0.913		0.176			5.09	2315.	1650.	20.44
	4093.			0.000		14.93				
	1.081	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
94.0	3645.	0.887	61.	0.181	0.416	1.000	4.53	2184.	1527.	19.43
	3645.	0.887		0.000		14.91				
	1.059	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
92.0	3213.	0.863	60.	0.186	0.441	1.000	4.02	2059.	1411.	18.47
	3213.	0.863		0.000		14.85				
	1.036	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
90.0	2795.	0.842	59.	0.191	0.469	1.000	3.53	1940.	1300.	17.53
	2795.			0.000		14.72				
	1.014	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
88.0	2391.	0.826	58.	0.195	0.502	1.000	3.09	1826.	1195.	16.64
	2391.	0.826	0.000	0.000		14.53				
	0.991	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
86.0	1997.	0.818	56.	0.197	0.540	1.000	2.68	1718.	1096.	15.77
	1997.	0.818	0.000	0.000	3.12	14.25	, -			
	0.969	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000

84.0	1610. 1610. 0.946	0.824 0.824 0.0000		0.000	3.12	1.000 13.82 0.0000	 1615. 0.0000	 14.94
82.0	1224. 1225. 0.924	0.859	54. 0.000 0.0000		0.646 3.12 0.0000			
80.0	831.	0.970 0.970 0.0000	0.000		3.12			
78.0	411. 411. 0.879	1.435 1.435 0.0000	51. 0.000 0.0000	0.000	0.844 3.12 0.0000	1.000 10.32 0.0000	 1339. 0.0000	 12.63 0.0000

# MACH = 0.800 ALTITUDE = 30000.00 FEET

PWCC	THRUST THRUSTU AO/AC	SFC SFCU CDINS	WTOT ABYAC CDADD	OV EF ABLAC CDSP	PR EF ANOZ CDBL	TPR BETA CDBP	NPR CDAUX	TIT	EGT CDBT	CPR CDINF
	,									
100.0	2480.	0.936	36.	0.212	0.432	1.000	7.45	2328.	1700.	22.54
	2480.	0.936	0.000	0.000	3.12	14.05				
	0.985	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
98.0	2236.	0.910	35.	0.218	0.452	1.000	6.71	2199.	1580.	21.47
	2236.	0.910	0.000	0.000	3.12	14.11				
	0.965	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
96.0	2000.	0.886	34.	0.224	0.473	1.000	6.00	2076.	1464.	20.44
	2000.	0.886	0.000	0.000	3.12	14.14				
	0.945	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
94.0	1774.	0.863	34.	0.230	0.497	1.000	5.34	1959.	1355.	19.43
	1774.	0.863	0.000	0.000	3.12	14.15				
	0.926	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
92.0	1557.	0.843	33.	0.235	0.523	1.000	4.72	1846.	1250.	18.47
	1557.	0.843	0.000	0.000	3.12	14.12				
	0.906	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
90.0	1349.	0.826	32.	0.240	0.553	1.000	4.15	1739.	1152.	17.53
	1349.	0.826	0.000	0.000	3.12	14.04				
				0.0000		0.0000	0.0000	0.0000	0.0000	0.0000

88.0 1147. 0.814 31. 0.243 0.587 1.000 3.63 1638. 1058. 16.64 1147. 0.814 0.000 0.000 3.12 13.90 0.866 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 
 952.
 0.810
 31.
 0.244
 0.625
 1.000
 3.15
 1541.
 971.
 15.77

 952.
 0.810
 0.000
 0.000
 3.12
 13.68

 0.847
 0.0000
 0.0000
 0.0000
 0.0000
 0.0000
 0.0000
 0.0000
 0.0000
 86.0 761. 0.821 30. 0.241 761. 0.821 0.000 0.000 0.671 1.000 3.12 13.35 84.0 2.71 1449. 888. 14.94 0.827 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 574. 0.862 29. 0.230 0.726 1.000 2.31 1362. 811. 14.13 574. 0.862 0.000 0.000 3.12 12.86 0.807 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 82.0 387. 0.978 29. 0.203 0.795 1.000 387. 0.978 0.000 0.000 3.12 12.10 80.0 1.95 1279. 739. 13.37 0.788 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 194. 1.417 28. 0.140 0.889 1.000 194. 1.416 0.000 0.000 3.12 10.88 78.0 1.64 1201. 672. 12.63 0.768 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000

# MACH = 1.000 ALTITUDE = 30000.00 FEET

#### AFTERBURNER OR DUCTBURNER (OR BOTH) LIT

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF	PR EF ANOZ	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0	4899.	1.661	43.	0.151	0.384	1.000	9.32	2478.	1820.	22.54
	4954.	1.643	0.000	0.000	3.12	9.76				
	0.948	0.0008	0.0000	0.0000	0.0000	0.0000	0.0000	0.0008	0.0000	0.0000
100.0	4786.	1.624	43.	0.154	0.388	1.000	9.32	2478.	1820.	22.54
	4841.	1.605	0.000	0.000	3.12	9.93			40400	
	0.948	0.0008		0.0000			0.0000	0.0008	0.0000	0.0000
100.0	4672.	1.586	43.	0.158	0.392	1.000	9.32	2478.	1820.	22.54
	4727.	1.567	0.000	0.000	3.12	10.10				
	0.948	0.0008	0.0000	0.0000	0.0000	0.0000	0.0000	0.0008	0.0000	0.0000
100.0	4557.	1.547	43.	0.162	0.397	1.000	9.32	2478.	1820.	22.54
	4612.	1.529	0.000	0.000	3.12	10.27	3.02			,
	0.948					0.0000	0.0000	0 0000	0 0000	0.0000
	0.340	0.0000	0.000	J. JUUU	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000

1.509 43. 0.166 0.401 1.000 9.32 2478. 1820. 22.54 1.490 0.000 0.000 3.12 10.45 4442. 1.509 4497. 1.490 100.0 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0000 0.0008 0.0000 0.0000 4325. 1.470 43. 0.171 0.406 1.000 9.32 2478. 1820. 22.54 4380. 1.452 0.000 0.000 3.12 10.63 100.0 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0008 0.0000 0.0000 4207. 1.431 43. 0.175 0.411 1.000 9.32 2478. 1820. 22.54 4262. 1.412 0.000 0.000 3.12 10.81 100.0 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0008 0.0000 0.0000 0.416 1.000 3.12 11.00 
 4088.
 1.391
 43.
 0.180

 4143.
 1.372
 0.000
 0.000
 9.32 2478. 1820. 22.54 100.0 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 3968. 1.350 43. 0.186 4023. 1.332 0.000 0.000 0.422 1.000 3.12 11.20 9.32 2478. 1820. 22.54 100.0 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0000 0.0008 0.0000 0.0000 3847. 1.310 43. 0.192 3902. 1.291 0.000 0.000 0.428 1.000 3.12 11.40 9.32 2478. 1820. 22.54 100.0 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0000 0.0008 0.0000 0.0000 3724. 1.268 43. 0.198 3779. 1.250 0.000 0.000 0.434 1.000 9.32 2478. 1820. 22.54 3.12 11.61 100.0 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000 3599. 1.226 43. 0.205 0.441 1.000 9.32 2478. 1820. 22.54 3654. 1.207 0.000 0.000 3.12 11.83 100.0 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0000 0.0008 0.0000 0.0000 0.448 1.000 3.12 12.05 3473. 1.183 43. 0.213 3528. 1.164 0.000 0.000 9.32 2478. 1820. 22.54 100.0 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0000 0.0008 0.0000 0.0000 3345. 1.139 43. 0.221 3400. 1.120 0.000 0.000 100.0 3345. 1.139 0.455 1.000 9.32 2478. 1820. 22.54 3.12 12.28 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0000 0.0008 0.0000 0.0000 3216. 1.093 43. 0.230 3271. 1.075 0.000 0.000 0.463 1.000 3.12 12.52 100.0 9.32 2478. 1820. 22.54 0.948 0.0008 0.0000 0.0000 0.0000 0.0000 0.0000 0.0008 0.0000 0.0000

# MACH = 1.200 ALTITUDE = 30000.00 FEET

# AFTERBURNER OR DUCTBURNER (OR BOTH) LIT

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF	PR EF ANOZ	TPR BETA	NPR	TIT	EGT	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIV	CDBT	CDINF
100.0	5925. 6004.	1.660 1.638	53. 0.000	0.181	0.433 3.12	0.991 8.48	11.46	2600.	1901.	22.54
			0.0000			0.0000	0.0000	0.0008	0.0000	0.0000
100.0	5781. 5860.	1.624 1.602	53. 0.000	0.186	0.438 3.12	0.991 8.65	11.46	2600.	1901.	22.54
			0.0000	• • •		0.0000	0.0000	0.0008	0.0000	0.0000
100.0	5636. 5715.	1.587 1.565		0.190	0.442 3.12	0.991 8.83	11.46	2600.	1901.	22.54
			0.0000			0.0000	0.0000	0.0008	0.0000	0.0000
100.0	5490.	1.550		0.195	0.447	0.991	11.46	2600.	1901.	22.54
	5569. 0.968	1.528	0.000	0.000	3.12 0.0000	9.01	0.0000	0.0008	0.0000	0.0000
100.0	5343. 5422.	1.512 1.490	53. 0.000	0.199	0.452 3.12	0.991 9.20	11.46	2600.	1901.	22.54
				0.0000		0.0000	0.0000	0.0008	0.0000	0.0000
100.0	5195.	1.474		0.205	0.457		11.46	2600.	1901.	22.54
	527 <b>4.</b> 0.968	1.452 0.0008	0.000	0.000	3.12 0.0000	9.39 0.0000	0.0000	0.0008	0.0000	0.0000
100.0	5045.	1.436 1.414		0.210			11.46	2600.	1901.	22.54
	5124. 0.968		0.000		3.12 0.0000	9.58	0.0000	0.0008	0.0000	0.0000
100.0	4894.	1.397		0.216		0.991	11.46	2600.	1901.	22.54
	4973. 0.968	1.375	0.000	0.000	3.12 0.0000	9.79 0.0000	0.0000	0.0008	0.0000	0.0000
100.0	4741.	1.358		0.222	0.474		11.46	2600.	1901.	22.54
	4820. 0.968	1.336		0.000	3.12 0.0000	9.99	0.0000	0.0008	0.0000	0.0000
100.0	4586.	1.318		0.229			11.46	2600.	1901.	22.54
	4665. 0.968	1.296 0.0008		0.000	3.12 0.0000	10.21	0.0000	0.0008	0.0000	0.0000

100.0	4430. 4509.	1.277	53. 0.000	0.237	0.487 3.12	0.991 10.43	11.46	2600.	1901.	22.54
	0.968	0.0008	0.0000	0.0000	0.0000	0.0000	0.0000	0.0008	0.0000	0.0000
100.0	4272.	1.236	53.		0.494		11.46	2600.	1901.	22.54
	4351. 0.968	0.0008	0.000	0.000	3.12 0.0000	10.65	0.0000	0.0008	0.0000	0.0000
100.0	4112.	1.193	53.		0.501		11.46	2600.	1901.	22.54
	4191. 0.968	1.171	0.000	0.000	3.12 0.0000	10.89	0.0000	0.0008	0.0000	0.0000
100.0	3949.	1.150	53.		0.509	0.991	11.46	2600.	1901.	22.54
	4028. 0.968	0.0008	0.000	0.000	3.12 0.0000	11.13	0.0000	0.0008	0.0000	0.0000
100.0	3784.	1.105	53.	0.274	0.517	0.991	11.46	2600.	1901.	22.54
	3863. 0.968	1.083	0.000	0.000	3.12 0.0000	11.39	0.0000	0.0008	0.0000	0.0000

# MACH = 1.600 ALTITUDE = 30000.00 FEET

# AFTERBURNER OR DUCTBURNER (OR BOTH) LIT

PWCC	THRUST THRUSTU	SFC SFCU	WTOT ABYAC	OV EF	PR EF ANOZ	TPR BETA	NPR	TIT	egt	CPR
	AO/AC	CDINS	CDADD	CDSP	CDBL	CDBP	CDAUX	CDDIA	CDBT	CDINF
100.0	8601. 8733.	1.741	82. 0.000	0.231	0.530 3.12	0.954 4.07	14.37	2600.	1780.	22.54
	1.129	0.0007	0.0000	0.0000	0.0000	0.0000	0.0000	0.0007	0.0000	0.0000
100.0	8369.	1.706	82.	0.236	0.534	0.954	14.37	2600.	1780.	22.54
	8500. 1.129	1.680	0.000	0.000	3.12	4.28	0 0000	0 0007	0.0000	0 0000
				***************************************		0.0000	0.0000	0.0007	0.0000	0.0000
100.0	8134. 8266.	1.671	82. 0.000	0.241	0.539 3.12	0.954	14.37	2600.	1780.	22.54
	1.129	0.0007					0.0000	0.0007	0.0000	0.0000
100.0	7898.	1.635	82.	0.246	0.545	0.954	14.37	2600.	1780.	22.54
	8030. 1.129	1.608	0.000	0.000	3.12 0.0000	4.70	0.0000	0.0007	0.0000	0.0000

100.0	7661. 1.		0.252	0.550 3.12		14.37	2600.	1780.	22.54
		.572 0.000 0007 0.0000			4.92	0.0000	0.0007	0.0000	0.0000
100.0	_	.562 82. .535 0.000	0.258	0.556 3.12	0.954 5.14	14.37	2600.	1780.	22.54
		0007 0.0000				0.0000	0.0007	0.0000	0.0000
100.0		.526 82. .498 0.000		0.562 3.12		14.37	2600.	1780.	22.54
		0007 0.0000				0.0000	0.0007	0.0000	0.0000
100.0		.488 82. .460 0.000		0.568 3.12	0.954 5.61	14.37	2600.	1780.	22.54
		0007 0.0000				0.0000	0.0007	0.0000	0.0000
100.0		.450 82. .422 0.000				14.37	2600.	1780.	22.54
		0007 0.0000				0.0000	0.0007	0.0000	0.0000
100.0		.412 82.		0.581 3.12	0.954 6.11	14.37	2600.	1780.	22.54
		0007 0.0000				0.0000	0.0007	0.0000	0.0000
100.0	6187. 1. 6319. 1.		0.295	0.589 3.12	0.954 6.37	14.37	2600.	1780.	22.54
		0007 0.0000				0.0000	0.0007	0.0000	0.0000
100.0		.332 82.		0.596 3.12	0.954 6.64	14.37	2600.	1780.	22.54
	1.129 0.0	0007 0.0000	0.0000	0.0000		0.0000	0.0007	0.0000	0.0000
100.0	5673. 1. 5805. 1.	.291 82. .262 0.000	0.314	0.604 3.12	0.954 6.91	14.37	2600.	1780.	22.54
		0007 0.0000				0.0000	0.0007	0.0000	0.0000
100.0		.249 82. .219 0.000		0.613 3.12	0.954 7.20	14.37	2600.	1780.	22.54
		0007 0.0000				0.0000	0.0007	0.0000	0.0000
100.0		.205 <b>82</b> .		0.622 3.12	0.954 7.50	14.37	2600.	1780.	22.54
		0007 0.0000				0.0000	0.0007	0.0000	0.0000

SEA-LEVEL STATIC THRUST = 9500. (MAX)
SEA-LEVEL SFC = 1.468
CALLING MODULE NUMBER 6

# WEIGHT STATEMENT - FIGHTERS \*\*\* WEIGHTS DATA \*\*\* ACSYNT MODULE NUMBER 6

COMPONENT	POUNDS	KILOGRAMS	PERCENT
AIRFRAME STRUCTURE	1138.	516.	22.79
WING	421.	191.	8.43
FUSELAGE	535.	243.	10.71
HORIZONTAL TAIL	0.	0.	0.00
VERTICAL TAIL	50.	23.	1.01
CANARD	17.	8.	0.34
NACELLES	13.	6.	0.26
ALIGHTING GEAR	102.	46.	2.05
PROPULSION	1093.	496.	21.89
ENGINES (1)	976.	443.	19.53
FUEL SYSTEM	118.	53.	2.36
FIXED EQUIPMENT	559.	254.	11.19
HYD. + PNEU.	42.	19.	0.84
ELECTRICAL	90.	41.	1.80
AVIONICS	210.	95.	4.20
instrumentation	29.	13.	0.58
DE-ICE/AIR CONDITION	0.	0.	0.00
AUXILIARY GEAR	26.	12.	0.53
FURNISH. + EQPT.	0.	0.	0.00
FLIGHT CONTROLS	162.	73.	3.24
FUEL	1804.	818.	36.12
PAYLOAD	400.	181.	8.01
flight crew ( 0)	0.	0.	0.00
armament	0.	0.	0.00
<b>AMMUNITION</b>	0.	0.	0.00
Missiles	0.	0.	0.00
BOMBS	0.	0.	0.00
external tanks	0.	0.	0.00
ADV. WEAPONS 1	0.	o.	0.00
ADV. WEAPONS 2	0.	0.	0.00
CALCULATED WEIGHT	4994.	2265.	100.00
ESTIMATED WEIGHT	4994.	2265.	

0.00

PERCENT ERROR
CALLING MODULE NUMBER 11

# SUMMARY --- ACSYNT OUTPUT --- NASA, AMES RESEARCH CENTER

#### OBLIQUE WING UAV

GENE	RAL	FUS	ELAGE		WING	CANARD	VTAIL
WG	4994.	LENGTH	19.0	AREA	160.0	25.0	20.0
W/S	31.2	DIAMETER	3.0	WETTED AREA	304.5	20.5	36.1
T/W	1.90	VOLUME	101.7	SPAN	29.7	7.7	7.7
N(Z) UL	T 15.0	WETTED AR	EA 166.6	L.E. SWEEP	5.6	30.0	32.3
CREW	ο.	FINENESS	RATIO 6.3	C/4 SWEEP	0.0	21.7	27.6
PASENGERS 0.				ASPECT RATIO	5.50	2.40	3.00
				TAPER RATIO	0.30	0.40	0.50
engine		WEI	GHTS	T/C ROOT	0.06	0.06	0.07
				T/C TIP	0.06	0.06	0.06
NUMBER	1.		W WG	ROOT CHORD	8.3	4.6	3.4
LENGTH	5.3	STRUCT.	1138. 22.8	TIP CHORD	2.5	1.8	1.7
DIAM.	1.8	PROPUL.	1093. 21.9	M.A. CHORD	5.9	3.4	2.7
WEIGHT	841.1	FIX. EQ.	559. 11.2	LOC. OF L.E.	8.4	0.9	15.6
TSLS	9500.	FUEL	1804. 36.1				
SFCSLS	1.47	PAYLOAD	400. 8.0				

# MISSION SUMMARY

PHASE	MACH	ALT	FUEL	TIME	DIST	L/D	THRUST	SFC	Q
TAKEOFF	0.00	0.	173.	5.5	2416.9				
CLIMB	0.94	30000.	49.	0.6	2.6	9.29	3282.6	1.004	389.8
CRUISE	0.80	30000.	182.	30.5	240.0	13.35	348.3	1.023	282.1
ACCEL	1.60	30000.	131.	0.7	9.3	0.72	8601.2	1.741	1128.4
COMBAT	1.60	30000.	892.	4.0	62.9	3.26	8061.2	1.660	1128.4
CRUISE	0.80	30000.	116.	20.4	160.0	10.91	320.7	1.063	282.1
DESCENT	0.26	0.	157.	24.0	84.7	17.37	434.5	1.286	100.8
LANDING					12617.1				

BLOCK TIME = 1.337 HR BLOCK RANGE = 559.5 NM

# COMBAT PHASES

MACH ALT PSIG NZS CLS CDS ALS NZI PSI CLI CDI ALI CBE 1.60 30000. 848. 6.9 0.145 0.0445 4.2 10.0 -835. 0.221 0.0573 6.2203564.

# XIV. TROUBLESHOOTING

# A. OVERVIEW

While every effort has been made with CREATE to prevent errors from occuring with ACSYNT, crashes still occur, typically when working with a new design. When ACSYNT does crash, a printout like the one in Figure 8 occurs. This printout can be used in tracking down the probable source of the error so that a correction may be made. On the right side of the output is a listing of the ACSYNT subroutines that were in use at the time of the crash. The first

nodule name	routine name	line	rel PC	abs PC
			0015E79E	0015E79E
			0015E69B	0015E69B
			0015 <b>A</b> 818	0015A818
RODR	PRODR	318	00001882	000F1686
PRODR1	PRODR1	9	0000003E	000F45C6
ROPEXEC	PROPEXEC	13	00000034	000F7FF8
OVER3	OVER3	62	00000049	00105229
ACSCYC	ACSCYC	92	000001D8	000DBFA0
ACSOUT	ACSOUT	24	00000062	OOODBABA
ANALIZ	ANALIZ	30	080000080	000DB488
COPES	COPES	247	000008E8	000CD6E8

Figure 8. Sample Error Output

subroutine (in this case PRODR) is the subroutine where the error occured.

The ACSYNT "chain" traces down to COPES, the main entry point for ACSYNT. Knowing that the error occured in the PRODR subroutine lets the

user know that the probable cause lies with the Propulsion inputs. A listing of the subroutines for each Module of ACSYNT is given in the listings below. Note that the user does not have control over all of the Modules shown below, but they are given for completeness.

- ACSYNT Control: ACSCYC, ACSIN, ACSOUT, ANALIZ, AT62, CONVG, DATAIO, DATARD, SUMARY, SUMCVT, SUMPRT, TAINT
- Analysis Methods: COPES, COPE01 through COPE18, CONMIN, CNMN01 through CNMN08, OVER1
- Geometry Module: AVOL, AVWING, BDREQD, BDYOUT, BODY1, BODY2, CHECKR, CHECKX, CRWSIZ, ERROR, FUSFIT, GCALC2, GEOM1, GINIT, GINPUT, GPLOT, GPRINT, GREAD, LOCELE, LOCENG, LOCFUL, LOCREW, LOCPAY, OVER2, PASSIZ, PLOTA5, PLOTA6, PLOTA7, PLOTA8, PLOTV2, PODLOC, PRFUEL, PRINTOUT, SCANER, SIZE, STRCALC, SWPANG, TAILS, TAILXX, VOLWNG, WCOOR, WNGOUT
- Trajectory Module: ACCEL, CLIMB, COMBAT, CONVGR, CRUISE, DESCNT, FINDG, GOLDEN, LOITER, MAXRC, MISSION, OVER3, TAKEOF, TRAJA, TRAJDT, TRAJIN, TRAJOI, TRAJOO, TRPLOT
- Aerodynamics Module: AERO2, AEROX, AXE, AXEIN, AZROIN, BCLCD, BIV, COGEOM, DATIN, DATOUT, DECIDE, ENDRAG, EXTRDG, FDCLCD, FLAPS, FRCTN, FRICN, FUDGE, GEOM, GEOMB, GEOMC, GEOMN, GEOSET, INITIAL, INTERPOLATE, INTFDG, LIFT, MAIN, THERMO, TRIMDG, WAVE1, WAVE3, WAVEDG
- Propulsion Module: BRCKT1, BRCKT2, CDADDI, CDAUXI, CDBTA, CDBTAIL, CDBYPA, CDDIVI, CHLSKY, COMP, ENGCDI, ENGSET, ENGWT, GABSOIL, INPUT, INTRPL, LEWIS\_ENGINE\_SCALE, LSTSQR, MATMPY, OFFD1, PODGEO, PRINL, PRODR, PRODR1, PRODR2, PRODR3, PROP, PROPEXEC, PROUT, PRSUBS, SIZIN, TURBI, TURBOU, XINLET, XPODGEO, XZEROIN, ZEROIN
- Weights Module: WAVE00 through WAVE03

CREATE has removed virtually all probability of errors with the Geometry, Aerodynamics and Weights modules. Errors do occur with the Trajectory and Propulsion modules. The most common ones are given in the following sections.

### B. TRAJECTORY ERRORS

Trajectory errors are almost always associated in some form with the propulsion system installed on the design, typically due to insufficient or too much thrust. Listed below are the more prevelant errors and the solutions.

- Mach Number Exceeds 2.0 in Climb Phase: When this occurs the rate of climb is set to 0.0, which results in an additional warning of "Ceiling Reached". This can occur for designs with a high thrust to weight ratio climbing at a high throttle setting. Reduce the throttle and if climbing more than 20,000 feet, try using two climb phases instead of 1.
- Drag is Greater than Thrust: This may be caused by several factors. The most common is to have a poorly defined geometry. A high thickness to chord ratio on a supersonic aircraft can result in a high wave drag, or the nose fineness ratio may not be high enough. Engine thrust also dies out as the mach number increases. Running a turbojet at speeds in excess of mach 2.4 is difficult with ACSYNT. If a swept wing is being used, ensure that the sweep is programmed correctly. Also ensure that the engine efficiencies are set correctly. This warning will also occur if the time is set to 0.0 during an acceleration phase.

# C. PROPULSION ERRORS

The following error messages may occur with the Propulsion Module. The solutions are taken from Reference 4.

- P5 is Less Than P6S: The total pressure at the nozzle entrance is less than the free stream static pressure. This is the result of removing too much energy from the primary flow with the turbines. Increase the throttle setting, decrease the energy required for the fan or increase the altitude.
- <u>Fuel-Air Mixture is Greater Than Stoich:</u> The fuel-air mixture in the afterburner or ductburner is greater than stoichiometric. Reduce the combustion temperature.
- <u>T5 is Less Than T4M:</u> The afterburner entry temperature is less than the turbine exit temperature. Increase the afterburner combustion temperature.
- T7 is Less Than T11: The ductburner temperature is less than the fan exit temperature. Increase the ductburner combustion temperature.
- <u>T41D is Negative</u>: The turbine exit temperature is negative. The turbine inlet temperature is too low or too much energy is being removed by the turbine.

## APPENDIX A

```
PROGRAM CREATE
c -
C --- THIS PROGRAM IS TO BE USED AS AN AID IN CREATING THE ACSYNT .ACS
C --- FILE. DEDICATED USERS OF ACSYNT WILL WANT TO BYPASS THIS PROGRAM
C --- AND EDIT THE '.ACS' FILE THEMSELVES.
C
C --- CREATE WAS DEVELOPED BY LT JOHN PARKER, NAVAL POSTGRADUATE
C
 --- SCHOOL, SPRING 1991
C ---
C ---
C --- LIST OF VARIABLES (NON-ACSYNT SPECIFIC)
C --
C --- ANS:
              MISC QUESTION/ANSWER
 --- DVFLAG: FLAG TO USE THE DEFAULT VARIABLES (I.E. A NEW FILE IS
C
              CREATED)
              .ACS (THIS IS ADDED ON TO THE FILENAME FOR THE FILE
C --- EXT:
C ---
               (EXTENSION)
              THE FILENAME WITH THE EXTENSION
C --- FILE:
C --- LV:
              A LOGICAL VARIABLE THAT DETERMINES THE EXISTENCE OF A
              FILE. IF TRUE THEN THE FILE EXISTS.
C ---
 --- NAME:
              THE FILENAME WITHOUT THE EXTENSION
C
C
 --- NVFLAG: FLAG TURNING THE NAVY MODULE ON/OFF
 --- STFLAG: FLAG TURNING THE STABILITY MODULE ON/OFF
C --- TITLE:
              THE PROJECT TITLE. ALSO USED AS A MISC 80 CHARACTER
C ---
              VARIABLE.
C --- TOFLAG: FLAG SETTING THE TAKE-OFF MODULE ON/OFF
C ---
C --- FILES: UNIT 7 = THE CURRENT .ACS DATA FILE
             UNIT 10 = THE BACK-UP OF THE ORIGINAL DATA FILE
C ---
      CHARACTER ANS*6, EXT*4, FILE*10, NAME*6, TITLE*80, TEMP*3,
     CATYPE*10
      LOGICAL LV, DVFLAG, STFLAG, TOFLAG, NVFLAG
      INTEGER GETLEN, AIDSGN, STATUS, LIBSSPAWN
      DIMENSION SNS(8), NSN(8), AIDSGN(20), NREAD(10), NEXEC(10),
     ENWRITE (10), VUB (50), VLB (50), TX (50), BL (50), BU (50), ICON (50)
      REAL LOWER
      EXT=' .ACS'
      STFLAG-. FALSE.
      TOFLAG-. FALSE.
      DVFLAG-. FALSE.
      NVFLAG=.FALSE.
C
C --- SET-UP THE DATA FILE
    5 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 10)
   10 FORMAT (//
     47X, 'IF YOU HAVE NOT USED THIS PROGRAM BEFORE TO CREATE AN' /
          ACSYNT DATA FILE, YOU SHOULD SELECT (2) IN THE MENU! /
     &7X, 'BELOW.'//7X,'(1) READ A PREVIOUSLY CREATED FILE'/
     &7X,'(2) CREATE A NEW FILE'/
```

```
&7X,'(3) QUIT'//7X,'SELECT 1, 2, OR 3: '$)
      READ (5, 20) ANS
   20 FORMAT (A1)
      IF (ANS.EQ.'1') GOTO 50
      IF (ANS.EQ.'2') GOTO 100
      IF (ANS.EQ.'3') STOP
      GOTO 5
C --- OPEN A PREVIOUSLY CREATED FILE. IF THAT FILE DOES NOT EXIST,
C --- CHECK THE SPELLING AND TRY AGAIN. IF IT STILL DOES NOT EXIST,
C --- QUIT OR CREATE A NEW ONE
   50 WRITE (6,55)
   55 FORMAT (/7X, 'ENTER THE NAME OF THE ACSYNT DATA FILE: ',$)
      READ(5,60) NAME
   60 FORMAT (A6)
      FILE=NAME (1:GETLEN (NAME)) //EXT
      INQUIRE (FILE=FILE, EXIST=LV)
      IF (LV.EQ..TRUE.) THEN
                                         ! THE FILE EXISTS
        OPEN (UNIT=7, FILE=FILE, BLANK='NULL', STATUS='OLD',
       ACCESS='SEQUENTIAL', FORM='FORMATTED')
      ELSE
        WRITE (6,65)
        FORMAT (/7x, 'THAT FILE DOES NOT EXIST. CHECK YOUR SPELLING'/
   65
        7X, 'AND TRY AGAIN. DO NOT ADD THE 3 LETTER FILE EXTENSION'/
        /7X, 'ENTER THE FILENAME: ',$)
        READ (5, 60) NAME
        FILE=NAME (1:GETLEN (NAME)) //EXT ! GET RID OF THE BLANKS
        INQUIRE (FILE=FILE, EXIST=LV)
        IF (LV.EQ..FALSE.) THEN
   70
          WRITE (6, 75)
   75
          FORMAT (/7X, 'THAT FILE DOES NOT EXIST. WOULD YOU LIKE TO: '/
          7X, '(1) CREATE A NEW FILE' / 7X, '(2) QUIT' / /
          7X, 'SELECT 1 OR 2: '$)
          READ (5, 20) ANS
          IF (ANS.EQ.'1') GOTO 100
          IF (ANS, EQ. '2') STOP
          GOTO 70
        ELSE
          OPEN (UNIT=7, FILE=FILE, BLANK='NULL', STATUS='OLD',
          ACCESS='SEQUENTIAL', FORM='FORMATTED')
        ENDIF
      ENDIF
C --- OPEN A TEMPORARY FILE AND COPY THE ACS FILE TO IT. THIS WILL
C --- PREVENT DATA OVERWRITE AS THE ACS FILE IS UPDATED WITH THE
C --- NEW DATA. IT ALSO SERVES AS A BACK-UP FILE IN CASE THE CURRENT
C --- SESSION ENDS PREMATURELY
      OPEN (UNIT=10, FILE='TEMP.DAT', ACCESS='SEQUENTIAL', FORM='FORMATTED',
     &STATUS='UNKNOWN')
      REWIND (7)
      REWIND (10)
      DO 97 I=1,1000
        READ (7, 90, END=95) TITLE
        FORMAI (A80)
        WRITE (10,90) TITLE
   97 CONTINUE
   95 GOTO 200
C --- CREATE A NEW FILE. CHECK TO SEE IF THAT FILENAME IS ALREADY
C --- BEING USED.
  100 WRITE (6, 102)
  102 FORMAT (/7X, 'ENTER THE FILENAME THAT YOU WISH'/
     &7x,'TO USE (UP TO 6 CHARACTERS): ',$)
```

```
READ (5,60) NAME
      FILE-NAME (1:GETLEN (NAME)) //EXT ! GET RID OF THE BLANKS
      INQUIRE (FILE-FILE, EXIST-LV)
      IF (LV.EQ..TRUE.) THEN
        PRINT*,'
                      THAT FILENAME IS ALREADY IN USE'
        GOTO 100
      ELSE
        OPEN (UNIT=7, FILE=FILE, BLANK='NULL', STATUS='NEW',
       ACCESS='SEQUENTIAL', FORM='FORMATTED')
        DVFLAG-.TRUE.
      ENDIF
C --- THIS SECTION WILL ESTABLISH THE COPES DATA BLOCKS. IF THE FILE
C --- WAS PREVIOUSLY CREATED THEN AN OPTION IS GIVEN TO BYPASS THIS
C --- SECTION AND PROCEED TO THE ACSYNT CONTROL SECTION
C
  200 IF (DVFLAG.EQ..FALSE.) THEN
        STATUS = LIB$SPAWN ('CLS')
        WRITE (6, 205)
  205
        FORMAT (//
       7x, 'DO YOU WISH TO ALTER THE METHOD OF ANALYSIS?'/
       7X,'(THIS WOULD MEAN CHANGING THE DESIGN OR SENSITIVITY'/
        7x,'VARIABLES, OR A CHANGE IN THE CONSTRAINTS)'//
        7x,'(1) YES'/7X,'(2) NO'//
        7x, 'SELECT 1 OR 2: '$)
        READ (5, 20) ANS
        IF THE ANSWER IS NO, THEN MOVE THE FILE POINTER TO THE TOP
C ---
C ---
        OF THE ACSYNT CONTROL SECTION (BYPASSING COPES DATA)
        IF (ANS.EQ.'2') THEN
          REWIND (7)
          DO 215 I=1,50
          READ (7,210) ANS
          FORMAT (A3)
  210
          IF (ANS.EQ.'END') GOTO 1000 ! END IS DATA BLOCK V RELATED
  215
          CONTINUE
        ENDIF
        IF (ANS.NE.'1') GOTO 200
      ENDIF
  220 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 230)
  230 FORMAT (///
     &7X, *** ANALYSIS METHOD *** //
     £7X,'(1) SIMPLE ANALYSIS. (NO VARIABLE OPTIMIZATION AND'/
             NO CONSTRAINTS).'/
     £7X,'
     £7X, (2) OPTIMIZATION. (OPTIMIZE A VARIABLE GIVEN A SET'/
     &7X,'
             OF DESIGN VARIABLES)'/
     67X, (3) SENSITIVITY. (DETERMINE THE EFFECT OF A SET OF /
              VARIABLES ON THE BEHAVIOR OF ANOTHER VARIABLE) '//
     £7X,'
     £7X, 'SELECT 1, 2 OR 3: '$)
      READ (5, 20) ANS
      IF (ANS.EQ.'1') GOTO 300
      IF (ANS.EQ.'2') GOTO 400
      IF (ANS.EQ.'3') GOTO 700
      GOTO 220
C ---
C --- SIMPLE ANALYSIS
C --- NCALC=1, NDV=0, NSV=0, N2VAR=0, NXAPRX=0, IPNPUT=2, IPDBG=0
C --- DATA BLOCKS A, B AND V WILL BE COMPLETED
  300 WRITE (6, 305)
```

```
SAFLAG=.TRUE.
  305 FORMAT(//7x,'ENTER A TITLE FOR THIS PROJECT (UP TO 80'/
     &7X, 'CHARACTERS): ',$)
      READ (5,310) TITLE
  310 FORMAT (A80)
      REWIND (7)
      WRITE (7,320) TITLE
  320 FORMAT ('$ DATA BLOCK A'/A80)
      WRITE (7,330)
  330 FORMAT ('$ DATA BLOCK B'/'1,0,0,0,0,1,0')
      WRITE (7,340)
  340 FORMAT ('$ DATA BLOCK V'/'END')
      GOTO 1000
C --- OPTIMIZATION
C --- NCALC=2, NSV=0, N2VAR=0, NXAPRX=0, IPNPUT=2, IPDBUG=0, ALL OF
C --- DATA BLOCK C IS DEFAULTED, FDCH=.02, FDCHM=.001, CT=.04,
C --- CTMIN=.001,CTLMIN=-.01, THETA=1.0, DELFUN=.001, DABFUN=.001, C --- ALPHX=0.1, ABOBJ1=0.1, NDVTOT=NDV, AMULT=1.0
C --- DATA BLOCKS A-I AND V WILL BE COMPLETED
  400 WRITE (6,305)
      READ (5,310) TITLE
      REWIND (7)
      WRITE (7,320) TITLE
  404 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 405)
  405 FORMAT (/7X, 'ENTER THE GLOBAL NUMBER OF THE OBJECTIVE VARIABLE'
     &/7X,' (THE OBJECTIVE VARIABLE IS THE ONE THAT WILL BE'/
     &7X, 'OPTIMIZED BY ACSYNT): ',$)
      READ (5,410, ERR=404) IOBJ
  410 FORMAT (13)
      IF((IOBJ.GT.999).OR.(IOBJ.LT.1)) GOTO 404
  420 WRITE (6, 425)
  425 FORMAT (/7X, 'DO YOU WISH TO MINIMIZE THE OBJECTIVE VARIABLE //
     &7X, 'OR MAXIMIZE IT?'//7X,'(1) MINIMIZE'/
     £7x,'(2) MAXIMIZE'//7x,'SELECT 1 OR 2: ',$)
      READ (5, 20) ANS
      IF (ANS.EQ.'1') SGNOPT=-1.0
      IF (ANS.EQ.'2') SGNOPT=1.0
      IF ((ANS.NE.'1').AND.(ANS.NE.'2')) GOTO 420
  430 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 435)
  435 FORMAT (//7X, 'ENTER THE TOTAL NUMBER OF DESIGN VARIABLES'/
     £7X,' (THESE ARE THE VARIABLES THAT ACSYNT WILL MODIFY TO'/
     &7X, 'OPTIMIZE THE OBJECTIVE): ',$)
      READ (5,410, ERR=430) NDV
      IF ((NDV.GT.99).OR.(NDV.LT.1)) GOTO 430
      DO 500 I=1,NDV
  450
       WRITE (6, 455) I
        FORMAT (//7X, 'ENTER THE GLOBAL NUMBER FOR DESIGN'/
  455
       7X, 'VARIABLE NUMBER', 13,': ',$)
         READ (5, 410, ERR=450) AIDSGN (I)
         IF ((AIDSGN(I).LT.1).OR. (AIDSGN(I).GT.999)) GOTO 450
  460
        WRITE (6, 465)
         FORMAT (/7x, 'ENTER THE UPPER BOUND ON THIS VARIABLE: ',$)
  465
        READ (5, 490, ERR=460) VUB (I)
  490
        FORMAT (F10.2)
  491
        WRITE (6, 492)
  492
         FORMAT (7X, 'ENTER THE LOWER BOUND ON THIS VARIABLE: ',$)
```

```
READ (5, 490, ERR=491) VLB(I)
        TX(I)=0.5*(ABS(VUB(I)+VLB(I)))
  500 CONTINUE
  510 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 515)
  515 FORMAT (/7x, 'ENTER THE TOTAL NUMBER OF VARIABLES THAT'/
     67X, 'ARE CONSTRAINED: ',$)
      READ (5,410, ERR=510) NCONS
      DO 600 I=1, NCONS
        STATUS - LIB$SPAWN ('CLS')
        WRITE (6,553) I
        FORMAT (//7X, 'ENTER THE GLOBAL NUMBER FOR CONSTRAINT'/
  553
       7X, 'VARIABLE', 13, ': ',$)
        READ (5,410, ERR=552) ICON (I)
  556
        WRITE (6,557)
        FORMAT (/7X, 'ENTER THE UPPER BOUND ON THIS CONSTRAINT: ',$)
  557
        READ (5,560, ERR=556) BU(I)
  560
        FORMAT (F10.2)
        WRITE (6, 565)
  564
        FORMAT (/7X, 'ENTER THE LOWER BOUND ON THIS CONSTRAINT: ',$)
  565
        READ (5,560, ERR=564) BL(I)
  600 CONTINUE
      WRITE (7,610) NDV, NDV, IOBJ, SGNOPT
  610 FORMAT ('$DATA BLOCK B'/'2,'13,',0,0,0,2,0'/'$DATA BLOCK C'/'1'/
     &'$DATA BLOCK D'/'0.02,,0.04,0.001'//'$DATA BLOCK E'/
     &13,',',13,',',F4.1/'$DATA BLOCK F')
      DO 630 I=1, NDV
        WRITE (7,620) VLB(I), VUB(I), TX(I)
  620
        FORMAT (F10.2,',',F10.2,',',F10.2)
  630 CONTINUE
      WRITE (7, 640)
  640 FORMAT ('$DATA BLOCK G')
      DO 650 I=1,NDV
        WRITE (7,645) I, AIDSGN (I)
        FORMAT (13, ', ', 13, ', ')
  650 CONTINUE
      WRITE (7,655) NCONS
  655 FORMAT ('$ DATA BLOCK H'/I3)
      IF (NCONS.NE.0) THEN
                               !SKIP DATA BLOCK I IF NO CONSTRAINTS
        WRITE (7,660)
  660
        FORMAT ('$ DATA BLOCK I')
        DO 670 I=1, NCONS
          WRITE (7,665) ICON(I), BL(I), BU(I)
  665
          FORMAT(I3,',,'/F10.2,',,',F10.2,',')
  670
        CONTINUE
      ENDIF
      WRITE (7, 340)
      GOTO 1000
C --- SENSITIVITY ANALYSIS
C --- NCALC=3, NDV=0, N2VAR=0, NXAPRX=0, IPNPUT=1, IPDBG=0
C --- DATA BLOCKS A, B, P, Q AND V COMPLETED
C ---
  700 REWIND (7)
      WRITE (6, 305)
      READ (5,310) TITLE
      WRITE (7,320) TITLE
  710 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 715)
  715 FORMAT (//7x.'ENTER THE TOTAL NUMBER OF SENSITIVITY'/
```

```
&7X, 'OBJECTIVES (MAX OF EIGHT): ',$)
      READ (5,410,ERR=710) NSOBJ
      IF ((NSOBJ.LT.1).OR.(NSOBJ.GT.8)) GOTO 710
      DO 730 I=1, NSOBJ
        STATUS = LIB$SPAWN('CLS')
        WRITE (6,725) I
        FORMAT (//7x, 'ENTER THE GLOBAL NUMBER FOR SENSITIVITY'/
        7X, 'OBJECTIVE NUMBER ', I1, ': ',$)
        READ (5,410,ERR=760) NSN(I)
        IF ((NSN(I).LT.1).OR.(NSN(I).GT.999)) GOTO 760
  730 CONTINUE
  734 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 735)
  735 FORMAT (//7x, 'ENTER THE TOTAL NUMBER OF SENSITIVITY VARIABLES'
     &/7X,'(A MAXIMUM OF EIGHT): ',$)
      READ (5, 410, ERR=734) NSV
      WRITE (7,740) NSV, NSOBJ,
                                (NSN(I), I=1, NSOBJ)
  740 FORMAT ('$ DATA BLOCK B'/'3,0,',13,',0,0,2,0'/'$ DATA BLOCK P'/
     &I3,',0'/7(I3,','),I3)
      WRITE (7, 741)
  741 FORMAT ('$ DATA BLOCK Q')
      DO 790 I=1,NSV
        STATUS = LIB$SPAWN('CLS')
        WRITE(6,755) I
FORMAT(//7X,'ENTER THE GLOBAL NUMBER FOR SENSITIVITY'/
        7X, 'VARIABLE NUMBER ', I1, ': ', $)
        READ (5,410, ERR=750) ISENS
  760
        WRITE (6, 765)
  765
        FORMAT (/7x, 'ENTER THE UPPER BOUND ON THIS VARIABLE: ',$)
        READ (5, 490, ERR=760) UPPER
  770
        WRITE (6, 775)
  775
        FORMAT (7x, 'ENTER THE LOWER BOUND ON THIS VARIABLE: ',$)
        READ (5, 490, ERR=770) LOWER
C ---
        THIS NEXT PART WILL SCALE THE SENSITIVITY VARIABLE BETWEEN
c ---
        LOWER AND UPPER WITH 7 VALUES TOTAL. THESE 7 VALUES WILL
        BE USED FOR THE SENSITIVITY STUDY
        DIFF=ABS (UPPER-LOWER) /6.0
        SNS (1) =LOWER
        DO 780 J=2,7
          SNS (J) =LOWER+DIFF
          LOWER-LOWER+DIFF
  780
        CONTINUE
        NSENS=7
        WRITE (7,785) ISENS, NSENS, (SNS(K),K=1,7)
        FORMAT (13,',',13/6(F10.2,','),F10.2)
  790 CONTINUE
      WRITE (7,340)
C --
C --- ACSYNT CONTROL SECTION
C --- LINES 1, 2, 3, 4, 5 AND 6 COMPLETED
 1000 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 1010)
 1010 FORMAT (//
     67X, 'ENTER THE AIRCRAFT TYPE THAT MOST CLOSELY RESEMBLES YOUR'
     &/7X,'DESIGN.'//7X,'(1) FIGHTER'/7X,'(2) TRANSPORT'/
     £7X,'(3) BOMBER'//7X,'SELECT 1, 2 OR 3: ',$)
      READ (5, 20) ANS
      IF ((ANS.NE.'1').AND.(ANS.NE.'2').AND.(ANS.NE.'3')) GOTO 1000
      IF (ANS.EQ.'1') THEN
```

```
WRITE (7, 1020)
1020
        FORMAT ('FIGHTER')
        ATYPE='FIGHTER'
                           ! ATYPE IS PASSED TO WEIGHTS MODULE
      ENDIF
      IF (ANS.EQ.'2') THEN
        WRITE (7, 1030)
 1030 FORMAT ('TRANSPORT')
        ATYPE='TRANSPORT'
      ENDIF
      IF (ANS.EQ.'3') THEN
        WRITE (7,1040)
FORMAT ('BOMBER')
 1040
        ATYPE='BOMBER'
      ENDIF
C --- READ THE OLD VALUES IF DVFLAG.NE..TRUE., THEN RESET THE ACS FILE
C --- POINTER TO THE TOP OF THE ACSYNT CONTROL SECTION
      IF (DVFLAG.EQ..TRUE.) THEN
                                    !SET CONTROL DEFAULTS
        MREAD=5
        MEXEC=3
        MWRITE-5
        IOBJ=570
        JOBJ=585
                   ! WILL ALWAYS CONVERGE
        IPSUM=1
                   ! ALWAYS PRINT SUMMARY
        KGLOBP=0
        INIT-0
        IPDBG=2
        IGPLT-1
        IRDDTR=7
        IPDTR=0
        TOL=.0001
        TSLOPE=.75
        WGMAX=50000.0
        NREAD(1)=1
        NREAD (2) = 2
        NREAD(3)=3
        NREAD(4)=4
        NREAD(5)=6
        NEXEC(1)=1
        NEXEC (2) = 2
        NEXEC(3)=6
        NWRITE (1) = 1
        NWRITE (2) =2
        NWRITE (3) = 3
        NWRITE (4)=4
        NWRITE (5) = 6
        GOTO 2000
      ENDIF
      REWIND (10)
C --- GET THE OLD DATA FROM THE TEMP FILE
 1045 READ (10, 210) ANS
                                  ! FIND TOP OF ACSYNT CONTROL SECTION
      IF ((ANS.NE.'FIG').AND.(ANS.NE.'TRA').AND.(ANS.NE.'BOM'))
     &GOTO 1045
      READ (10, 1060) MREAD, MEXEC, MWRITE, IOBJ, JOBJ, IPSUM, KGLOBP,
     &INIT, IPDBG, IGPLT, IRDDTR, IPDTR
 1060 FORMAT (1215)
      READ (10, 1070) WGMAX
 1070 FORMAT (20X, F10.2)
      READ (10,1080) (NREAD (1), I=1, MREAD)
 1080 FORMAT (1615)
      READ (10, 1080) (NEXEC (I), I=1, MEXEC)
```

```
READ (10, 1080) (NWRITE (1), I=1, MWRITE)
C --- GET THE NEW ACSYNT CONTROL DATA OR KEEP THE OLD
c ---
        (1)
            GEOMETRY
        (2)
C ---
            TRAJECTORY
c ---
        (3) AERODYNAMICS
C
        (4)
            PROPULSION
 ___
 ___
        (5)
            STABILITY & CONTROL (NOT AVAILABLE YET)
С
        (6) WEIGHTS (10) NAVY
C ---
С
 ---
        (11) SUMMARY
C ---
                     (ALWAYS SELECTED)
C ---
        (14) TAKEOFF (NOT AVAILABLE YET)
C --- MODULES 1, 2, 3, 4 & 6 WILL BE REQUIRED 2000 DO 2020 I=1,10 !FIND OUT IF MODULES 5, 14 OR 10 ARE CALLED
        IF (NREAD(I).EQ.5) STFLAG=.TRUE.
        IF (NREAD (I) .EQ.14) TOFLAG=.TRUE.
        IF (NREAD(I).EQ.10) NVFLAG=.TRUE.
 2020 CONTINUE
 2030 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 2040)
 2040 FORMAT (/
     &7X,'THE FOLLOWING MODULES ARE SELECTED FOR ANALYSIS:'//)
      WRITE (6, 2050)
 2050 FORMAT (7X, '(1)
                     GEOMETRY.....YES')
      WRITE (6, 2060)
 2060 FORMAT (7X, '(2)
                      TRAJECTORY.....YES')
      WRITE (6, 2070)
 2070 FORMAT (7X, '(3) AERODYNAMICS.....YES')
      WRITE (6, 2080)
 2080 FORMAT (7X, '(4) PROPULSION.....YES')
C --- STABILITY AND TAKEOFF COMMENTED OUT UNTIL READY
C
      IF (STFLAG.EQ..TRUE.) THEN
        WRITE (6, 2090)
C2090
        FORMAT (7X, '(5)
                       STABILITY & CONTROL....YES')
C
      ELSE
C
        WRITE (6, 2100)
C2100
        FORMAT (7X, '(5) STABILITY & CONTROL...NO')
      ENDIF
      WRITE (6, 2110)
 2110 FORMAT (7x, '(6) WEIGHTS.....YES')
      IF (NVFLAG.EQ..TRUE.) THEN
        WRITE (6, 2115)
 2115
        FORMAT (7X, '(10) NAVY.....YES')
      ELSE
        WRITE (6, 2116)
 2116
        ENDIF
C
      IF (TOFLAG.EQ..TRUE.) THEN
        WRITE (6, 2120)
C2120
        FORMAT (7X, '(14) TAKE-OFF......YES')
C
      ELSE
C
        WRITE (6, 2130)
C2130
       ENDIF
      WRITE (6, 2140)
 2140 FORMAT (//7X, 'ENTER THE MODULE NUMBER TO CHANGE THE STATUS OR'
     &/7X,'ENTER 0 TO CONTINUE: ',$)
      READ (5, 2145) ANS
 2145 FORMAT (A2)
      IF (ANS.EQ.'5') THEN
        IF (STFLAG.EQ..TRUE.) THEN
```

```
STFLAG-. FALSE.
          GOTO 2030
C
        ELSE
C
           STFLAG=.TRUE.
CCCC
          GOTO 2030
        ENDIF
      ENDIF
      IF (ANS.EQ.'14') THEN
Ċ
        IF (TOFLAG.EQ..TRUE.) THEN
          TOFLAG=.FALSE.
C
          GOTO 2030
C
        ELSE
            TOFLAG-. TRUE.
C
          GOTO 2030
C
C
        ENDIF
C
      ENDIF
      IF (ANS.EQ.'10') THEN
         IF (NVFLAG.EQ..TRUE.) THEN
          NVFLAG=.FALSE.
           GOTO 2030
         ELSE
           NVFLAG-. TRUE.
           GOTO 2030
         ENDIF
      ENDIF
      IF (ANS.NE.'0') GOTO 2030
C --- RESET NREAD ARRAY
      DO 2150 I=1,10
         NREAD(I)=0
 2150 CONTINUE
       NREAD(1)=1
       NREAD(2)=2
       NREAD(3)=3
       NREAD(4)=4
       NREAD (5)=6
       I=6
       IF (STFLAG.EQ..TRUE.) THEN
         NREAD(I)=5
         I=I+1
       IF (NVFLAG.EQ..TRUE.) THEN
         NREAD(I)=10
         I=I+1
       ENDIF
       IF (TOFLAG.EQ..TRUE.) THEN
         NREAD(I)=14
       ENDIF
       MREAD=0
       DO 2160 I=1,10
         IF (NREAD (I) .NE.0) MREAD=MREAD+1
  2160 CONTINUE
       MWRITE-MREAD
 C --- RESET NEXEC ARRAY
       DO 2165 I=1,10
         NEXEC(I)=0
  2165 CONTINUE
       NEXEC(1)=1
       NEXEC (2) = 2
       NEXEC(3) = 6
       I=4
```

```
IF (STFLAG. EQ.. TRUE.) THEN
        NEXEC(I) = -5
        I=I+1
      ENDIF
      IF (NVFLAG.EQ..TRUE.) THEN
        NEXEC (I) = -10
        I=I+1
      ENDIF
      IF (TOFLAG.EQ..TRUE.) THEN
        NEXEC (I) =-14
      ENDIF
      MEXEC=0
      DO 2167 I=1,10
        IF (NEXEC(I).NE.0) MEXEC=MEXEC+1
 2167 CONTINUE
     WRITE (7,1060) MREAD, MEXEC, MWRITE, IOBJ, JOBJ, IPSUM, KGLOBP, &INIT, IPDBG, IGPLT, IRDDTR, IPDTR
 2170 STATUS = LIB$SPAWN ('CLS')
      WRITE (6, 2180) WGMAX
 2180 FORMAT (//
     &7X, THE MAXIMUM ALLOWABLE TAKE-OFF GROSS WEIGHT IS SET'/
     &7X,'AT ',F10.2,' LBS.'//
              (1) CHANGE WEIGHT'/
     ٤,
     ٤,
              (2) NO CHANGE'//7X,'SELECT 1 OR 2: ',$)
      READ (5, 20) ANS
      IF ((ANS.NE.'1').AND. (ANS.NE.'2')) GOTO 2170
      IF (ANS.EQ.'1') THEN
 2185
        WRITE (6, 2190)
 2190
        FORMAT (/7X, 'ENTER THE MAXIMUM TAKE-OFF GROSS WEIGHT (THIS'/
        7X, WEIGHT IS THE MAXIMUM THAT ACSYNT WILL CONSIDER IF'/
        7X, 'CONVERGENCE IS NOT POSSIBLE: ', $)
        READ (5, 2200, ERR=2185) WGMAX
 2200
        FORMAT (F10.2)
        IF ((WGMAX.LT.1).OR.(WGMAX.GT.1000000.0)) THEN
        WRITE (6, 2205)
 2205
        FORMAT (/7X, '* CAUTION: THIS VALUE IS OUTSIDE NORMAL LIMITS')
        ENDIF
        GOTO 2170
      ENDIF
      WRITE (7, 1070) WGMAX
      WRITE (7, 1080) (NREAD (I), I=1, MREAD)
      WRITE (7, 1080) (NEXEC (I), I=1, MEXEC)
      WRITE (7,1080) (NREAD (I), I=1, MREAD) ! OUTPUT IS SAME AS INPUT
      CALL GEOMETRY (DVFLAG)
C ---
      CALL TRAJ (DVFLAG)
      CALL AERO (DVFLAG, NVFLAG)
C ---
      CALL PROP (DVFLAG)
      CALL WEIGHTS (DVFLAG, ATYPE)
С
C
      IF (STFLAG.EQ..TRUE.) THEN
C
        CALL STABILITY (DVFLAG)
C
      ENDIF
C
      IF (NVFLAG.EQ..TRUE.) THEN
        CALL NAVY
```

```
ENDIF
C
C
      IF (TOFLAG.EQ..TRUE.) THEN
C
       CALL TAKEOFF (DVFLAG)
C
      ENDIF
C
 8400 CLOSE (7)
      CLOSE (10)
      STOP
      END
     ◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇
      INTEGER FUNCTION GETLEN (STRING)
C --- THIS FUNCTION WILL COUNT THE NUMBER OF RIGHT BLANKS IN "STRING"
     ◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇
      CHARACTER*6 STRING
      DO 10 I=6,1,-1
        IF (STRING(I:I).NE.' ') THEN
          GETLEN-I
         RETURN
       ENDIF
   10 CONTINUE
      RETURN
      END
      SUBROUTINE NAVY
C --- ALL CALCULATIONS SET AT DEFAULTS: TROPICAL DAY
      WRITE (7, 10)
   10 FORMAT (' $BOAT $END')
      RETURN
      END
Ç ---
      SUBROUTINE GEOMETRY (DVFLAG)
C
C
  --- GEOMETRY SECTION
C ---
      CHARACTER WING*3, QWING*3, STRAKE*3, HTAIL*3, VTAIL*3, ANS*6,
     &CANARD*3, WPOD*3, FPOD*3, FUS*3, CREW*3, FUEL*3, TITLE*80
      REAL LFLAPC, LENGTH, LRADAR
      INTEGER STATUS, OUTCOD, SYMCOD, LIB$SPAWN, PODNUM, WPODFL, FPODFL
      LOGICAL DVFLAG, SIZIT, TAND
C --- THE VARIABLES BELOW USED ON GEOMETRY SELECTION MENU
      IF (DVFLAG.EQ..TRUE.) THEN
        WING~'YES'
                     ! WING -OR- QWING REQUIRED
        QWING-'NO'
        STRAKE='NO'
        HTAIL='NO'
        VTAIL='NO'
        CANARD='NO'
                     ! WPOD -OR- FPOD REQUIRED
        WPOD='YES'
        FPOD='NO'
        FUS='YES'
        CREW-'NO'
        FUEL='NO'
      ENDIF
      IF (DVFLAG.EQ..TRUE.) GOTO 50
                                    ! OPTION TO BYPASS GEOMETRY
   10 STATUS = LIB$SPAWN ('CLS')
      WRITE (6, 20)
   20 FORMAT (///
     £7X,'DO YOU WANT TO MAKE ANY CHANGES TO THE GEOMETRY MODULE ?'//
     67X,'(1) YES'/7X,'(2) NO'//7X,'SELECT 1 OR 2: ',$)
```

```
READ (5, 21, ERR=10) NUM
   21 FORMAT(I1)
       IF ((NUM.NE.1).AND.(NUM.NE.2)) GOTO 10
       IF (NUM.EQ.1) GOTO 40
C --- TRANSFER GEOMETRY DATA FROM (10) TO (7)
       REWIND (10)
   25 READ (10, 26) ANS
   26 FORMAT (A6)
       IF (ANS.NE.'*** GE') GOTO 25
       WRITE (7, 201)
   30 READ(10,31) TITLE
   31 FORMAT (A80)
       WRITE (7,31) TITLE
       IF (TITLE (1:6) .NE.'$$$$$') GOTO 30
       RETURN
C --- DETERMINE OLD GEOMETRY MENU
   40 REWIND (10)
C --- MAKE INITIAL SETTINGS
         WING='NO'
          QWING='NO'
          STRAKE='NO'
         HTAIL='NO'
         VTAIL-'NO'
          CANARD='NO'
         WPOD='NO'
         FPOD='NO'
         FUS='YES'
          CREW-'NO'
         FUEL='NO'
   42 READ (10, 26, END=50) ANS
       IF (ANS.EQ.'$$$$$$') GOTO 50
       IF (ANS.EQ.' $WING') WING-'YES'
       IF (ANS.EQ.' SQWIN') QWING-'YES'
       IF (ANS.EQ.' SSTRA') STRAKE='YES'
       IF (ANS.EQ.' $HTAI') HTAIL='YES'
       IF (ANS.EQ.' $VTAI') VTAIL-'YES'
       IF (ANS.EQ.' $CANA') CANARD='YES'
       IF (ANS.EQ.' $WPOD') WPOD='YES'
       IF (ANS.EQ.' $FPOD') FPOD='YES'
IF (ANS.EQ.' $FUS') FUS='YES'
       IF (ANS.EQ.' $CREW') CREW='YES'
       IF (ANS.EQ.' $FUEL') FUEL='YES'
       GOTO 42
C --- GEOMETRY SELECTION MENU
   50 STATUS = LIB$SPAWN('CLS')
    60 WRITE(6,61) WING, QWING, STRAKE, HTAIL, VTAIL, CANARD, WPOD,
      &FPOD, FUS, CREW, FUEL
    61 FORMAT (/
      £7X, *** GEOMETRY SELECTION MENU ***//
      £7X, '(1) SYMMETRIC WING....., A3/
     67X,'(1) SYMMETRIC WING..., A3/
67X,'(2) OBLIQUE WING..., A3/
67X,'(3) LE OR TE STRAKES..., A3/
67X,'(4) HORIZONTAL TAIL..., A3/
67X,'(5) VERTICAL TAIL..., A3/
67X,'(6) CANARD..., A3/
67X,'(7) WING MOUNTED ENGINE PODS..., A3/
67X,'(8) FUSELAGE MOUNTED ENGINE PODS..., A3/
67X,'(9) FUSELAGE MOUNTED..., A3/
```

```
£7X,'(10) CREW COCKPIT....., A3/
  £7X, (11) FUSELAGE FUEL BAYS....., A3//
  £7X, 'SELECT AN ITEM TO CHANGE OR 0 TO CONTINUE: ',$)
   READ (5, 65, ERR=50) NUM
65 FORMAT (I2)
   IF (NUM.EQ.0) GOTO 200
   GOTO (80, 90, 100, 110, 120, 130, 140, 150, 160, 170, 180), NUM
   GOTO 50
80 IF (WING.EQ. 'YES') THEN
     WING='NO'
     QWING='YES'
   ELSE
     WING='YES'
     QWING-'NO'
   ENDIF
    GOTO 50
90 IF (QWING.EQ. 'YES') THEN
     QWING-'NO'
      WING-'YES'
    ELSE
      QWING='YES'
      WING-'NO'
    ENDIF
    GOTO 50
100 IF (STRAKE.EQ.'YES') THEN
      STRAKE-'NO'
      STRAKE='YES'
    ENDIF
    GOTO 50
110 IF (HTAIL.EQ. 'YES') THEN
      HTAIL-'NO'
    ELSE
      HTAIL='YES'
    ENDIF
    GOTO 50
120 IF (VTAIL.EQ. 'YES') THEN
      VTAIL-'NO'
    ELSE
      VTAIL='YES'
    ENDIF
    GOTO 50
130 IF (CANARD.EQ. 'YES') THEN
      CANARD='NO'
    ELSE
      CANARD-'YES'
    ENDIF
    GOTO 50
140 IF (WPOD.EQ.'YES') THEN
      WPOD='NO'
      FPOD='YES'
    ELSE
      WPOD='YES'
      FPOD='NO'
    ENDIF
    GOTO 50
150 IF (FPOD.EQ. YES') THEN
      FPOD='NO'
      WPOD='YES'
    ELSE
```

```
FPOD='YES'
        WPOD='NO'
      ENDIF
      GOTO 50
  160 IF (FUS.EQ.'YES') THEN
        FUS='YES'
      ELSE
        FUS='YES'
      ENDIF
      GOTO 50
  170 IF (CREW.EQ.'YES') THEN
        CREW='NO'
      ELSE
        CREW='YES'
      ENDIF
      GOTO 50
  180 IF (FUEL.EQ.'YES') THEN
        FUEL='NO'
      ELSE
        FUEL='YES'
      ENDIF
      GOTO 50
                       !WRITE THE GEOMETRY HEADER TO UNIT 7
  200 WRITE (7, 201)
  201 FORMAT ('*** GEOMETRY DATA ***')
C --- THE $WING AND $QWING DEFAULTS ARE QUITE SIMILAR SO ONLY THE $WING
C --- DEFAULTS WILL BE SET, SINCE THESE ALSO COVER THE $QWING VALUES
      IF (DVFLAG.EQ..TRUE.) THEN
        CALL WINGDV (AR, AREA, DIHED, FDENWG, LFLAPC, SWEEP, SWFACT, TAPER,
        TCROOT, TCTIP, TFLAPC, WFFRAC, XWING, ZROOT, KSWEEP, OUTCOD)
        GOTO 2400
      ENDIF
C --- GET OLD VALUES. CHECK TO SEE IF THE OLD VALUES ACTUALLY EXIST
      IF (WING.EQ.'YES') THEN ! GET $WING VALUES
        REWIND (10)
  220
        READ (10, 26) ANS
        IF (ANS.EQ.'$$$$$$') THEN !OLD $WING NOT FOUND. SET DEFAULTS
          CALL WINGDV (AR, AREA, DIHED, FDENWG, LFLAPC, SWEEP, SWFACT, TAPER,
          TCROOT, TCTIP, TFLAPC, WFFRAC, XWING, ZROOT, KSWEEP, OUTCOD)
          GOTO 2400
        IF (ANS.NE.' $WING') GOTO 220
        READ (10, 2340) AR, AREA, DIHED, FDENWG, LFLAPC, SWEEP, SWFACT,
     & TAPER, TCROOT, TCTIP, TFLAPC, WFFRAC, XWING, ZROOT, KSWEEP,
     & OUTCOD
 2340
        FORMAT (8X, F5.2, 12X, F7.2, 9X, F5.2/12X, F6.2, 9X, F4.2, 10X, F6.2
     & /12X,F4.2,10X,F4.2,12X,F4.2/11X,F4.2,12X,F4.2,11X,F4.2
        /11X,F4.2,11X,F5.2,11X,I1/12X,I1)
             ! GET $QWING VALUES
      ELSE
        REWIND (10)
 2350
        READ (10, 26) ANS
        IF (ANS.EQ.'$$$$$$') THEN ! OLD SOWING NOT FOUND. SET DEFAULTS
          CALL WINGDV (AR, AREA, DIHED, FDENWG, LFLAPC, SWEEP, SWFACT, TAPER,
          TCROOT, TCTIP, TFLAPC, WFFRAC, XWING, ZROOT, KSWEEP, OUTCOD)
          GOTO 2400
        ENDIF
        IF (ANS.NE.' SOWIN') GOTO 2350
        READ (10, 2360) AR, AREA, DIHED, LFLAPC, SWFACT, TAPER, TCROOT,
     & TCTIP, TFLAPC, XWING, ZROOT, WFFRAC, FDENWG, OUTCOD
 2360 FORMAT (8x, F5.2, 12x, F7.2, 9x, F5.2/12x, F4.2, 11x, F4.2, 10x, F4.2/
     6 12X,F4.2,10X,F4.2,12X,F4.2/11X,F4.2,11X,F5.2,11X,F4.2/
```

```
£ 12X, F6.2, 9X, I1)
     ENDIF
2400 IF (WING.EQ.'YES') THEN ! SWING GEOMETRY CHANGE MENU
C -
C --- SET UP $WING NAMELIST
 2405
       STATUS - LIB$SPAWN ('CLS')
       WRITE (6,2410) AR, AREA, DIHED, FDENWG, LFLAPC, SWEEP, SWFACT,
       TAPER, TCROOT, TCTIP, TFLAPC, WFFRAC, XWING, ZROOT
2410
       FORMAT (/
       7X,'** SYMMETRIC WING GEOMETRY **'//
       7X,'(1) ASPECT RATIO.....',F5.2/
       7X, '(2) AREA (SQ FT)....., F7.2/
       7X, '(3) DIHEDRAL (DEG) ......, ', F5.2/
       7X, '(4) FUEL DENSITY (LB/FT3)....., F6.2/
     2
               L.E. FLAP WIDTH (%CHORD)....',F4.2/
L.E. SWEEP (DEG)...',F6.2/
WETTED AREA MULTIPLIER...',F4.2/
       7X,'(5)
        7X, '(6)
       7X, (7)
       7x,'(8)
                TAPER RATIO....., F4.2/
       7X,'(9)
               T/C RATIO, WING ROOT....., F4.2/
       7X,'(10) T/C RATIO, WING TIP.....',F4.2/
       7X, '(11) T.E. FLAP WIDTH (%CHORD).....', F4.2/
       7x, '(12) FRACTION OF WING VOLUME THAT'/
                WILL BE FILLED WITH FUEL....., F4.2/
        7x,'
        7X, (13) POSITION OF WING 1/4 CHORD (%BODY LENGTH)..', F4.2/
       7X,'(14) ELEVATION OF WING ON FUSELAGE.....', F5.2/
                (1.0=TOP, 0.0=MID-MOUNT, -1.0=BOTTOM)'//
       7X, 'SELECT THE VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
       READ (5, 2411, ERR=2405) NUM
 2411
       FORMAT (12)
       IF (NUM.EQ.0) GOTO 2580
       GOTO (2425, 2440, 2450, 2465, 2480, 2495, 2500, 2510, 2520, 2530, 2540, 2550, 2560, 2570) ,NUM
       GOTO 2405
2425
       WRITE (6, 2430)
2430
       FORMAT (/7x, 'ENTER THE ASPECT RATIO: ',$)
       READ (5, 2460, ERR=2425) AR
        IF ((AR.LE.0.0).OR.(AR.GT.12.0)) GOTO 2425
       GOTO 2405
 2440
       WRITE (6, 2445)
       FORMAT (/7X, 'ENTER THE WING AREA (SQ FT): ',S)
 2445
       READ (5, 2446, ERR=2440) AREA
 2446
       FORMAT (F7.2)
        IF (AREA.LE.0) GOTO 2440
       GOTO 2405
       WRITE (6, 2455)
 2450
 2455
       FORMAT (/7X, 'ENTER THE WING DIHEDRAL (DEG): ',$)
       READ (5, 2460, ERR=2450) DIHED
 2460
        FORMAT (F5.2)
        IF ((DIHED.LT.-20.0).OR.(DIHED.GT.20.0)) GOTO 2450
        GOTO 2405
       WRITE (6, 2470)
 2465
       FORMAT (/7X, 'ENTER THE FUEL DENSITY (LB/FT3): ',$)
 2470
       READ (5, 2475, ERR=2465) FDENWG
 2475
       FORMAT (F6.2)
        IF ((FDENWG.LE.O.O)) GOTO 2465
       GOTO 2405
 2480
       WRITE (6, 2485)
       FORMAT (/7X, 'ENTER THE LEADING EDGE FLAP WIDTH'/
 2485
       7X, 'IN PERCENT OF TOTAL CHORD: ',$)
```

```
READ (5, 2490, ERR=2480) LFLAPC
2490
       FORMAT (F4.2)
       IF ((LFLAPC.LT.0.0).OR.(LFLAPC.GT.0.5)) GOTO 2480
       GOTO 2405
2495
       WRITE (6, 2496)
       FORMAT (/7X, 'ENTER THE LE WING SWEEP (DEG): ',$)
2496
       READ (5, 2475, ERR=2495) SWEEP
       IF ((SWEEP.LT.-30.0).OR.(SWEEP.GT.60.0)) GOTO 2495
       GOTO 2405
2500
       WRITE (6, 2505)
2505
       FORMAT (/7X, 'ENTER THE WETTED AREA MULTIPLIER: ',$)
       READ (5,2490, ERR=2500) SWFACT
       IF ((SWFACT.LE.0.0).OR.(SWFACT.GT.2.0)) GOTO 2500
       GOTO 2405
2510
       WRITE (6, 2515)
       FORMAT (/7X, 'ENTER THE TAPER RATIO: ',$)
2515
       READ (5, 2490, ERR=2510) TAPER
       IF ((TAPER.LT.0.0).OR. (TAPER.GT.1.0)) GOTO 2510
       GOTO 2405
2520
       WRITE (6, 2525)
       FORMAT (/7X, 'ENTER THE THICKNESS TO CHORD RATIO'/
2525
       7X, 'AT THE WING ROOT: ',$)
       READ (5, 2490, ERR=2520) TCROOT
       IF ((TCROOT.LT.0.02).OR.(TCROOT.GT.0.18)) GOTO 2520
       GOTO 2405
2530
       WRITE (6, 2535)
2535
       FORMAT (/7X, 'ENTER THE THICKNESS TO CHORD RATIO'/
       7X,'AT THE WING TIP: ',$)
       READ (5, 2490, ERR=2530) TCTIP
       IF ((TCTIP.LT.0.02).OR.(TCTIP.GT.0.18)) GOTO 2530
       GOTO 2405
2540
       WRITE (6, 2545)
2545
       FORMAT (/7X, 'ENTER THE TE FLAP WIDTH AS'/
       7X, 'PERCENT OF TOTAL WING CHORD: ',$)
       READ (5, 2490, ERR=2540) TFLAPC
       IF ((TFLAPC.LT.0.0).OR.(TFLAPC.GT.0.5)) GOTO 2540
       GOTO 2405
2550
       WRITE (6, 2555)
       FORMAT (/7X, 'ENTER THE AMOUNT OF WING VOLUME THAT WILL'/
2555
       7X, 'BE FILLED WITH FUEL, AS PERCENT OF WING VOLUME: ',$)
       READ (5, 2490, ERR=2550) WFFRAC
       IF ((WFFRAC.GT.1.0).OR.(WFFRAC.LT.0.0)) GOTO 2550
       GOTO 2405
2560
       WRITE (6, 2565)
       FORMAT (/7x, 'ENTER THE POSITION OF THE WING QUARTER CHORD'/
2565
       7X,'AS A FRACTION OF BODY LENGTH: ',$)
       READ (5,2490, ERR=2560) XWING
       IF((XWING.GT.1.0).OR.(XWING.LT.0.0)) GOTO 2560
       GOTO 2405
2570
       WRITE (6, 2575)
       FORMAT (/7X, 'ENTER THE ELEVATION OF THE WING ON THE FUSELAGE'/
2575
       7X, '(1.0=TOP, 0.0=MID-MOUNT, -1.0=BOTTOM): ',$)
       READ (5,2460, ERR=2570) ZROOT
       IF((ZROOT.GT.1.0).OR.(ZROOT.LT.-1.0)) GOTO 2570
       GOTO 2405
       WRITE (7,2600) AR, AREA, DIHED, FDENWG, LFLAPC, SWEEP, SWFACT,
2580
       TAPER, TCROOT, TCTIP, TFLAPC, WFFRAC, XWING, ZROOT, KSWEEP,
    & OUTCOD
2600
       FORMAT (' $WING'/
    & 5x,'AR=',F5.2,',',6x,'AREA=',F7.2,',',2x 'DIHED=',F5.2,
```

```
','/5X,'FDENWG=',F6.2,',',1X,'LFLAPC=',F4.2,',',3X,'SWEEP=',F6.2
,','/5X,'SWFACT=',F4.2,',',3X,'TAPER=',F4.2,',',4X,'TCROOT=',
F4.2,','/5X,'TCTIP=',F4.2,',',4X,'TFLAPC=',F4.2,',',3X,'WFFRAC=',F4.2,','/5X,'XWING=',F4.2,',',4X,'ZROOT=',F5.2,',',3X,'KSWEEP=',11,','/5X,'OUTCOD=',11,','/5X,'$END')
         GOTO 2800
                    ! SOWING GEOMETRY CHANGE MENU
C --- SET UP SOWING NAMELIST
         STATUS = LIB$SPAWN('CLS')
 2610
        WRITE (6, 2615) AR, AREA, DIHED, LFLAPC, SWFACT, TAPER, TCROOT,
       TCTIP, TFLAPC, XWING, ZROOT, WFFRAC, FDENWG
 2615
        7x,'** OBLIQUE WING GEOMETRY **'//
        7X, (1)
                  ASPECT RATIO....., F5.2/
        7x, '(2)
                  AREA (SQ FT) ....., F7.2/
         7x,'(3)
                  æ
         7X, '(4)
                   LE FLAP WIDTH (FRACTION TOTAL CHORD) ....
         7X, (5)
                   WETTED AREA MULTIPLIER.....'
     Æ
                   TAPER RATIO..., F4.2/
T/C RATIO, WING ROOT..., F4.2/
         7x,'(6)
     æ
         7X, (7)
         7x, (8)
                   T/C RATIO, WING TIP....., ,F4.2/
         7X, (9)
                   TE FLAP WIDTH (FRACTION TOTAL CHORD) .... ', F4.2/
     ٤
         7X,'(10) POSITION OF WING 1/4 CHORD, AS A '/
7X,' FRACTION OF TOTAL FUSELAGE LENGTH.....',F4.2/
     æ
         7X,'
         7X,'(11) ELEVATION OF WING ON THE FUSELAGE....',F5.2/7X,' (1.0=TOP, 0.0=MID-MOUNT, -1.0=BOTTOM)'/
     æ
        7X, '(12) FRACTION OF WING VOLUME THAT WILL'/
                   BE FILLED WITH FUEL....., F4.2/
        7x,'(13) FUEL DENSITY (LB/FT3)....., F6.2//
        7x, 'SELECT THE VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
         READ (5, 2411, ERR=2610) NUM
         IF (NUM.EQ.0) GOTO 2760
         GOTO (2629, 2635, 2645, 2655, 2665, 2675, 2685, 2695, 2705,
         2715, 2725, 2735, 2745) ,NUM GOTO 2610
 2629
         WRITE (6, 2630)
 2630
         FORMAT (/7X, 'ENTER THE ASPECT RATIO: ',$)
         READ (5,2460,ERR=2629) AR
         IF ((AR.LE.0.0).OR.(AR.GT.12.0)) GOTO 2629
         GOTO 2610
 2635
         WRITE (6, 2640)
         FORMAT (/7x, 'ENTER THE WING AREA (SQ FT): ',$)
 2640
         READ (5, 2446, ERR=2635) AREA
         IF (AREA.LE.0.0) GOTO 2635
         GOTO 2610
 2645
         WRITE (6, 2650)
         FORMAT (/7X, 'ENTER THE WING DIHEDRAL (DEG): ',$)
 2650
         READ (5, 2460, ERR=2645) DIHED
         IF ((DIHED.LT.-20.0).OR.(DIHED.GT.20.0)) GOTO 2645
         GOTO 2610
 2655
         WRITE (6, 2660)
 2660
         FORMAT (/7X, 'ENTER THE LE FLAP WIDTH AS A'/
                  FRACTION OF THE TOTAL CHORD: ',$)
         READ (5, 2490, ERR=2655) LFLAPC
         IF ((LFLAPC.LT.0.0).OR.(LFLAPC.GT.0.5)) GOTO 2655
         GOTO 2610
 2665
         WRITE (6, 2670)
         FORMAT (/7x, 'ENTER THE WETTED AREA MULTIPLIER: ',$)
 2670
```

```
READ (5, 2490, ERR=2665) SWFACT
       IF ((SWFACT.LT.0.0).OR.(SWFACT.GT.2.0)) GOTO 2665
       GOTO 2610
2675
       WRITE (6, 2680)
       FORMAT (/7X, 'ENTER THE TAPER RATIO: ',$)
2680
       READ (5, 2490, ERR=2675) TAPER
        IF ((TAPER.LT.0.0).OR.(TAPER.GT.1.0)) GOTO 2675
       GOTO 2610
2685
       WRITE (6, 2690)
       FORMAT (/7X, 'ENTER THE T/C RATIO AT THE ROOT: ',$)
2690
       READ (5,2490, ERR=2685) TCROOT
        IF ((TCROOT.LE.0.02).OR.(TCROOT.GT.0.18)) GOTO 2685
       GOTO 2610
2695
       WRITE (6, 2700)
2700
       FORMAT (/7X, 'ENTER THE T/C RATIO AT THE WING TIP: ',$)
       READ (5, 2490, ERR=2695) TCTIP
       IF ((TCTIP.LE.0.02).OR.(TCTIP.GT.0.18)) GOTO 2695
       GOTO 2610
2705
       WRITE (6, 2710)
2710
       FORMAT (/7X, 'ENTER THE TE FLAP WIDTH AS A FRACTION'/
                OF TOTAL CHORD: ',$)
       READ (5,2490, ERR=2705) TFLAPC
       IF ((TFLAPC.LT.0.0).OR.(TFLAPC.GT.0.5)) GOTO 2705
       GOTO 2610
2715
       WRITE (6, 2720)
2720
       FORMAT (/7X, 'ENTER THE POSITION OF THE WING 1/4 CHORD'/
                AS A FRACTION OF TOTAL BODY LENGTH: ',$)
       READ (5, 2490, ERR=2715) XWING
       IF ((XWING.GT.1.0).OR.(XWING.LT.0.0)) GOTO 2715
       GOTO 2610
2725
       WRITE (6, 2730)
2730
       FORMAT (/7X, 'ENTER THE ELEVATION OF THE WING ON THE'/
                FUSELAGE (1.0=TOP, 0.0=MID-MOUNT, -1.0=BOTTOM); ',$)
       READ (5, 2460, ERR=2725) ZROOT
       IF ((ZROOT.LT.-1.0).OR.(ZROOT.GT.1.0)) GOTO 2725
       GOTO 2610
2735
       WRITE (6, 2740)
2740
       FORMAT (/7x, 'ENTER THE FRACTION OF THE WING VOLUME THAT'/
       7X, 'WILL BE FILLED WITH FUEL: ',$)
       READ (5, 2490, ERR=2735) WFFRAC
       IF ((WFFRAC.GT.1.0).OR.(WFFRAC.LT.0.0)) GOTO 2735
       GOTO 2610
2745
       WRITE (6, 2750)
2750
       FORMAT (/7x, 'ENTER THE FUEL DENSITY (LB/FT3): ',$)
       READ (5, 2475, ERR=2745) FDENWG
       IF ((FDENWG.LT.0.0)) GOTO 2745
       GOTO 2610
2760
       WRITE (7,2765) AR, AREA, DIHED, LFLAPC, SWFACT, TAPER, TCROOT,
       TCTIP, TFLAPC, XWING, ZROOT, WFFRAC, FDENWG, OUTCOD
2765
       FORMAT (' $QWING'/
    & 5X,'AR=',F5.2,',',6X,'AREA=',F7.2,',',2X,'DIHED=',F5.2,',',/
      5X, 'LFLAPC=',F4.2,',',3X,'SWFACT=',F4.2,',',3X,'TAPER=',F4.2,','/5X,'TCROOT=',F4.2,',',3X,'TCTIP=',F4.2,',',4X,'TFLAPC=',F4.2,','/5X,'XWING=',F4.2,',',4X,'ZROOT=',F5.2,',',3X,
       'WFFRAC=',F4.2,','/5X,'FDENWG=',F6.2,',',1X,'OUTCOD=',I1,','/
       5X, '$END')
       GOTO 2800
     ENDIF
```

```
2800 IF (STRAKE.EQ.'NO') GOTO 3000
    IF (DVFLAG.EQ..TRUE.) THEN ! SET STRAKE DEFAULTS
      XLEXT=0.0
      YSEXT=0.0
      XLAFT=0.0
       YSAFT-0.0
       SWFACT=1.0
       TFT.EX=0
    ELSE
                ! GET THE OLD STRAKE VALUES
       REWIND (10)
2830
      READ (10, 26) ANS
       IF (ANS.EQ.'$$$$$$') THEN ! OLD STRAKE NOT FOUND
        XLEXT=0.0
        YSEXT=0.0
        XLAFT=0.0
        YSAFT=0.0
         SWFACT=1.0
         IFLEX=0
       ELSE
               ! OLD STRAKE VALUES FOUND
         IF (ANS.NE.' $STRA') GOTO 2830
        READ (10, 2840) XLEXT, YSEXT, XLAFT, YSAFT, SWFACT,
2840
        FORMAT (11X, F4.2, 11X, F4.2, 11X, F4.2/11X, F4.2,
        12X, F4.2, 10X, I1)
       ENDIF
     ENDIF
2850 STATUS = LIB$SPAWN('CLS')
    WRITE (6, 2860) XLEXT, YSEXT, XLAFT, YSAFT, SWFACT, IFLEX
2860 FORMAT (/
    67X, *** STRAKE GEOMETRY *** //
    &7X,'(1) X LOCATION OF THE LE STRAKE AS A'/
    £7X,'
            FRACTION OF TOTAL FUSELAGE LENGTH....., F4.2/
    £7X,'(2) RATIO OF THE LE STRAKE SPAN/2 TO THE'/
    £7X,'
            WING SPAN/2.....
                                              .......,F4.2/
    67X, '(3) X LOCATION OF THE TE STRAKE AS A'/
    &7X,'
            FRACTION OF TOTAL FUSELAGE LENGTH....
    &7X,'(4) RATIO OF THE TE STRAKE SPAN/2 TO THE'/
    &7X,'
            WING SPAN/2...., F4.2/
    67X, (5) WETTED AREA MULTIPLIER FOR BOTH STRAKES..., F4.2/
    &7X,'(6) STRAKE BLUNTNESS FLAG....., 11/
    &7X,'
             (SHARP LEADING EDGE=0)'/
    &7X,'
             (BLUNT LEADING EDGE=1)'//
    £7X, 'SELECT THE VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
     READ (5, 21, ERR=2850) NUM
    IF (NUM.EQ.0) GOTO 2950
     GOTO (2880, 2890, 2900, 2910, 2920, 2930), NUM
    GOTO 2850
2880 WRITE (6,2881)
2881 FORMAT (/7X, 'ENTER THE X LOCATION OF THE LE STRAKE AS'/
            A FRACTION OF TOTAL FUSELAGE LENGTH: ',$)
    READ (5, 2490, ERR=2880) XLEXT
     IF ((XLEXT.LT.0.0).OR.(XLEXT.GT.XWING)) GOTO 2880
    GOTO 2850
2890 WRITE (6, 2891)
2891 FORMAT (/7X, 'ENTER THE RATIO OF THE LE STRAKE SPAN/2'/
    &7X,'TO THE WING SPAN/2: ',$)
    READ (5, 2490, ERR=2890) YSEXT
    IF ((YSEXT.GT.1.0).OR.(YSEXT.LT.0.0)) GOTO 2890
    GOTO 2850
```

```
2900 WRITE (6,2901)
 2901 FORMAT (/7X, 'ENTER THE X LOCATION OF THE TE STRAKE AS'/
     £7X,'A FRACTION OF TOTAL FUSELAGE LENGTH: ',$)
      READ (5,2490, ERR=2900) XLAFT
       IF ((XLAFT.LT.XWING).OR.(XLAFT.GT.1.0)) GOTO 2900
      GOTO 2850
 2910 WRITE (6, 2911)
 2911 FORMAT (/7X, 'ENTER THE RATIO OF THE TE STRAKE SPAN/2'/
     &7X,'TO THE WING SPAN/2: ',$)
      READ (5, 2490, ERR=2910) YSAFT
      IF ((YSAFT.GT.1.0).OR.(YSAFT.LT.0.0)) GOTO 2910
      GOTO 2850
 2920 WRITE (6, 2921)
 2921 FORMAT (/7X, 'ENTER THE WETTED AREA MULTIPLIER: ',$)
      READ (5, 2490, ERR=2920) SWFACT
       IF ((SWFACT.LT.0.0).OR.(SWFACT.GT.2.0)) GOTO 2920
      GOTO 2850
 2930 WRITE (6, 2931)
 2931 FORMAT (/7X, 'ENTER THE STRAKE BLUNTNESS FLAG'/
     £7X, '(SHARP LE=0, BLUNT LE=1): ',$)
      READ (5, 2940, ERR=2930) IFLEX
 2940 FORMAT (I1)
      IF ((IFLEX.NE.0).AND.(IFLEX.NE.1)) GOTO 2930
      GOTO 2850
 2950 WRITE (7,2951) XLEXT, YSEXT, XLAFT, YSAFT, SWFACT, IFLEX
2951 FORMAT(' $STRAKE'/5X,'XLEXT=',F4.2,',',4X,'YSEXT=',F4.2,
&',',4X,'XLAFT=',F4.2,','/5X,'YSAFT=',F4.2,',',4X,
&'SWFACT=',F4.2,',',3X,'IFLEX=',I1,','/5X,'$END')
      GOTO 3000
C -
C --- HORIZONTAL TAIL GEOMETRY
C ---
 3000 IF (HTAIL.EQ.'NO') GOTO 3200
      IF (DVFLAG.EQ..TRUE.) THEN
                                       ! SET DEFAULTS
         AR=5.0
         AREA-50.0
         CVHT=1.0
         HTFRAC=0.0
         SWEEP=0.0
         SWFACT=1.0
         TAPER=0.99
         TCROOT=0.1
         TCTIP=0.1
         XHTAIL-1.0
         ZROOT=0.0
         KSWEEP-0
         OUTCOD=2
         SIZIT=.FALSE.
      ELSE
         REWIND (10)
 3010
         READ (10, 26) ANS
         IF (ANS.EQ.'$$$$$') THEN
           AR=5.0
           AREA=0.0
           CVHT=1.0
           HTFRAC=0.0
           SWEEP=0.0
           SWFACT-1.0
           TAPER=0.99
           TCROOT=0.1
```

```
TCTIP=0.1
         XHTAIL=1.0
         ZROOT=0.0
         KSWEEP=0
         OUTCOD=2
         SIZIT-F
       ELSE
         IF (ANS.NE.' $HTAI') GOTO 3010
         READ(10,3020) AR, AREA, CVHT, HTFRAC, SWEEP, SWFACT, TAPER, TCROOT, TCTIP, XHTAIL, ZROOT, KSWEEP, OUTCOD, SIZIT FORMAT(8X,F5.2,12X,F7.2,8X,F4.2/12X,F5.3,9X,F5.2,11X,F4.2/
3020
         11x, F4.2, 12x, F4.2, 10x, F4.2/12x, F4.2, 10x, F4.2, 12x, I1/
         12X, I1, 13X, L1)
       ENDIF
     ENDIF
3030 STATUS = LIB$SPAWN('CLS')
    WRITE(6,3040) AR, AREA, CVHT, SWEEP, SWFACT, TAPER, &TCROOT, TCTIP, XHTAIL, ZROOT, SIZIT, HTFRAC
3040 FORMAT (/
    &7X,'** HORIZONTAL TAIL GEOMETRY **'//
    £7X,'(1) ASPECT RATIO....., F5.2/
    £7X, (2)
             SURFACE AREA (SQ FT)........., F7.2/
    £7X,'(3)
             TAIL VOLUME COEFFICIENT....., F4.2/
             LE SWEEP (DEG) ......, F5.2/
WETTED AREA MULTIPLIER ....., F4.2/
    £7X,'(4)
    &7X,'(5)
    £7X,'(6)
              TAPER RATIO...., F4.2/
    £7X, (7)
              T/C RATIO AT ROOT....., F4.2/
    £7X,'(8)
              T/C RATIO AT TIP....., F4.2/
    47X,'(9) POSITION OF THE TE OF TAIL ROOT CHORD AS'/
    &7X,'
              A FRACTION OF TOTAL FUSELAGE LENGTH....., F4.2/
    £7X, (10) ELEVATION OF TAIL ON FUSELAGE....., F4.2/
    &7X,'
               (0 - 1.0: TAIL WITHIN FUSELAGE)'/
    £7X,'
               (1.0 - 1.99: TAIL ABOVE FUSELAGE)'/
    &7X,'
               (2.0: HORIZONTAL TAIL ON TOP OF VERTICAL TAIL) '/
    £7X,'(11) SIZING LOGIC.....',L1/
    &7X,'
               (T = TAIL AREA RECOMPUTED BY ACSYNT)'/
               (F = USE THE INPUT TAIL AREA ONLY) '/
    &7X,'
    &7X, (12) HORIZONTAL TAIL SIZING FRACTION...
                                                       .....',F5.3//
    £7X, 'SELECT A VALUE TO CHANGE OR 0 TO QUIT: ',$)
     READ (5, 2411, ERR=3030) NUM
     IF (NUM.EQ.0) GOTO 3120
    GOTO (3050, 3055, 3060, 3065, 3070, 3075, 3080, 3085, 3090, 43095, 3100, 3110), NUM
GOTO 3030
3050 WRITE (6, 3051)
3051 FORMAT (/7X, 'ENTER THE ASPECT RATIO: ',$)
     READ (5, 2460, ERR=3050) AR
     IF ((AR.LT.0.0).OR.(AR.GT.12.0)) GOTO 3050
     GOTO 3030
3055 WRITE (6,3056)
3056 FORMAT (/7x, 'ENTER THE HORIZONTAL TAIL AREA (SQ FT): ',$)
     READ (5, 2446, ERR=3055) AREA
     IF (AREA.LT.0.0) GOTO 3055
     GOTO 3030
3060 WRITE (6,3061)
3061 FORMAT (/7X, 'ENTER THE TAIL VOLUME COEFFICIENT: ',$)
     READ (5, 2490, ERR=3060) CVHT
     IF ((CVHT.LT.0.3).OR.(CVHT.GT.1.0)) GOTO 3060
     GOTO 3030
3065 WRITE (6, 3066)
```

```
3066 FORMAT (/7X, 'ENTER THE LEADING EDGE TAIL SWEEP (DEG): ',$)
     READ (5, 2460, ERR=3065) SWEEP
     IF ((SWEEP.LT.-9.0).OR.(SWEEP.GT.60.0)) GOTO 3065
     GOTO 3030
3070 WRITE (6,3071)
3071 FORMAT (/7x, 'ENTER THE WETTED AREA MULTIPLIER: ',$)
     READ (5,2490, ERR=3070) SWFACT
     IF((SWFACT.LT.0.0).OR.(SWFACT.GT.2.0)) GOTO 3070
     GOTO 3030
3075 WRITE (6,3076)
3076 FORMAT (/7X, 'ENTER THE HORIZONTAL TAIL TAPER RATIO: ',$)
     READ (5, 2490, ERR=3075) TAPER
     IF ((TAPER.LT.0.0).OR.(TAPER.GT.1.0)) GOTO 3075
     GOTO 3030
3080 WRITE (6,3081)
3081 FORMAT (/7X, 'ENTER THE THICKNESS/CHORD RATIO'/
    &7X,'AT THE HORIZONTAL TAIL ROOT: ',$)
     READ (5,2490, ERR=3080) TCROOT
     IF((TCROOT.LT.0.02).OR.(TCROOT.GT.0.18)) GOTO 3080
     GOTO 3030
3085 WRITE (6,3086)
3086 FORMAT (/7X, 'ENTER THE THICKNESS/CHORD RATIO AT THE TAIL TIP: ',$)
     READ (5,2490, ERR=3085) TCTIP
     IF((TCTIP.LT.0.02).OR.(TCTIP.GT.0.18)) GOTO 3085
     GOTO 3030
3090 WRITE (6,3091)
3091 FORMAT (/7X, 'ENTER THE POSITION OF THE TRAILING EDGE'/
    £7X, 'OF THE HORIZONTAL TAIL AS A FRACTION OF TOTAL' /
    &7X, 'FUSELAGE LENGTH: ',$)
     READ (5, 2490, ERR=3090) XHTAIL
     IF ((XHTAIL.LT.0.5).OR.(XHTAIL.GT.1.0)) GOTO 3090
     GOTO 3030
3095 WRITE (6,3096)
3096 FORMAT (/7X, 'ENTER THE ELEVATION OF THE HORIZONTAL TAIL'/
    £7X,'0.0 - 0.99 HAS THE TAIL IN THE FUSELAGE'/
    &7X,'1.0 - 1.99 HAS THE TAIL ON THE VERTICAL STAB'
    &7X,'2.0 HAS THE TAIL ON TOP OF THE VERTICAL STAB: ',$)
     READ (5, 2490, ERR=3095) ZROOT
     IF((ZROOT.LT.0.0).OR.(ZROOT.GT.2.0)) GOTO 3095
     GOTO 3030
3100 WRITE (6, 3101)
3101 FORMAT (/7X, 'ENTER THE HORIZONTAL TAIL SIZING LOGIC'/
    47X,'T = ACSYNT WILL RESIZE THE TAIL'/
    $7X,'F = THE INPUT VALUE OF THE TAIL SIZE IS USED: ',$)
     READ (5, 3105, ERR=3100) SIZIT
3105 FORMAT (L1)
     GOTO 3030
3110 WRITE (6, 3115)
3115 FORMAT (/7X, 'ENTER THE HORIZONTAL TAIL SIZING FRACTION.'/
    &7X,'IF 0.0 IS ENTERED THE TAIL WILL BE SIZED USING THE'/
    &7X, 'VOLUME COEFFICIENT: ',$)
     READ (5, 3117, ERR=3110) HTFRAC
3117 FORMAT (F5.3)
     IF ((HTFRAC.LT.0.0).OR.(HTFRAC.GT.1.0)) GOTO 3110
     GOTO 3030
3120 WRITE(7,3125) AR, AREA, CVHT, HTFRAC, SWEEP, SWFACT, TAPER,
    &TCROOT, TCTIP, XHTAIL, ZROOT, KSWEEP, OUTCOD, SIZIT
3125 FORMAT(' $HTAIL'/5X,'AR=',F5.2,',',6X,'AREA=',F7.2,','
    6'CVHT=',F4.2,','/5X,'HTFRAC=',F5.3,',',2X,'SWEEP=',F5.2,','
    &3X, 'SWFACT=', F4.2,','/5X,'TAPER=', F4.2,',', 4X,'TCROOT=', F4.2,
```

```
&',',3X,'TCTIP=',F4.2,','/5X,'XHTAIL=',F4.2,',',3X,'ZROOT='
     6F4.2,',',4X,'KSWEEP=',I1,','/5X,'OUTCOD=',I1,','6X,'SIZIT=',6L1,','/5X,'$END')
      GOTO 3200
C --- VERTICAL TAIL GEOMETRY
c -
 3200 IF (VTAIL.EQ.'NO') GOTO 3400
      IF (DVFLAG.EQ..TRUE.) THEN
                                      ! SET VTAIL DEFAULTS
        AR=5.0
         AREA-50.0
         CVVT=0.6
         SWEEP=0.0
         SWFACT=1.0
         TAPER-0.99
         TCROOT=0.1
         TCTIP=0.1
         VTFRAC=0.0
         VTNO=1.0
        XVTAIL-1.0
         YROOT=0.0
         ZROOT=0.0
         KSWEEP=0
         OUTCOD=2
         SIZIT=F
      ELSE
                     ! READ OLD VTAIL
         REWIND (10)
 3210
         READ (10, 26) ANS
         IF (ANS.EQ.'$$$$$$') THEN
           AR=5.0
           AREA=0.0
           CVVT-0.08
           SWEEP-0.0
           SWFACT-1.0
           TAPER=0.99
           TCROOT=0.1
           TCTIP=0.1
           VTFRAC=0.0
           VTNO=1.0
           XVTAIL-1.0
           YROOT=0.0
           ZROOT=0.0
           KSWEEP=0
           OUTCOD=2
           SIZIT=F
         ELSE
           IF (ANS.NE.' $VTAI') GOTO 3210
           READ(10,3220) AR, AREA, CVVT, SWEEP, SWFACT, TAPER, TCROOT, TCTIP, VTFRAC, VTNO, XVTAIL, YROOT, ZROOT, KSWEEP, OUTCOD,
     £
           SIZIT
 3220
           FORMAT (8X, F5.2, 12X, F7.2, 8X, F4.2/11X, F5.2, 11X, F4.2, 10X, F4.2/
           12X,F4.2,10X,F4.2,12X,F5.3/10X,F3.1,14X,F4.2,10X,F4.2/
           11X,F4.2,12X,I1,14X,I1/11X,L1)
        ENDIF
      ENDIF
 3230 STATUS = LIB$SPAWN('CLS')
      WRITE (6,3240) AR, AREA, CVVT, SWEEP, SWFACT, TAPER, TCROOT,
     &TCTIP, VTNO, XVTAIL, ZROOT, SIZIT, VTFRAC
 3240 FORMAT (/
     67X, ** VERTICAL TAIL GEOMETRY ***//
```

```
&7X,'(1)
            ASPECT RATIO....., F5.2/
    £7X,'(2)
             TAIL AREA (SQ FT)....., F7.2/
    £7X,'(3)
             TAIL VOLUME COEFFICIENT....., F4.2/
    £7X, (4)
            LE SWEEP (DEG)....., F5.2/
    &7X,'(5)
            WETTED AREA MULTIPLIER....., F4.2/
    £7X,'(6)
            TAPER RATIO.....
    &7X,'(7)
             T/C RATIO AT ROOT.....
    £7X,'(8)
             T/C RATIO AT TIP.....
    £7X,'(9) NUMBER OF VERTICAL TAILS.....',F3.1/
    47X,' (10) X LOCATION OF THE TE OF THE ROOT CHORD'/
            AS A FRACTION OF FUSELAGE LENGTH....., F4.2/
    67X, (11) ELEVATION OF THE ROOT CHORD OF THE TAIL AS'/
    &7X,'
            A FRACTION OF THE FUSELAGE RADIUS....., F4.2/
    £7X, '(12) SIZING LOGIC.....',L1/
    £7X,'
             T = ACSYNT WILL COMPUTE TAIL AREA'/
   £7X,'
             F = THE INPUT TAIL AREA WILL BE USED'/
   £7X,'(13) VERTICAL TAIL SIZING FRACTION.....
                                                   .....',F5.3//
    &7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
    READ (5, 2411, ERR=3230) NUM
    IF (NUM.EQ.0) GOTO 3340
   GOTO (3250, 3255, 3260, 3265, 3270, 3275, 3280, 3285, 3290, 43300, 3310, 3320, 3330), NUM
GOTO 3230
3250 WRITE (6, 3251)
3251 FORMAT (/7X, 'ENTER THE ASPECT RATIO: ',$)
    READ (5, 2460, ERR=3250) AR
    IF ((AR.LT.0.0).OR.(AR.GT.12.0)) GOTO 3250
    GOTO 3230
3255 WRITE (6, 3256)
3256 FORMAT (/7X, 'ENTER THE VERTICAL TAIL AREA (SQ FT): ',$)
    READ (5, 2446, ERR=3255) AREA
    IF (AREA.LT.0.0) GOTO 3255
    GOTO 3230
3260 WRITE (6, 3261)
3261 FORMAT (/7X, 'ENTER THE VERTICAL TAIL VOLUME COEFFICIENT: ',$)
    READ (5, 2490, ERR=3260) CVVT
    IF((CVVT.LT.0.01).OR.(CVVT.GT.0.2)) GOTO 3260
    GOTO 3230
3265 WRITE (6, 3266)
3266 FORMAT (/7X, 'ENTER THE LE SWEEP OF THE VERTICAL TAIL: ',$)
    READ (5,2460, ERR=3265) SWEEP
    IF ((SWEEP.LT.-9.0).OR.(SWEEP.GT.60.0)) GOTO 3265
    GOTO 3230
3270 WRITE (6,3271)
3271 FORMAT (/7x, 'ENTER THE WETTED AREA MULTIPLIER: ',$)
    READ (5, 2490, ERR=3270) SWFACT
    IF ((SWFACT.LT.0.0).OR.(SWFACT.GT.2.0)) GOTO 3270
    GOTO 3230
3275 WRITE (6, 3276)
3276 FORMAT (/7X, 'ENTER THE TAPER RATIO: ',$)
    READ (5, 2490, ERR=3275) TAPER
    IF ((TAPER.LT.0.0).OR. (TAPER.GT.1.0)) GOTO 3275
    GOTO 3230
3280 WRITE (6, 3281)
3281 FORMAT (/7X, 'ENTER THE T/C RATIO AT ROOT: ',$)
    READ (5, 2490, ERR=3280) TCROOT
    IF((TCROOT.LT.0.02).OR.(TCROOT.GT.0.18)) GOTO 3280
    GOTO 3230
3285 WRITE (6, 3286)
3286 FORMAT (/7X, 'ENTER THE T/C RATIO AT TIP: ',$)
```

```
READ (5, 2490, ERR=3285) TCTIP
      IF((TCTIP.LT.0.02).OR.(TCTIP.GT.0.18)) GOTO 3285
      GOTO 3230
 3290 WRITE (6, 3291)
 3291 FORMAT (/7X, 'ENTER THE NUMBER OF VERTICAL TAILS'/
     47X, '2.0 = 2 SYMMETRICALLY LOCATED TAILS'/
     47X,'3.0 = 1 TAIL ON CENTERLINE AND 2 SYMMETRICALLY LOCATED'//
     67X, 'NUMBER OF TAILS: ',$)
      READ (5,3295,ERR-3290) VINO
 3295 FORMAT (F3.1)
      IF((VTNO.NE.1.0).AND.(VTNO.NE.2.0).AND.(VTNO.NE.3.0)) GOTO 3290
      GOTO 3230
 3300 WRITE (6, 3301)
 3301 FORMAT (/7X, 'ENTER THE POSITION OF THE TE OF THE TAIL ROOT CHORD'/
     &7X,'AS A FRACTION OF FUSELAGE LENGTH: ',$)
      READ (5,2490, ERR=3300) XVTAIL
      IF ((XVTAIL.LT.0.0).OR.(XVTAIL.GT.1.0)) GOTO 3300
      GOTO 3230
 3310 WRITE(6,3311)
 3311 FORMAT (/7x, 'ENTER THE ELEVATION OF THE ROOT CHORD OF'/
     &7X, THE VERTICAL TAIL AS A FRACTION OF THE MAXIMUM' /
     47X, 'FUSELAGE RADIUS: ',$)
      READ (5,2490, ERR=3310) ZROOT
      IF ((ZROOT.LT.-1.0).OR.(ZROOT.GT.1.0)) GOTO 3310
      GOTO 3230
 3320 WRITE (6, 3321)
 3321 FORMAT (/7x, 'ENTER THE SIZING LOGIC'/
     &7X,'T = ACSYNT WILL SIZE THE VERTICAL TAIL'/
     67X,'F = THE INPUT VALUE OF THE TAIL AREA WILL BE USED: ',$)
      READ (5, 3105, ERR=3320) SIZIT
      GOTO 3230
 3330 WRITE(6,3335)
 3335 FORMAT (/7x, 'ENTER THE VERTICAL TAIL SIZING FRACTION.'/
     &7X,'IF 0.0 IS ENTERED, THE TAIL WILL BE SIZED USING THE'/
     &7x.'VOLUME COEFFICIENT: ',$)
      READ (5, 3117, ERR=3330) VTFRAC
      IF ((VTFRAC.LT.0.0).OR.(VTFRAC.GT.1.0)) GOTO 3330
      GOTO 3230
 3340 WRITE(7,3341) AR, AREA, CVVT, SWEEP, SWFACT, TAPER, TCROOT,
     STCTIP, VTFRAC, VTNO, XVTAIL, YROOT, ZROOT, KSWEEP, OUTCOD,
     ESIZIT
 3341 FORMAT(' $VTAIL'/5X,'AR=',F5.2,',',6X,'AREA=',F7.2,',',2X,
     6'CVVT=',F4.2,','/5X,'SWEEP=',F5.2,',',3X,'SWFACT=',F4.2,',',
£3X,'TAPER=',F4.2,','/5X,'TCROOT=',F4.2,',',3X,'TCTIP=',F4.2,
6',',4X,'VTFRAC=',F5.3,','/5X,'VTNO=',F3.1,',',6X,'XVTAIL=',
     &F4.2,',',3X,'YROOT=',F4.2,','/5X,'ZROOT=',F4.2,',',4X,
     &'KSWEEP=', I1,',', 6x,'OUTCOD=', I1,','/5x,'SIZIT=',L1,','/
     &5X, '$END')
      GOTO 3400
C --
С
  --- CANARD GEOMETRY
c -
 3400 IF (CANARD.EQ.'NO') GOTO 3600
      IF (DVFLAG.EQ..TRUE.) THEN
                                     ! SET CANARD DEFAULTS
         AR=5.0
         AREA=50.0
         CVCAN=-.8
         CFRAC=0.0
         SWEEP=0.0
         SWFACT=1.0
```

```
TAPER=0.99
      TCROOT=0.1
      TCTIP=0.1
      XCAN=0.0
      ZROOT=0.0
      NCAN-1
      KSWEEP=0
      OUTCOD=2
      SIZIT=.FALSE.
    ELSE
                    ! GET THE OLD VALUES
      REWIND (10)
3420
      READ (10, 26) ANS
      IF (ANS.EQ.'$$$$$$') THEN ! OLD VALUES NOT FOUND
        AR=5.0
        AREA=0.0
        CVCAN=-1.0
        CFRAC=0.0
        SWEEP=0.0
        SWFACT=1.0
        TAPER=0.99
        TCROOT=0.1
        TCTIP=0.1
        XCAN=0.0
        ZROOT=0.0
        NCAN-1
        OUTCOD=2
        SIZIT=.FALSE.
      ELSE
        IF (ANS.NE.' $CANA') GOTO 3420
        ICAN REMOVED...NOT IN CANARD NAMELIST
        READ (10,3430) AR, AREA, CVCAN, SWEEP, SWFACT, TAPER,
        TCROOT, TCTIP, XCAN, ZROOT, NCAN, KSWEEP,
        OUTCOD, SIZIT, CFRAC
3430
        FORMAT (8X, F5.2, 12X, F7.2, 9X, F5.2/11X, F5.2, 11X, F4.2,
        10X,F4.2/12X,F4.2,10X,F4.2,10X,F4.2/11X,F5.2,24X,
        11/12X, I1, 14X, I1, 13X, L1/11X, F5.3)
      ENDIF
    ENDIF
3440 STATUS = LIB$SPAWN('CLS')
    WRITE (6,3450) AR, AREA, CVCAN, SWEEP, SWFACT, TAPER, TCROOT,
   &TCTIP, XCAN, ZROOT, NCAN, SIZIT, CFRAC
3450 FORMAT (/
   &7X, ** CANARD GEOMETRY ***//
   67X, (1) ASPECT RATIO....., F5.2/
   67X, '(2) AREA (SQ FT)....., F7.2/
   47X,'(3) CANARD VOLUME COEFFICIENT.....',F5.2/
47X,'(4) SWEEP (DEG).....',F5.2/
   67X, (5) WETTED REA MULTIPLIER....., F4.2/
   £7X, '(6) TAPER RATIO.....', F4.2/
    £7X,'(7) T/C RATIO AT ROOT......,',F4.2/
   67X, (8) T/C RATIO AT TIP................, F4.2/
    67X, '(9) X LOCATION OF CANARD LE, AS A FRACTION'/
    &7X.'
             OF FUSELAGE LENGTH....., F4.2/
   £7X,'(10) ELEVATION OF CANARD ON FUSELAGE.....', F5.2/
   £7X,'
            (1.0 = TOP, -1.0 = BOTTOM)'/
    £7X,'(11) CANARD LOCATION.....
   &7X,'
            (1 = CANARDS ON CENTRAL BODY)'/
   &7X,'
             (2 = CANARDS OUTBOARD OF TWIN NACELLES) '/
    &7X,'(12) SIZING LOGIC.....',L1/
   &7X,'
             (T = CANARD AREA RECOMPUTED BY ACSYNT) //
```

```
&7X.'
               (F = CANARD AREA FIXED BY INPUT VALUE)'/
    &7X, (13) CANARD SIZING FRACTION.....
                                                         ...',F5.3//
    67X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
     READ (5, 2411, ERR=3440) NUM
     IF (NUM.EQ.0) GOTO 3530
     GOTO (3460, 3465, 3470, 3475, 3480, 3485, 3490, 3495, 3500, 3505,
    43510, 3515, 3520), NUM
     GOTO 3440
3460 WRITE (6,3461)
3461 FORMAT (/7X, 'ENTER THE ASPECT RATIO: ',$)
     READ (5, 2460, ERR=3460) AR
     IF ((AR.LE.0.0).OR.(AR.GT.12.0)) GOTO 3460
     GOTO 3440
3465 WRITE (6, 3466)
3466 FORMAT (/7X, 'ENTER THE CANARD AREA (SQ FT). IF YOU'/
    47X, 'WANT ACSYNT TO SIZE THE CANARD BASED ON THE'/
    &7X, 'CANARD VOLUME COEFFICIENT, ENTER 0.0: ',$)
     READ (5, 2446, ERR=3465) AREA
     IF (AREA.LT.0.0) GOTO 3465
     GOTO 3440
3470 WRITE (6,3471)
3471 FORMAT (/7X, 'ENTER THE CANARD VOLUME COEFFICIENT'/
    47X, (THIS SHOULD BE A NEGATIVE VALUE): ',$)
     READ (5, 2460, ERR=3470) CVCAN
     IF ((CVCAN.LT.-1.0).OR.(CVCAN.GT.0.0)) GOTO 3470
     GOTO 3440
3475 WRITE (6,3476)
3476 FORMAT (/7X, 'ENTER THE LEADING EDGE SWEEP (DEG): ',$)
     READ (5, 2460, ERR-3475) SWEEP
     IF ((SWEEP.LT.-9.0).OR.(SWEEP.GT.60.0)) GOTO 3475
     GOTO 3440
3480 WRITE (6,3481)
3481 FORMAT (/7X, 'ENTER THE WETTED AREA MULTIPLIER: ',$)
     READ (5,2490, ERR=3480) SWFACT
     IF ((SWFACT.LE.0.0).OR.(SWFACT.GT.2.0)) GOTO 3480
     GOTO 3440
3485 WRITE (6, 3486)
3486 FORMAT (/7X, 'ENTER THE TAPER RATIO: ',$)
     READ (5,2490, ERR=3485) TAPER
     IF ((TAPER.LT.0.0).OR. (TAPER.GT.1.0)) GOTO 3485
     GOTO 3440
3490 WRITE(6,3491)
3491 FORMAT (/7X, 'ENTER THE T/C RATIO AT THE ROOT: ',$)
     READ (5, 2490, ERR=3490) TCROOT
     IF ((TCROOT.LT.0.02).OR.(TCROOT.GT.0.18)) GOTO 3490
     GOTO 3440
3495 WRITE (6,3496)
3496 FORMAT (/7X, 'ENTER THE T/C RATIO AT THE TIP: ',$)
     READ (5, 2490, ERR=3495) TCTIP
     IF ((TCTIP.LT.0.02).OR.(TCTIP.GT.0.18)) GOTO 3495
     GOTO 3440
3500 WRITE(6,3501)
3501 FORMAT (/7X, 'ENTER THE X LOCATION OF THE LEADING EDGE'/
    47X, 'OF THE CANARD AS A FRACTION OF THE FUSELAGE' /
    67X, 'LENGTH: ',$)
     READ (5, 2490, ERR=3500) XCAN
     IF ((XCAN.LT.0.0).OR.(XCAN.GT.0.5)) GOTO 3500
     GOTO 3440
3505 WRITE (6, 3506)
3506 FORMAT (/7X, 'ENTER THE ELEVATION OF THE CANARD ON THE'/
```

```
\xi 7X, 'FUSELAGE (1.0 = TOP OF FUSELAGE, -1.0 = BOTTOM'/
     &7X, 'OF FUSELAGE): ',$)
      READ (5, 2460, ERR=3505) ZROOT
      IF((ZROOT.LT.-1.0).OR.(ZROOT.GT.1.0)) GOTO 3505
      GOTO 3440
 3510 WRITE (6, 3511)
 3511 FORMAT (/7x, 'ENTER THE CANARD LOCATION CODE'/
     £7X, '(1 = CANARD IS ON THE CENTRAL BODY)'/
     67X, '(2 = CANARD IS MOUNTED OUTBOARD OF TWIN NACELLES): ',$)
      READ (5, 2940, ERR=3510) NCAN
      IF ((NCAN.NE.1).AND.(NCAN.NE.2)) GOTO 3510
      GOTO 3440
 3515 WRITE (6, 3516)
 3516 FORMAT (/7x, 'ENTER THE CANARD SIZING LOGIC'/
     &7X, '(T = ACSYNT MAY RESIZE THE CANARD)'/
     £7X, '(F = THE INPUT VALUE OF CANARD SIZE WILL BE USED): ',$)
      READ (5, 3105, ERR=3515) SIZIT
      GOTO 3440
 3520 WRITE (6,3525)
 3525 FORMAT(/7x,'ENTER THE CANARD SIZING FRACTION. IF 0.0'/
     &7X,'IS ENTERED, THE CANARD WILL BE SIZED USING THE'/
     £7X, 'VOLUME COEFFICIENT: ',$)
      READ (5, 3117, ERR=3520) CFRAC
      IF((CFRAC.LT.0.0).OR.(CFRAC.GT.1.0)) GOTO 3520
      GOTO 3440
 3530 WRITE (7,3531) AR, AREA, CVCAN, SWEEP, SWFACT, TAPER, TCROOT,
     STCTIP, XCAN, ZROOT, NCAN, KSWEEP, OUTCOD, SIZIT, CFRAC
 3531 FORMAT(' $CANARD'/5X,'AR=',F5.2,',',6X,'AREA=',F7.2,',',
     &2X,'CVCAN=',F5.2,','/5X,'SWEEP=',F5.2,',',3X,'SWFACT=',
     6F4.2,',',3X,'TAPER=',F4.2,','/5X,'TCROOT=',F4.2,',',3X,
6'TCTIP=',F4.2,',',4X,'XCAN=',F4.2,','/5X,'ZROOT=',F5.2,
6',',18X,'NCAN=',I1,','/5X,'KSWEEP=',I1,
6',',6X,'OUTCOD=',I1,',',6X,'SIZIT=',L1,','/5X,'CFRAC=',F5.3,
     &',',3X,'$END')
      GOTO 3600
C --- WING POD GEOMETRY
 3600 IF (WPOD.EQ.'NO') GOTO 3700
 3602 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 3603)
 3603 FORMAT (//7X, 'ENTER THE NUMBER OF WING PODS. IF THE PODS ARE'/
     67X, SYMMETRICALLY MOUNTED AROUND THE FUSELAGE, JUST ENTER'/
     $7X,'THE NUMBER OF PODS ON ONE SIDE OF THE AIRCRAFT AND'/
     67X, SELECT THE WING POD SYMMETRY CODE. (A MAXIMUM TOTAL OF'/
     47X,'10 PODS MAY BE USED'//
     £7X, 'NUMBER OF PODS: ',$)
      READ (5, 2411, ERR=3602) PODNUM
      IF ((PODNUM.GT.10).OR.(PODNUM.LT.1)) GOTO 3602
      DO 3690 I=1, PODNUM
         IF ( (DVFLAG.EQ..TRUE.) .OR. (WPODFL.EQ.1) ) THEN
                                                              ! SET DEFAULTS
           DIAM-3.0
           LENGTH=10.0
           x=0.0
           Y = 0.5
           z = -1.0
           OUTCOD=2
           SYMCOD=0
         ELSE
           IF (I.EQ.1) REWIND (10)
```

```
3610
         READ (10, 26) ANS
         IF (ANS.EQ.'$$$$$') THEN
                         ! FLAG TO PREVENT EOF ERROR
           WPODFL=1
           DIAM=3.0
           LENGTH=10.0
           x=0.0
           Y=0.5
           z=-1.0
           OUTCOD-2
           SYMCOD=0
         ELSE
           IF (ANS.NE.' $WPOD') GOTO 3610
           READ (10,3615) DIAM, LENGTH, X, Y, Z, OUTCOD, SYMCOD
           FORMAT (10X, F6.2, 11X, F6.2, 4X, F5.2/7X, F3.1, 12X, F5.2,
3615
           15X, I1/12X, I1)
         ENDIF
       ENDIF
3620
       STATUS = LIB$SPAWN ('CLS')
       WRITE (6, 3625) I, DIAM, LENGTH, X, Y, Z, SYMCOD
       FORMAT (/
3625
       7X, *** WING ENGINE POD NUMBER ', I1, *** //
       7X, '(1) ENGINE DIAMETER (FT) ......, F6.2/
       7x,'(2) ENGINE LENGTH (FT).....', F6.2/
       7X, '(3) X LOCATION OF POD, RELATIVE TO THE WING LE, '/
    £
       7x,'
              AS A FRACTION OF LOCAL CHORD....., F5.2/
       7X, '(4) Y LOCATION OF CENTER OF POD MEASURED FROM'/
    £
       7x.'
    Æ
               FUSELAGE CENTERLINE, AS A FRACTION OF '/
       7x,'
    £
               WING SEMI-SPAN.....
       7X,'(5) Z LOCATION OF WING POD, GIVEN AS A FRACTION'/
    £
    ٤
       7x,'
              OF MAXIMUM POD DIAMETER, RELATIVE TO WING...', F5.2/
       7x,'
               ( <0 IF POD IS BELOW WING, >0 IF ABOVE)'/
       7X,'(6) WING POD SYMMETRY.....
    £
       7x,'
    £
               (0 = WING POD HAS IMAGE ON OPPOSITE WING) '/
       7x,'
               (1 = WING POD DOES NOT HAVE AN IMAGE) '//
       7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
       READ (5, 21, ERR=3620) NUM
       IF (NUM.EQ.0) GOTO 3670
       GOTO (3630, 3640, 3645, 3650, 3660, 3665) , NUM
       GOTO 3620
       WRITE (6, 3631)
3630
3631
       FORMAT (/7X, 'ENTER THE POD DIAMETER (FEET): ',$)
       READ (5, 3635, ERR=3630) DIAM
       IF ((DIAM.LE.0.0).OR.(DIAM.GT.30.0)) GOTO 3630
3635
       FORMAT (F6.2)
       GOTO 3620
3640
       WRITE (6, 3641)
       FORMAT (/7X, 'ENTER THE POD LENGTH (FEET): ',$)
3641
       READ (5, 3635, ERR=3640) LENGTH
       IF ((LENGTH.LE.0.0).OR.(LENGTH.GT.40.0)) GOTO 3640
       GOTO 3620
3645
      WRITE (6, 3646)
3646
       FORMAT (/7X, 'ENTER THE X LOCATION OF THE WING POD'/
       7x, 'relative to the Leading edge of the wing' /
       7x, 'AS A FRACTION OF THE LOCAL CHORD (POSITIVE'/
    •
       7X, BEHIND THE LE): ',$)
       READ (5, 2460, ERR=3645) X
       IF((X.LT.-1.0).OR.(X.GT.1.0)) GOTO 3645
       GOTO 3620
3650
       WRITE (6, 3651)
3651
       FORMAT (/7X, 'ENTER THE Y LOCATION OF THE WING POD'/
```

```
7X, 'RELATIVE TO THE FUSELAGE CENTERLINE AS A'/
       7x, 'FRACTION OF THE WING SEMI-SPAN: ',$)
        READ (5, 3655, ERR=3650) Y
 3655
        FORMAT (F3.1)
        IF((Y.LT.0.0).OR.(Y.GT.1.0)) GOTO 3650
        GOTO 3620
 3660
        WRITE (6, 3661)
        FORMAT (/7x, 'ENTER THE Z LOCATION OF THE WING POD'/
 3661
       7X, 'RELATIVE TO THE WING, AS A FRACTION OF THE'/
       7X, 'MAXIMUM POD DIAMETER: ',$)
         READ (5, 2460, ERR=3660) Z
         IF ((Z.LT.-2.0).OR.(Z.GT.2.0)) GOTO 3660
         GOTO 3620
 3665
        WRITE (6, 3666)
 3666
        FORMAT (/7x, 'ENTER THE WING POD SYMMETRY CODE: '/
        7x, '(0 = POD HAS AN IMAGE ON OPPOSITE WING) <math>'/
        7X, '(1 = POD DOES NOT HAVE AN IMAGE) ',$)
         READ (5, 2940, ERR=3665) SYMCOD
         IF ((SYMCOD.NE.0).AND.(SYMCOD.NE.1)) GOTO 3665
         GOTO 3620
        WRITE (7,3671) DIAM, LENGTH, X, Y, Z, OUTCOD, SYMCOD FORMAT (' $WPOD'/5X,'DIAM=',F6.2,',',3X,'LENGTH=',F6.2,',',1X,'X=',F5.2,','/5X,'Y=',F3.1,',',9X,'Z=',F5.2,',',
 3670
 3671
           7x,'OUTCOD=', I1,','/5x,'SYMCOD=', I1,','/5x,'$END')
 3690 CONTINUE
C --
C --- FUSELAGE POD GEOMETRY
 3700 IF (FPOD.EQ.'NO') GOTO 3800
 3702 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 3703)
 3703 FORMAT (//7X, 'ENTER THE NUMBER OF FUSELAGE PODS. IF THE PODS'/
     £7X,'ARE SYMMETRICALLY MOUNTED AROUND THE FUSELAGE, JUST'/
     47X, 'ENTER THE NUMBER OF PODS ON ONE SIDE OF THE AIRCRAFT AND' /
     £7X, 'SELECT THE POD SYMMETRY CODE. (A MAXIMUM TOTAL OF'/
     &7X,'10 PODS MAY BE USED'//
     £7X, 'NUMBER OF PODS: ',$)
READ(5,2411,ERR=3602) PODNUM
      IF ((PODNUM.GT.10).OR.(PODNUM.LT.1)) GOTO 3702
      DO 3790 I=1, PODNUM
         IF ((DVFLAG.EQ..TRUE.).OR.(FPODFL.EQ.1)) THEN ! SET DEFAULTS
           DIAM=3.0
           LENGTH=10.0
           SOD=0.1
           THETA-0.0
           X = 0.8
           OUTCOD=2
           SYMCOD=0
         ELSE
           IF (I.EQ.1) REWIND (10)
 3710
           READ (10, 26) ANS
           IF (ANS.EQ.'$$$$$$') THEN ! OLD $FPOD NOT FOUND. SET DEFAULTS
           FPODFL-1
           DIAM=3.0
           LENGTH=10.0
           SOD=0.1
           THETA-0.0
           x = 0.8
           OUTCOD=2
           SYMCOD=0
```

```
ELSE
           IF (ANS.NE.' $FPOD') GOTO 3710
           READ (10,3715) DIAM, LENGTH, SOD, THETA, X, OUTCOD, SYMCOD
3715
           FORMAT (10X, F6.2, 11X, F6.2, 6X, F5.2/11X, F5.2, 6X, F3.1, 17X, I1/
          12X, I1)
         ENDIF
       ENDIF
3720
       STATUS = LIB$SPAWN('CLS')
       WRITE (6, 3725) I, DIAM, LENGTH, SOD, THETA, X, SYMCOD
3725
       FORMAT (/
       7X, ** FUSELAGE ENGINE POD NUMBER ', Il, ' **'//
       7x,'(1) ENGINE POD DIAMETER (FT)......, F6.2/
       7X, (2) ENGINE POD LENGTH (FT) ......, , F6.2/
       7X,'(3) STAND-OFF DISTANCE.....', F5.2/
       7x,'
               (0.0 = COTANGENT POD)'/
       7x,'
               (-1.0 = SEMI-BURIED POD)'/
    ٤
       7x,'
               (-2.0 = FULLY BURIED POD) '/
       7X, '(4) ANGULAR ORIENTATION OF POD (DEG)....., ',F5.2/
    Æ
       7X,'
               (0.0 DEG = POD IS MOUNTED AT 3 OCLOCK) '/
    æ
       7X,′
               (90 DEG = POD IS MOUNTED ON TOP OF FUSELAGE) '/
    Æ
       7X, '(5) X LOCATION OF THE LE OF POD, RELATIVE TO THE'/
    &
       7x,'
              NOSE OF THE FUSELAGE, GIVEN AS A FRACTION OF'/
    Æ
      7x,'
               THE FUSELAGE LENGTH....., F3.1/
      7X, '(6) WING POD SYMMETRY.....', I1/
    æ
      7X,'
              (0 = WING POD HAS IMAGE ON OPPOSITE WING) //
       7x,'
               (1 = WING POD DOES NOT HAVE AN IMAGE) '//
       7X, SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
       READ (5, 21, ERR=3720) NUM
       IF (NUM.EQ.0) GOTO 3770
       GOTO (3730, 3740, 3745, 3750, 3760, 3765) , NUM
       GOTO 3720
3730
      WRITE (6, 3731)
3731
       FORMAT (/7X, 'ENTER THE POD DIAMETER (FEET): ',$)
       READ (5,3635,ERR=3730) DIAM
       IF ((DIAM.LE.0.0).OR.(DIAM.GT.30.0)) GOTO 3730
       GOTO 3720
3740
      WRITE (6, 3741)
3741
       FORMAT (/7X, 'ENTER THE POD LENGTH (FEET): ',$)
       READ (5, 3635, ERR=3740) LENGTH
       IF ((LENGTH.LE.0.0).OR.(LENGTH.GT.40.0)) GOTO 3740
      GOTO 3720
3745
      WRITE (6, 3746)
       FORMAT (/7X, 'ENTER THE POD STAND-OFF DISTANCE'/
3746
       7X, '(0.0 = COTANGENT POD)'/
       7X, '(-1.0 = SEMI-BURIED POD)'/
       7X, (-2.0 = FULLY BURIED POD) : ',$)
       READ (5, 2460, ERR=3745) SOD
       IF ((SOD.LT.-2.0).OR.(SOD.GT.3.0)) GOTO 3745
       GOTO 3720
3750
      WRITE (6, 3751)
3751
       FORMAT (/7X, 'ENTER THE ANGULAR ORIENTATION OF THE FUSELAGE' /
       7X, 'POD AS SEEN FROM THE FRONT OF THE AIRCRAFT.'/
      7X,'0.0 = 3 OCLOCK POSITION'/
      7x,'90.0 = 12 OCLOCK POSITION: ',$)
       READ (5,2460, ERR=3750) THETA
       IF ((THETA.GT.90.0).OR.(THETA.LT.-90.0)) GOTO 3750
      GOTO 3720
3760
      WRITE (6, 3761)
3761
       FORMAT (/7X, 'ENTER THE X LOCATION OF THE LEADING EDGE OF'/
       7X, THE FUSELAGE POD, RELATIVE TO THE AIRCRAFT NOSE, AS' /
```

```
7X,'A FRACTION OF THE FUSELAGE LENGTH: ',$)
         READ (5, 3762, ERR=3760) X
         IF ((X.LT.0.0).OR.(X.GT.1.0)) GOTO 3760
 3762
         FORMAT (F3.1)
         GOTO 3720
 3765
         WRITE (6, 3766)
         FORMAT (/7X, 'ENTER THE FUSELAGE POD SYMMETRY CODE: '/
 3766
        7X,'(0 = POD HAS AN IMAGE ON OPPOSITE SIDE)'/
7X,'(1 = POD DOES NOT HAVE AN IMAGE)',$)
         READ (5, 2940, ERR=3765) SYMCOD
         IF ((SYMCOD.NE.0).AND.(SYMCOD.NE.1)) GOTO 3765
         GOTO 3720
 3770
        WRITE (7,3771) DIAM, LENGTH, SOD, THETA, X, OUTCOD, SYMCOD
        FORMAT(' $FPOD'/5X,'DIAM=',F6.2,',',3X,'LENGTH=',F6.2,',',
1X,'SOD=',F5.2,','/5X,'THETA=',F5.2,',',3X,'X=',F3.1,',',
9X,'OUTCOD=',I1,','/5X,'SYMCOD=',I1,','/5X,'$END')
 3771
 3790 CONTINUE
C --- FUSELAGE GEOMETRY
c -
 3800 IF (DVFLAG.EQ..TRUE.) THEN
                                        ! SET $FUS DEFAULTS
         BDMAX=5.0
         BODL=50.0
         DRADAR=0.0
         FRAB=2.0
         FRATIO=0.0
         FRN=3.0
         LRADAR=0.0
         SFFACT=1.0
         WALL=0.0
         WFUEL-5000.0
         OUTCOD=2
         ITAIL=0
                        ! GET THE OLD VALUES
      ELSE
         REWIND (10)
 3805
         READ (10, 26) ANS
         IF (ANS.EQ.'$$$$$') THEN
                                        ! OLD $FUS NOT FOUND. SET DEFAULTS
           BDMAX=5.0
           BODL=50.0
           DRADAR=0.0
           FRAB=2.0
           FRATIO=0.0
           FRN=3.0
           LRADAR=0.0
           SFFACT=1.0
           WALL=0.0
           WFUEL=5000.0
           OUTCOD=2
           ITAIL-0
         ELSE
           IF (ANS.NE.' $FUS ') GOTO 3805
           READ (10,3810) BDMAX, BODL, DRADAR, FRAB, FRATIO, FRN, LRADAR,
           SFFACT, WALL, WFUEL, OUTCOD, ITAIL
 3810
           FORMAT (11X, F5.2, 9X, F6.2, 11X, F5.2/10X, F5.2, 12X, F5.2, 7X, F5.2/
           12X, F5.2, 10X, F5.2, 8X, F5.2/11X, F8.1, 8X, I1, 13X, I1)
         ENDIF
      ENDIF
 3815 STATUS = LIB$SPAWN('CLS')
      WRITE (6,3820) BDMAX, BODL, DRADAR, FRAB, FRATIO, FRN, LRADAR,
     &SFFACT, WALL, WFUEL, ITAIL
```

```
3820 FORMAT (/
    &7X,'** FUSELAGE GEOMETRY **'//
    67X, (1) MAXIMUM FUSELAGE DIAMETER (FT) ......, F5.2/
    67X, (2) FUSELAGE LENGTH (FT)......, F6.2/
67X, (3) DIAMETER OF NOSE RADAR DISH (FT)....., F5.2/
    £7X, '(4) AFTERBODY FINENESS RATIO (LENGTH/DIAM) ....', F5.2/
    £7X,'(5) FUSELAGE FINENESS RATIO (LENGTH/DIAM)....',F5.2/
£7X,'(6) NOSE FINENESS RATIO (LENGTH/DIAM)....',F5.2/
£7X,'(7) LENGTH OF RADAR EQUIP BEHIND RADAR (FT)...',F5.2/
    £7X, '(8) SURFACE AREA COMPLEXITY FACTOR.....', F5.2/
    £7X,'(9) FUSELAGE WALL THICKNESS (FT)'/
    £7X,'
               (TRANSPORTS ONLY)....., F5.2/
    67X, (10) MISSION FUEL WEIGHT ESTIMATE (LBS)....', F8.1/
    67X, (11) TAIL TYPE......,, 11/
    &7X,'
               (0 = ENGINE NOZZLE AT REAR OF FUSELAGE)'/
    &7X,'
               (1 = FUSELAGE TAPERS DOWN WITHOUT A NOZZLE) //
    £7X, 'SELECT A VALUE TO CHANGE OR 0 TO QUIT: ',$)
     READ (5, 2411, ERR=3815) NUM
     IF (NUM.EQ.0) GOTO 3885
     GOTO (3825, 3830, 3835, 3840, 3845, 3850, 3855, 3860, 3865,
    63870, 3880), NUM
     GOTO 3815
3825 WRITE (6,3826)
3826 FORMAT (/7X, 'ENTER THE MAXIMUM DIAMETER OF THE FUSELAGE: ',$)
     READ (5,2460, ERR=3825) BDMAX
     IF (BDMAX.LE.0.0) GOTO 3825
     GOTO 3815
3830 WRITE (6,3831)
3831 FORMAT (/7X. 'ENTER THE FUSELAGE LENGTH (FT): '.$)
     READ (5, 2475, ERR=3830) BODL
     IF (BODL.LE.0.0) GOTO 3830
     GOTO 3815
3835 WRITE (6,3836)
3836 FORMAT (/7X, 'ENTER THE DIAMETER OF THE NOSE MOUNTED'/
    &7X, 'RADAR DISH (FT): ',$)
     READ (5, 2460, ERR=3835) DRADAR
     IF ((DRADAR.LT.0.0).OR.(DRADAR.GT.20.0)) GOTO 3835
     GOTO 3815
3840 WRITE (6,3841)
3841 FORMAT (/7X, 'ENTER THE FINENESS RATIO OF THE AFTERBODY'/
    &7X, '(AFTERBODY LENGTH/DIAMETER): ',$)
     READ (5,2460, ERR=3840) FRAB
     IF ((FRAB.LT.0.0).OR.(FRAB.GT.99.99)) GOTO 3840
     GOTO 3815
3845 WRITE (6, 3846)
3846 FORMAT (/7X, 'ENTER THE TOTAL FUSELAGE FINENESS RATIO'/
    &7X, '(FUSELAGE LENGTH/MAX DIAMETER): ',$)
     READ (5,2460, ERR=3845) FRATIO
     IF ((FRATIO.LT.0.0).OR.(FRATIO.GT.99.99)) GOTO 3845
     GOTO 3815
3850 WRITE(6,3851)
3851 FORMAT (/7X, 'ENTER THE FINENESS RATIO OF THE NOSE' /
    &7X, '(NOSE LENGTH/DIAMETER): ',$)
     READ (5,2460, ERR=3850) FRN
     IF ((FRN.LT.0.0).OR.(FRN.GT.99.99)) GOTO 3850
     GOTO 3815
3855 WRITE (6, 3856)
3856 FORMAT (/7X, 'ENTER THE LENGTH OF THE RADAR EQUIPMENT THAT' /
    &7X,'IS LOCATED BEHIND THE RADAR (FT): ',$)
     READ (5, 2460, ERR=3855) LRADAR
```

```
IF((LRADAR.LT.0.0).OR.(LRADAR.GT.30.0)) GOTO 3855
      GOTO 3815
 3860 WRITE (6,3861)
 3861 FORMAT (/7X, 'ENTER THE FUSELAGE SURFACE AREA'/
     &7X, 'COMPLEXITY FACTOR: ',$)
       READ (5,2460, ERR=3860) SFFACT
       IF ((SFFACT.LE.0.0).OR.(SFFACT.GT.2.0)) GOTO 3860
       GOTO 3815
 3865 WRITE (6, 3866)
 3866 FORMAT (/7X, 'ENTER THE THICKNESS OF THE FUSELAGE WALL (FT) '/
     &7X, '(USED FOR TRANSPORT AIRCRAFT ONLY): ',$)
       READ (5,2460, ERR=3865) WALL
       IF ((WALL.LT.0.0).OR.(WALL.GT.1.0)) GOTO 3865
       GOTO 3815
 3870 WRITE(6,3871)
 3871 FORMAT (/7X, 'ENTER AN ESTIMATE FOR THE MISSION FUEL'/
     &7X, 'WEIGHT (LBS): ',$)
      READ (5,3875, ERR=3870) WFUEL
 3875 FORMAT (F8.1)
       IF (WFUEL.LT.0.0) GOTO 3870
       GOTO 3815
 3880 WRITE (6,3881)
 3881 FORMAT (/7X, 'ENTER THE TAIL INDICATOR'/
     &7X,'(0 = ENGINE NOZZLE AT REAR OF FUSELAGE)'/
     £7X, '(1 = FUSELAGE TAPERS DOWN WITHOUT A NOZZLE): ',$)
       READ (5, 2940, ERR=3880) ITAIL
       IF((ITAIL.NE.0).AND.(ITAIL.NE.1)) GOTO 3880
       GOTO 3815
 3885 WRITE(7,3886) BDMAX, BODL, DRADAR, FRAB, FRATIO, FRN, LRADAR,
 &SFFACT, WALL, WFUEL, OUTCOD, ITAIL

3886 FORMAT(' $FUS'/5X,'BDMAX=',F5.2,',',3X,'BODL=',F6.2,',',3X,
&'DRADAR=',F5.2,','/5X,'FRAB=',F5.2,',',4X,'FRATIO=',F5.2,',',
&2X,'FRN=',F5.2,','/5X,'LRADAR=',F5.2,',',2X,'SFFACT=',F5.2,
     G',',2X,'WALL=',F5.2,','/5X,'WFUEL=',F8.1,',','OUTCOD=',I1,',',
     & 6X, 'ITAIL=', I1,','/5X,'$END')
       GOTO 4100
C --- CREW STATION GEOMETRY
 4100 IF (CREW.EQ.'NO') GOTO 4300
       IF (DVFLAG.EQ..TRUE.) THEN
         LENGTH-0.0
         WIDTH=0.0
         NCREW-2
         OUTCOD=2
         TAND-. FALSE.
       ELSE
         REWIND (10)
 4105
         READ (10, 26) ANS
         IF (ANS.EQ.'$$$$$') THEN
           LENGTH-0.0
           WIDTH-0.0
           NCREW=2
           OUTCOD=2
           TAND=.FALSE.
         ELSE
           IF (ANS.NE.' $CREW') GOTO 4105
           READ (10, 4110) LENGTH, WIDTH, NCREW, OUTCOD, TAND
 4110
           FORMAT (12X, F6.2, 8X, F6.2, 9X, I2/12X, I1, 12X, L1)
         ENDIF
```

```
ENDIF
 4115 STATUS = LIB$SPAWN ('CLS')
      WRITE (6, 4120) LENGTH, WIDTH, NCREW, TAND
 4120 FORMAT (/
     47X, *** CREW STATION GEOMETRY *** //
     47X, '(1) LENGTH OF CREW STATION (FT) .....', F6.2/
     £7X,'(2) WIDTH OF CREW STATION (FT).....', F6.2/
     67X, (3) NUMBER OF CREWMEMBERS....., 12/
67X, (4) SEATING ARRANGEMENT......, L1/
     £7X,'
               (T = TANDOM SEATING)'/
     £7X,'
                (F = 2 ABREAST SEATING)'//
      £7X, 'SELECT THE VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
       READ (5, 2940, ERR=4115) NUM
       IF (NUM.EQ.0) THEN
     WRITE (7,4130) LENGTH, WIDTH, NCREW, OUTCOD, TAND

FORMAT (' $CREW'/5X,'LENGTH=',F6.2,',',1X,'WIDTH=',F6.2,',',2X,
'NCREW=',12,','/5X,'OUTCOD=',11,',',6X,'TAND=',L1,','/5X,'$END')
         GOTO 4300
       ENDIF
       GOTO (4140, 4150, 4160, 4170) , NUM
       GOTO 4115
 4140 WRITE (6, 4145)
 4145 FORMAT (/7X, 'ENTER THE LENGTH OF THE CREW STATION (FT).'/
      £7X,'IF 0.0 IS ENTERED, ACSYNT WILL SIZE IT: ',$)
       READ (5, 2475, ERR=4140) LENGTH
       IF ((LENGTH.LT.0.0).OR. (LENGTH.GT.30.0)) GOTO 4140
       GOTO 4115
 4150 WRITE (6,4155)
 4155 FORMAT (/7X, 'ENTER THE WIDTH OF THE CREW STATION.'/
     47X, 'IF 0.0 IS ENTERED, ACSYNT WILL SIZE IT: ',$)
       READ (5,2475, ERR=4150) WIDTH
       IF ((WIDTH.LT.0.0).OR.(WIDTH.GT.20.0)) GOTO 4150
       GOTO 4115
 4160 WRITE (6, 4165)
 4165 FORMAT (/7X, 'ENTER THE NUMBER OF CREWMEMBERS: ',$)
       READ (5,2411, ERR=4160) NCREW
       IF (NCREW.LT.0) GOTO 4160
       GOTO 4115
 4170 WRITE (6, 4175)
 4175 FORMAT (/7X, 'ENTER THE SEATING ARRANGEMENT.'/
     \epsilon 7X, '(T = TANDEM SEATING)'/7X,'(F = 2 ABREAST SEATING): ',$)
      READ (5, 3105, ERR=4170) TAND
      GOTO 4115
C
C --- FUSELAGE FUEL BAYS
 4300 IF (FUEL.EQ.'NO') GOTO 4700
       STATUS = LIB$SPAWN('CLS')
 4301 WRITE (6, 4305)
 4305 FORMAT (//
     &7X, 'HOW MANY FUSELAGE FUEL BAYS ARE THERE ?'//
     £7x,'(1) ONE FUEL BAY'/7X,'(2) TWO FUEL BAYS'//
     67X, 'SELECT 1 OR 2: ',$)
      READ (5, 2940, ERR=4301) NUM
       GOTO (4350, 4500) NUM
       GOTO 4301
C --- 1 FUEL BAY
 4350 IF (DVFLAG.EQ..TRUE.) THEN
         DEN=48.62
         FRAC=1.0
```

```
WFUEL=0.0
        OUTCOD=2
      ELSE
        REWIND (10)
4355
        READ (10, 26) ANS
        IF (ANS.EQ.'$$$$$') THEN
          DEN-50.
          FRAC=1.0
          OUTCOD=2
        ELSE
          IF (ANS.NE.' $FUEL') GOTO 4355
          READ (10, 4360) DEN, FRAC, WFUEL, OUTCOD
          FORMAT (9X, F5.2, 11X, F4.2, 12X, F8.1/12X, I1)
4360
                       ! ONLY ONE FUEL BAY HERE
          FRAC=1.0
        ENDIF
      ENDIF
4365 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 4370) DEN
4370 FORMAT (/
     &7X, *** FUSELAGE FUEL BAY ***//
     &7X,'(1) FUEL DENSITY (LBS/FT3).....',F5.2//
     £7X'SELECT THE VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5,2940, ERR=4365) NUM
      IF (NUM.EQ.0) THEN
        WRITE (7,4375) DEN, FRAC, WFUEL, OUTCOD
     FORMAT(' $FUEL'/5X,'DEN=',F5.2,',',5X,'FRAC=',F4.2,',',5X,
'WFUEL=',F8.1,','/5X,'OUTCOD=',I1,','/5X,'$END')
4375
      GOTO 4700
      ENDIF
      GOTO (4380) , NUM
      GOTO 4365
 4380 WRITE (6, 4385)
4385 FORMAT (/7x, 'ENTER THE FUEL DENSITY (LB/FT3): ',$)
      READ (5, 2460, ERR=4380) DEN
      IF (DEN.LT.0.0) GOTO 4380
      GOTO 4365
C --- 2 FUEL BAYS
 4500 CONTINUE
      IF (DVFLAG.EQ..TRUE.) THEN
        DEN1=50.
        DEN2=50.
        FRAC=0.5
        WFUEL-0.0
        OUTCOD=2
      ELSE
        REWIND (10)
 4505
        READ (10, 26) ANS
        IF (ANS.EQ.'$$$$$') THEN
          DEN1=48.62
           DEN2=48.62
          FRAC=0.5
           WFUEL-0.0
           OUTCOD=2
         ELSE
           IF (ANS.NE.' $FUEL') GOTO 4505
           READ (10, 4510) DEN1, FRAC, WFUEL, OUTCOD
           FORMAT (9X, F5.2, 11X, F4.2, 12X, F8.1/12X, I1)
 4510
                        ! 2 FUEL BAYS HERE
           FRAC=0.5
          READ (10, 26) ANS
 4515
           IF (ANS.EQ.'$$$$$') THEN
```

```
DEN2-50.0
          ELSE
            IF (ANS.NE.' $FUEL') GOTO 4515
            READ (10, 4520) DEN2
 4520
            FORMAT (9X, F5.2)
          ENDIF
        ENDIF
      ENDIF
 4530 STATUS - LIB$SPAWN ('CLS')
      WRITE (6, 4535) DEN1, DEN2
 4535 FORMAT (/
     47X, *** FUSELAGE FUEL BAY GEOMETRY *** //
     £7X,'(1) FUEL DENSITY IN FUEL BAY NUMBER 1 (LB/FT3)...',F5.2/
     £7X,'(2) FUEL DENSITY IN FUEL BAY NUMBER 2 (LB/FT3)...',F5.2//
     £7x, 'SELECT THE VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5, 2940, ERR=4530) NUM
      IF (NUM.EQ.0) THEN
        WRITE (7,4540) DEN1, FRAC, WFUEL, OUTCOD, DEN2, FRAC, WFUEL,
     6 OUTCOD
     FORMAT(' $FUEL'/5X,'DEN=',F5.2,',',5X,'FRAC=',F4.2,',',5X,
'WFUEL=',F8.1,','/5X,'OUTCOD=',I1,','/5X,'$END'/
 4540
     4 ' $FUEL'/5X,'DEN=',F5.2,',',5X,'FRAC=',F4.2,',',5X,
       'WFUEL=',F8.1,','/5X,'OUTCOD=',I1,','/5X,'$END')
        GOTO 4700
      ENDIF
      GOTO (4550, 4560) , NUM
      GOTO 4530
 4550 WRITE (6, 4555)
 4555 FORMAT (/7X, 'ENTER THE FUEL DENSITY IN BAY NUMBER 1 (LB/FT3): ',$)
      READ (5, 2460, ERR=4550) DEN1
      IF (DEN1.LT.0.0) GOTO 4550
      GOTO 4530
 4560 WRITE (6, 4565)
 4565 FORMAT (/7X, 'ENTER THE FUEL DENSITY IN BAY NUMBER 2 (LB/FT3): ',$)
      READ (5,2460, ERR-4560) DEN2
      IF (DEN2.LT.0.0) GOTO 4560
      GOTO 4530
 4700 WRITE (7,4705)
 4705 FORMAT (80 ('$'))
      RETURN
      END
C ·
C --- THIS SETS THE SWING NAMELIST DEFAULT VALUES
      SUBROUTINE WINGDV (AR, AREA, DIHED, FDENWG, LFLAPC, SWEEP, SWFACT,
     &TAPER, TCROOT, TCTIP, TFLAPC, WFFRAC, XWING, ZROOT, KSWEEP, OUTCOD)
      REAL LFLAPC
      INTEGER OUTCOD
      AR=5.0
      AREA=500.0
      DIHED=0.0
      FDENWG-48.62
      LFLAPC=0.12
      SWEEP=0.0
      SWFACT=1.0
      TAPER=0.99
      TCROOT=0.1
      TCTIP=0.1
      TFLAPC=0.12
      WFFRAC=1.0
```

```
XWING=0.5
       ZROOT=0.0
       KSWEEP=0
      OUTCOD=2
       RETURN
       END
c -
       SUBROUTINE TRAJ (DVFLAG)
C
  --- TRAJECTORY MODULE
C
       LOGICAL DVFLAG, LENVEL
       CHARACTER ANS*6, PHASE*8, TITLE*80
       INTEGER STATUS, LIB$SPAWN, SALT, EALT, W, B, A, P
       REAL MENDUR
      DIMENSION PHASE (12), SMACH (12), EMACH (12), SALT (12), EALT (12), EDIST (12), TIME (12), TURNS (12), VIND (12), WKFUEL (12), M (12),
      &IP(12), IX(12), W(12), B(12), A(12), P(12)
       IF (DVFLAG.EQ..FALSE.) THEN
                                           ! OPTION TO BYPASS TRAJECTORY
 4000
         STATUS = LIB$SPAWN ('CLS')
         WRITE (6, 4001)
 4001
         FORMAT (//
         7X,'DO YOU WANT TO MAKE ANY CHANGES TO THE TRAJECTORY'/
         7x,'MODULE ?'//7x,'(1) YES'/7x,'(2) NO'//
7x,'SELECT 1 OR 2: ',$)
         READ (5, 4004, ERR=4000) NUM
 4004
         FORMAT (I1)
         IF ((NUM.NE.1).AND.(NUM.NE.2)) GOTO 4000
         IF (NUM.EQ.1) GOTO 5007
C ---
         TRANSFER TRAJECTORY DATA FROM (10) TO (7)
         REWIND (10)
 5000
         READ (10,5001) ANS
 5001
         FORMAT (A6)
         IF (ANS.NE.'$$$$$$') GOTO 5000
 5003
         READ (10,5004) TITLE
 5004
         FORMAT (A80)
         IF (TITLE (1:6).EQ. '*** AE') RETURN
         WRITE (7,5004) TITLE
         GOTO 5003
       ENDIF
 5007 IF (DVFLAG.EQ..TRUE.) THEN
                                         ! SET TRAJECTORY DEFAULTS
         CALL TRAJDV (CRMACH, DECEL, DELHP, DELMP, DESLF, FLFAC, FRFURE, FWGMAX,
        HMAXP, HMINP, MENDUR, QMAX, RANGE, SMMAXP, SMMINP, TIMTO1, TIMTO2,
         TOL, ULTLF, WCOMBP, WFEXT, WFTRAP, WFUEL, WKF, WKLAND, XDESC, IBREG.
      6 IENDUR, IPLOT, IPSIZE, IPRINT, IPSTO1, IPSTO2, KERROR, MILCOM, MMPROP,
      & NCODE, NCRUSE, LENVEL)
         NUMPHA-1
       ELSE
         REWIND (10)
 5008
         READ (10,5001) ANS
         IF (ANS.NE.' $TRDA') GOTO 5008
         WKF-WKFUEL REQUIRED DUE TO ARRAY USED FOR WKFUEL IN PHASES
         READ (10,5010) CRMACH, DECEL, DELHP, DELMP, DESLF, FLFAC, FRFURE, FWGMAX,
      6 HMAXP, HMINP, MENDUR, QMAX, RANGE, SMMAXP, SMMINP, TIMTO1, TIMTO2,
      TOL, ULTLF, WCOMBP, WFEXT, WFTRAP, WFUEL, WKF, WKLAND, XDESC, IBREG
      & IENDUR, IPLOT, IPSIZE, IPRINT, IPSTO1, IPSTO2, KERROR, MILCOM, MMPROP.
      4 NCODE, NCRUSE, LENVEL, NUMPHA
 5010 FORMAT (12X, F4.2, 10X, F4.2, 11X, F6.1/11X, F3.1, 12X, F5.2, 10X, F3.1/12X, F4.2, 11X, F3.1, 11X, F7.1/11X, F3.1, 13X, F4.2, 9X, F6.1/
      £ 11x, F7.1, 9x, F3.1, 12x, F3.1/12x, F5.2, 10x, F5.2, 7x, F5.3/
```

```
11X,F5.2,11X,F5.3,9X,F7.1/12X,F6.1,8X,F8.1,8X,F6.4/
        12x, F4.2, 10x, F5.1, 10x, I1/12x, I1, 13x, I1, 15x, I2/
       12X, I1, 14X, I1, 14X, I1/12X, I1, 14X, I1, 14X, I1/
      11X, 11, 15X, 12, 13X, L1//110)
        NPHASE=NUMPHA !NPHASE IS THE ORIGINAL NUMBER OF PHASES FROM (10)
      ENDIF
C --- TRAJECTORY PAGE 1
 5020 STATUS = LIB$SPAWN('CLS')
      WRITE (6,5025) CRMACH, MENDUR, DESLF, ULTLF, RANGE, QMAX, MILCOM
 5025 FORMAT (/
     &7X,'** TRAJECTORY DATA: PAGE 1 **'//
     £7X,'(1) CRUISE MACH NUMBER....., f4.2/
     67X, (2) APPROXIMATE MACH NUMBER FOR MAX ENDURANCE..., F4.2/
     £7X, '(3) DESIGN LOAD FACTOR (G*S)......, ', F5.2/
     £7X, '(4) ULTIMATE LOAD FACTOR (G*S)....., ', F5.2/
     £7X,'(5) AIRCRAFT RANGE (NM).....',F7.1/
     £7X,'(6) MAXIMUM DYNAMIC PRESSURE (LBS/FT2).....', F6.1/
     £7X,'(7) TAKEOFF OBSTACLE REQUIREMENT....., 11/
     67X,'
              (0 = MILITARY AIRCRAFT) '/
     £7X,'
              (1 = CIVILIAN AIRCRAFT)'//
     £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5, 4004, ERR=5020) NUM
      IF (NUM.EQ.0) GOTO 5150
      GOTO (5050, 5060, 5070, 5080, 5090, 5100, 5110) , NUM
      GOTO 5020
 5050 WRITE (6,5055)
 5055 FORMAT (/7X, 'ENTER AN ESTIMATE FOR THE CRUISE MACH NUMBER: ',$)
      READ (5,5056, ERR=5050) CRMACH
 5056 FORMAT (F4.2)
      IF ((CRMACH.LE.0.0).OR.(CRMACH.GT.3.0)) GOTO 5050
      GOTO 5020
 5060 WRITE (6,5065)
 5065 FORMAT (/7X, 'ENTER AN ESTIMATE FOR THE MACH NUMBER AT'/
     &7X,'MAX ENDURANCE: ',$)
      READ (5,5056, ERR=5060) MENDUR
      IF ( (MENDUR.LT.0.0) .OR. (MENDUR.GT.2.0) ) GOTO 5060
      GOTO 5020
 5070 WRITE (6,5075)
 5075 FORMAT (/7X, 'ENTER THE DESIGN LOAD FACTOR (G*S): ',$)
      READ (5,5056, ERR=5070) DESLF
      IF ((DESLF.LT.1.0).OR. (DESLF.GT.12.0)) GOTO 5070
      GOTO 5020
 5080 WRITE (6,5085)
 5085 FORMAT (/7x, 'ENTER THE ULTIMATE LOAD FACTOR (G*S): ',$)
      READ (5,5086, ERR=5080) ULTLF
 5086 FORMAT (F5.2)
      IF ((ULTLF.LT.1.0).OR.(ULTLF.GT.15.0)) GOTO 5080
      GOTO 5020
 5090 WRITE (6,5095)
 5095 FORMAT (/7X, 'ENTER AN ESTIMATE FOR THE AIRCRAFT' /
     67X, 'MAX RANGE (NM): ',$)
      READ (5,5096, ERR-5090) RANGE
 5096 FORMAT (F7.1)
      IF (RANGE.LE.O.O) GOTO 5090
      GOTO 5020
 5100 WRITE (6,5105)
 5105 FORMAT (/7X, 'ENTER THE DESIGN MAXIMUM DYNAMIC PRESSURE (LB/FT2)
```

```
READ (5,5106, ERR=5100) QMAX
     IF (QMAX.LE.0.0) GOTO 5100
 5106 FORMAT (F6.1)
     GOTO 5020
5110 WRITE (6,5115)
 5115 FORMAT (/7X, 'ENTER THE TAKEOFF OBSTACLE REQUIREMENT'/
     £7X,'(0 = MILITARY AIRCRAFT, 1 = CIVILIAN AIRCRAFT): ',$)
     READ (5, 4004, ERR=5110) MILCOM
      IF ((MILCOM.NE.0).AND.(MILCOM.NE.1)) GOTO 5110
     GOTO 5020
C --- TRAJECTORY PAGE 2
 5150 STATUS = LIB$SPAWN('CLS')
     WRITE(6,5155) TIMTO1, IPSTO1, TIMTO2, IPSTO2, IBREG, IENDUR
 5155 FORMAT (/
    &7X,'** TRAJECTORY PAGE 2 **'//
     £7X,'(1) AMOUNT OF TIME DURING WARM-UP AND TAXI (MIN)...',F5.2/
     &7X,'(2) POWER SETTING DURING WARM-UP AND TAXI.....', I1/
     £7X, '(3) AMOUNT OF TIME SPENT DURING TAKE-OFF (MIN) .....', F5.2/
     £7X,'(4) POWER SETTING DURING TAKE-OFF....., 11/
     £7X,'(5) BREGUET ALTITUDE SEARCH FLAG....., 11/
              (0 = NO SEARCH, 1 = SEARCH FOR RANGE '/
     £7X,'
     &7X,'
             OPTIMUM ALTITUDE) '/
     £7X,'(6) LOITER ALTITUDE SEARCH FLAG....., 11/
     &7X,'
              0 = NO SEARCH'/
     &7X,'
             1 = SEARCH FOR BEST LOITER ALTITUDE'//
     &7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
     READ (5, 4004, ERR=5150) NUM
      IF (NUM.EQ.0) GOTO 5300
      GOTO (5170, 5180, 5190, 5200, 5210, 5220) , NUM
      GOTO 5150
 5170 WRITE (6,5175)
 5175 FORMAT (/7X, 'ENTER THE AMOUNT OF TIME THAT WILL BE'/
     &7X, 'SPENT DURING WARM-UP AND TAXI (MIN): ',$)
     READ (5, 5086, ERR=5170) TIMTO1
      IF (TIMTO1.LE.0.0) GOTO 5170
      GOTO 5150
 5180 WRITE (6,5185)
 5185 FORMAT (/7x, 'ENTER THE POWER SETTING THAT WILL BE USED' /
     &7X, 'DURING WARM-UP AND TAXI.'/
     &7X,'(1 = MAX AFTERBURNER, 2 = MILITARY POWER'/
     &7X, ' 3 = MAX CONTINUOUS,
                                4 = THRUST EQUALS DRAG'/
     $7X,' 5 = IDLE POWER): ',$)
     READ (5, 4004, ERR=5180) IPSTO1
      IF((IPSTO1.LT.1).OR.(IPSTO1.GT.5)) GOTO 5180
      GOTO 5150
 5190 WRITE (6,5195)
 5195 FORMAT (/7X, 'ENTER THE AMOUNT OF TIME THAT WILL BE SPENT'/
     &7X, 'DURING THE TAKE-OFF (MIN): ',$)
      READ (5,5086, ERR=5190) TIMTO2
      IF (TIMTO2.LE.0.0) GOTO 5190
      GOTO 5150
 5200 WRITE (6,5205)
 5205 FORMAT (/7X, 'ENTER THE POWER SETTING THAT WILL BE'/
     &7X, 'USED DURING THE TAKE-OFF.'/
     £7X,'(1 = MAX AFTERBURNER, 2 = MILITARY POWER'/
     &7X,' 3 = MAX CONTINUOUS, 4 = THRUST EQUALS DRAG'/
     &7X.'5 = IDLE POWER): ',$)
      READ (5,4004, ERR=5200) IPSTO2
```

```
IF ((IPSTO2.LT.1).OR.(IPSTO2.GT.5)) GOTO 5200
        GOTO 5150
 5210 WRITE (6,5215)
 5215 FORMAT (/7X, 'ENTER THE BREGUET ALTITUDE SEARCH FLAG. THIS'/
       £7X, WILL ENABLE ACSYNT TO DETERMINE THE RANGE-OPTIMUM' /
       47X, ALTITUDE DURING THE CLIMB AND CRUISE PHASES OF THE'/
       £7X, 'TRAJECTORY. (0 = NO SEARCH, 1 = SEARCH): ',$)
        READ (5,4004, ERR=5210) IBREG
        IF ((IBREG.NE.0).AND.(IBREG.NE.1)) GOTO 5210
                               ! DISABLED AT THIS TIME
        IBREG=0
        GOTO 5150
 5220 WRITE (6,5225)
 5225 FORMAT (/7X, 'ENTER THE LOITER ALTITUDE SEARCH FLAG. THIS'/
       67X, WILL ENABLE ACSYNT TO DETERMINE THE TIME-OPTIMUM' /
       47X,'ALTITUDE DURING THE LOITER PHASE (0 = NO SEARCH,'/
       67x,'1 = SEARCH): ',$)
        READ (5, 4004, ERR=5220) IENDUR
        IF ((IENDUR.NE.0).AND.(IENDUR.NE.1)) GOTO 5220
                         ! DISABLED AT THIS TIME
        IENDUR=0
        GOTO 5150
C --- TRAJECTORY PAGE 3
 5300 STATUS = LIB$SPAWN('CLS')
        WRITE(6,5305) FRFURE, WFUEL, WFEXT, WFTRAP, IPSIZE, NCRUSE,
       ENUMPHA, IPRINT
 5305 FORMAT (/
       &7X,'** TRAJECTORY PAGE 3 **'//
       67X, '(1) FUEL RESERVE, AS A FRACTION OF TOTAL FUEL. ....', F4.2/
       £7X, (2) TOTAL INTERNAL FUEL (LBS)....., F8.1/
       £7X, '(3) EXTERNAL FUEL WEIGHT (LBS)....., ',F7.1/
       £7X, '(4) WEIGHT OF TRAPPED FUEL (LBS)......, ', F6.1/
       £7X, '(5) ENGINE SIZING FLAG....., 12/
       £7X, '(6) NUMBER OF TRAJECTORY CRUISE PHASES......, 12/
       £7X, '(7) TOTAL NUMBER OF TRAJECTORY PHASES....., 12/
       £7X,'(8) DEBUG OPTION.....', 11//
       £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
        READ (5, 4004, ERR=5300) NUM
        IF (NUM.EQ.0) THEN
                                      ! WRITE $TRDATA INFO
           WRITE (7,5310) CRMACH, DECEL, DELHP, DELMP, DESLF, FLFAC, FRFURE,
          FWGMAX, HMAXP, HMINP, MENDUR, QMAX, RANGE, SMMAXP, SMMINP, TIMTO1,
           TIMTO2, TOL, ULTLF, WCOMBP, WFEXT, WFTRAP, WFUEL, WKF, WKLAND,
          XDESC, IBREG, IENDUR, IPLOT, IPSIZE, IPRINT, IPSTO1, IPSTO2, KERROR,
          MILCOM, MMPROP, NCODE, NCRUSE, LENVEL, NUMPHA
         MILCOM, MMPROP, NCODE, NCRUSE, LENVEL, NUMPHA

FORMAT(' $TRDATA'/5X,'CRMACH=',F4.2,',',3X,'DECEL=',F4.2,',',4X,
'DELHP=',F6.1,','/5X,'DELMP=',F3.1,',',5X,'DESLF=',F5.2,',',3X,
'FLFAC=',F3.1,','/5X,'FRFURE=',F4.2,',',3X,'FWGMAX=',F3.1,',',
4X,'HMAXP=',F7.1,','/5X,'HMINP=',F3.1,',',5X,'MENDUR=',F4.2,',',
3X,'QMAX=',F6.1,','/5X,'RANGE=',F7.1,',',1X,'SMMAXP=',F3.1,',',
4X,'SMMINP=',F3.1,','/5X,'TIMTO1=',F5.2,',',2X,'TIMTO2=',F5.2,
',',2X,'TOL=',F5.3,','/5X,'ULTLF=',F5.2,',',3X,'WCOMBP=',F5.3,
',',2X,'WFEXT=',F7.1,','/5X,'WFTRAP=',F6.1,',',1X,'WFUEL=',F8.1,
',','WKFUEL=',F6.4,','/5X,'WKLAND=',F4.2,',',3X,'XDESC=',F5.1,
',',3X,'IBREG=',I1,','/5X,'IENDUR=',I1,',',6X,'IPLOT=',I1,',',6X,'
'X,'IPSIZE=',I2,','/5X,'IPRINT=',I1,',',6X,'IPSTO1=',I1,',',6X,
 5310
           7X, 'IPSIZE=', 12,','/5X, 'IPRINT=', 11,',', 6X, 'IPSTO1=', 11,',', 6X, 'IPSTO2=', 11,','/5X, 'KERROR=', 11,',', 6X, 'MILCOM=', 11,',', 6X, 'MMPROP=', 11,','/5X, 'NCODE=', 11,',', 7X, 'NCRUSE=', 12,',', 5X,
           'LENVEL=',L1,','/5X,'$END'/I10)
           GOTO 5400
        ENDIF
```

```
GOTO (5320, 5330, 5340, 5350, 5360, 5370, 5380, 5390) , NUM
      GOTO 5300
 5320 WRITE (6,5325)
 5325 FORMAT (/7x, 'ENTER THE FUEL RESERVE AS A FRACTION'/
     £7X, 'OF THE TOTAL FUEL: ',$)
      READ (5,5056, ERR=5320) FRFURE
      IF ( (FRFURE.LT.0.0).OR. (FRFURE.GT.0.1)) GOTO 5320
      GOTO 5300
 5330 WRITE (6,5335)
 5335 FORMAT (/7X, 'ENTER THE TOTAL INTERNAL FUEL (LBS): ',$)
      READ (5,5336, ERR=5330) WFUEL
 5336 FORMAT (F8.1)
      IF (WFUEL.LT.0.0) GOTO 5330
      GOTO 5300
 5340 WRITE (6,5345)
 5345 FORMAT (/7X, 'ENTER THE WEIGHT OF THE EXTERNAL FUEL (LBS): ',$)
      READ (5,5096, ERR=5340) WFEXT
      IF ((WFEXT.LT.0.0).OR.(WFEXT.GT.99999.0)) GOTO 5340
      GOTO 5300
 5350 WRITE (6,5355)
 5355 FORMAT (/7X, 'ENTER THE WEIGHT OF THE TRAPPED FUEL (LBS).'/
     &7X,' (THIS IS THE AMOUNT OF FUEL THAT IS IN THE AIRCRAFT'/
     &7X, 'BUT CANNOT BE BURNED): ',$)
      READ (5,5106, ERR=5350) WFTRAP
      If ((WFTRAP.LT.0.0).OR.(WFTRAP.GT.1000.0)) GOTO 5350
      GOTO 5300
 5360 WRITE (6,5365)
 5365 FORMAT (/7X, 'ENTER THE ENGINE SIZING FLAG.'/
     \epsilon7X, '(0 = SIZED FOR T/W RATIO AT TAKE-OFF, NO AB'/
     67X,' -1 = SIZED FOR T/W RATIO AT TAKE-OFF, WITH AB'/
     67X,' -2 = SIZED FOR GIVEN THRUST, WITH AB'/
     \epsilon 7x, ' - 3 = SIZED FOR GIVEN THRUST, NO AB): ', \$)
      READ (5,5366, ERR=5360) IPSIZE
 5366 FORMAT(12)
      IF ((IPSIZE.LT.-3).OR.(IPSIZE.GT.0)) GOTO 5360
      GOTO 5300
 5370 WRITE (6,5375)
 5375 FORMAT (/7X, 'ENTER THE NUMBER OF CRUISE PHASES THAT ARE'/
     £7X,'INCLUDED IN YOUR TRAJECTORY PROFILE: ',$)
      READ (5,5366, ERR=5370) NCRUSE
      IF ((NCRUSE.GT.12).OR.(NCRUSE.LT.0)) GOTO 5370
      GOTO 5300
 5380 WRITE (6,5385)
 5385 FORMAT (/7X, 'ENTER THE TOTAL NUMBER OF PHASES THAT ARE'/
     £7X,'INCLUDED IN YOUR TRAJECTORY PROFILE (12 MAX): ',$)
      READ (5,5366, ERR=5380) NUMPHA
      IF ((NUMPHA.LT.1).OR.(NUMPHA.GT.12)) GOTO 5380
      GOTO 5300
 5390 WRITE (6,5395)
 5395 FORMAT (/7x, 'ENTER THE DEBUG OPTION CODE'/
     £7X, '0 = NO DEBUG'/7X, '1 = DEBUG: ',$)
      READ (5,4004) IPRINT
      IF ((IPRINT.NE.0).AND.(IPRINT.NE.1)) GOTO 5390
      GOTO 5300
C --- INPUT THE TRAJECTORY PHASES
 5400 IF (DVFLAG.EQ..FALSE.) THEN
        STATUS = LIB$SPAWN('CLS')
 5405
        WRITE (6, 5406)
```

```
5406 FORMAT (//
    £7X,'DO YOU WANT TO MAKE ANY CHANGES TO THE TRAJECTORY'/
    £7x, 'PHASES ? (IF YOU CHANGED THE NUMBER OF PHASES' /
    £7X,'IN THE LAST SECTION YOU MUST SELECT "YES")'//
    £7X,'(1) YES'/7X,'(2) NO'//
    £7X, 'SELECT 1 OR 2: ',$)
       READ (5,5407) ANS
5407
       FORMAT (A1)
       IF ((ANS.NE.'1').AND.(ANS.NE.'2')) GOTO 5405
       IF (ANS.EQ.'2') THEN !TRANSFER THE OLD TRAJECTORY FROM (10) TO (7)
         REWIND (10)
5410
         READ (10,5415) ANS
5415
         FORMAT (5X, A6)
         IF (ANS.NE.'NCODE=') GOTO 5410
         READ (10,5420) ANS
5420
         FORMAT (A1/A1)
                                ! MOVE THE FILE POINTER 2 LINES DOWN
         READ (10,5004) TITLE
                                ! MOVE THE FIRST TRAJ HEADER OVER TO (7)
         WRITE (7,5004) TITLE
         READ (10,5004) TITLE
         WRITE (7,5004) TITLE
         READ (10,5004) TITLE
         WRITE (7,5004) TITLE
         DO 5425 I=1, NPHASE
                               ! MOVE ALL THE PHASES OVER TO (7)
           READ (10,5004) TITLE
           WRITE (7,5004) TITLE
5425
         CONTINUE
         RETURN
       ENDIF
     ENDIF
     WRITE (7,5430)
5430 FORMAT (9X, 'MACH NO. ALTITUDE HORIZONTAL NO. VIND' & PHASE START END START END DIST TIME TURN "G"S',
                                                       NO. VIND'/
    4' WKFUEL M IP IX W B A P'/
    &'-
5435 IF (DVFLAG.EQ..TRUE.) THEN
       DO 5440 I=1, NUMPHA
         PHASE (I) = CLIMB
         SMACH(I)=0.0
         EMACH(I) = 0.0
         SALT(I)=0
         EALT(I)=0
         DIST(I)=0.0
         TIME(I)=0.0
         TURNS (I) = 0.0
         VIND(I)=0.0
         WKFUEL(I)=1.0
         M(I)=1
         IP(I)=2
         IX(I)=0
         W(I)=0
         B(I)=0
         A(I)=0
         P(I)=0
5440
       CONTINUE
     ELSE
       REWIND (10)
5442
       READ (10,5001,END=5447) ANS
       IF (ANS.NE.'----') GOTO 5442
       DO 5445 I=1, NPHASE
```

```
READ(10,5460) PHASE(I), SMACH(I), EMACH(I), SALT(I),
         EALT(I), DIST(I), TIME(I), TURNS(I), VIND(I), WKFUEL(I),
         M(I), IP(I), IX(I), W(I), B(I), A(I), P(I)
5445
       CONTINUE
       IF (NPHASE.LT.NUMPHA) GOTO 5447
     ENDIF
     GOTO 5449
5447 DO 5448 I-NPHASE+1, NUMPHA ! COMES FROM EOF READ
       PHASE (I) = CLIMB
       SMACH(I)=0.0
       EMACH(I) = 0.0
       SALT(I)=0
       EALT(I)=0
       DIST(I)=0.0
       TIME(I)=0.0
       TURNS (I) = 0.0
       VIND(I)=0.0
       WKFUEL(I)=1.0
       M(I)=1
       IP(I)=2
       IX(I)=0
       W(I)=0
       B(I)=0
       A(I)=0
       P(I)=0
5448 CONTINUE
5449 DO 5700 I=1, NUMPHA
5450
       STATUS = LIB$SPAWN ('CLS')
       WRITE(6,5455) I, PHASE(I), SMACH(I), EMACH(I), SALT(I),
    & EALT(I), DIST(I), TIME(I), VIND(I), IP(I), W(I), B(I), A(I)
5455
       FORMAT (/
       7X,'** PHASE NUMBER ',12,' **'//
       7X,'(1)
                PHASE TYPE....., A8/
       7X,'(2)
                STARTING MACH NUMBER....., F4.2/
       7X, (3)
                ENDING MACH NUMBER....., F4.2/
       7X, (4)
                STARTING ALTITUDE (FT)....., 15/
       7X, (5)
                ENDING ALTITUDE (FT) ....., 15/
    ٤
    £
       7x,'(6)
                DISTANCE COVERED DURING PHASE (NM) ....., F6.1/
                TIME SPENT DURING PHASE (MIN)..., F5.1/
LOAD FACTOR DURING COMBAT (G*S)..., F4.1/
POWER SETTING DURING PHASE..., 11/
    £
       7X,'(7)
       7X, '(8)
    £
       7X, (9)
    ٤
       7x,'
                (1=MAX AB, 2=MILITARY, 3=MAX CONTINUOUS'/
    ٤
       7X,'
                 4=THRUST=DRAG, 5=IDLE)'/
       7X, (10) MISSILE DROP INDICATOR (COMBAT)....., 11/
       7X, '(11) BOMB DROP INDICATOR (COMBAT)....., I1/
       7X, '(12) AMMUNITION DROP INDICATOR (COMBAT)....., 11//
       7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
       READ (5,5366, ERR=5450) NUM
       IF (NUM.EQ.0) THEN
         WRITE (7,5460) PHASE (I), SMACH (I), EMACH (I), SALT (I),
         EALT(I), DIST(I), TIME(I), TURNS(I), VIND(I), WKFUEL(I),
         M(I), IP(I), IX(I), W(I), B(I), A(I), P(I)
5460
         FORMAT (A8, F4.2, 1X, F4.2, 2X, 15, 1X, 15, 2X, F6.1, 1X, F5.1, 2X, F4.1,
         1x, F5.1, 2x, F6.4, 1x, I1, 1x, I2, 1x, I2, 4 (1x, I1))
         GOTO 5700
       ENDIF
       GOTO (5470, 5480, 5490, 5500, 5510, 5520, 5530, 5540, 5550,
      5560, 5570, 5580) ,NUM
       GOTO 5450
5470
       WRITE (6,5475)
```

```
FORMAT (/7X, 'ENTER THE PHASE NAME IN CAPITAL LETTERS'/
5475
      7X, '(CLIMB, ACCEL, CRUISE, LOITER, COMBAT OR DESCENT): ',$)
       READ (5,5476, ERR=5470) PHASE (I)
5476
       FORMAT (A8)
                                                                 ').AND.
                                  ').AND.(PHASE(I).NE.'ACCEL
       IF ((PHASE(I).NE.'CLIMB
      (PHASE (I) .NE. 'CRUISE ') .AND. (PHASE (I) .NE. 'LOITER ') .AND.
       (PHASE (I) .NE. 'COMBAT ') .AND. (PHASE (I) .NE. 'DESCENT '))
       GOTO 5470
       IF (PHASE (I) .EQ. 'CLIMB
                                 ') THEN
         SMACH(I) = 0.0
         EMACH(I)=0.0
         SALT(I)=0
         EALT(I) = 20000
         DIST(I)=0.0
         TIME(I)=0.0
         IP(I)=2
         W(I)=0
         B(I)=0
         A(I)=0
        ENDIF
                                ') THEN
        IF (PHASE (I) .EQ.'ACCEL
          SMACH(I) = 0.5
          EMACH(I)=1.0
          SALT (I) =20000
          EALT(I) = 20000
          DIST(I)=0.0
          TIME(I)=1.0
          IP(I)=2
          W(I)=0
          B(I)=0
          A(I)=0
        ENDIF
        IF (PHASE (I) .EQ. 'CRUISE ') THEN
          SMACH(I) = 0.7
          EMACH(I)=0.7
          SALT(I)=20000
          EALT(I) = 20000
          DIST(I) = 420.0
          TIME (I) = 60.0
          IP(I)=4
          W(I)=0
          B(I)=0
          A(I)=0
        ENDIF
        IF (PHASE (I) .EQ. LOITER ') THEN
          SMACH(I) = 0.3
          EMACH(I) = 0.3
          SALT(I) = 500
          EALT(I) = 500
          DIST(I)=0.0
          TIME(I) = 30.0
          IP(I)=4
          W(I)=0
          B(I)=0
          A(I)=0
        END1F
        IF (FHASE (I) .EQ. 'COMBAT ') THEN
          SMACH(I)=0.8
          EMACH(I)=0.8
          SALT(I) = 500
```

```
EALT(I) = 500
         DIST(I)=0.0
         TIME (I) = 10.0
         IP(I)=3
         W(I)=0
         B(I)=0
         A(I)=0
       ENDIF
       IF (PHASE (I) . EQ. 'DESCENT ') THEN
         SMACH(I) = 0.5
         EMACH(I) = 0.5
         SALT(I) = 20000
         EALT(I) = 500
         DIST(I)=0.0
         TIME(I)=0.0
         IP(I)=5
         W(I) = 0
         B(I)=0
         A(I)=0
       ENDIF
       GOTO 5450
5480
       WRITE (6,5485)
       FORMAT (/7X, 'ENTER THE PHASE STARTING MACH NUMBER. '/
5485
       7x,'IF THIS IS A CLIMB PHASE ENTER 0.0): ',$)
       READ (5,5056, ERR=5480) SMACH (I)
       IF (PHASE (I) .EQ. CLIMB
                                ') SMACH(I)=0.0
       GOTO 5450
5490
       WRITE (6,5495)
5495
       FORMAT (/7X, 'ENTER THE ENDING MACH NUMBER FOR THE PHASE'/
       7X, '(ENTER 0.0 FOR CLIMB PHASE): ',$)
       READ (5,5056, ERR=5490) EMACH(I)
       IF (PHASE (I) .EQ. CLIMB
                               ') EMACH(I)=0.0
       GOTO 5450
5500
       WRITE (6, 5505)
       FORMAT (/7X, 'ENTER THE STARTING ALTITUDE: ',$)
5505
       READ (5,5506, ERR=5500) SALT (I)
       IF ((SALT(I).LT.0).OR.(SALT(I).GT.99999)) GOTO 5500
5506
       FORMAT (15)
       GOTO 5450
5510
       WRITE (6,5515)
       FORMAT (//7X, 'ENTER THE ENDING ALTITUDE (FT) ( -1 MAY BE'/
5515
       7X, 'ENTERED TO PREVENT THE AIRPLANE FROM CLIMBING): ',$)
       READ (5,5506, ERR=5510) EALT (I)
       IF((EALT(I).LT.-1).OR.(EALT(I).GT.99999)) GOTO 5510
       IF ((EALT(I).EQ.-1).AND.(PHASE(I).EQ.'CLIMB
                                                      ')) GOTO 5510
       GOTO 5450
5520
       WRITE (6, 5525)
       FORMAT (/7X, 'ENTER THE DISTANCE COVERED DURING THE'/
5525
       7x, 'PHASE (NM) (ENTER 0.0 FOR CLIMB/ACCEL PHASES): ',$)
       READ (5,5106, ERR=5520) DIST(I)
       IF (DIST(I).LT.0.0) GOTO 5520
       IF((PHASE(I).NE.'CRUISE ').AND.(PHASE(I).NE.'LOITER '))
    \epsilon DIST(I)=0.0
       GOTO 5450
5530
       WRITE (6, 5535)
       FORMAT (/7x, 'ENTER THE AMOUNT OF TIME SPENT ON THIS'/
5535
       7x, 'PHASE (MIN) (ENTER 0.0 FOR CLIMB/ACCEL PHASES): ',$)
       READ (5,5536, ERR=5530) TIME (I)
5536
       FORMAT (F5.1)
       IF (TIME (I) .LT.0.0) GOTO 5530
```

```
IF ((TIME(I).EQ.0.0).AND.(PHASE(I).EQ.'ACCEL ')) GOTO 5530
        GOTO 5450
5540
        WRITE (6,5545)
        FORMAT (/7X, 'ENTER THE LOAD FACTOR (G"S): ',$)
5545
        READ (5,5536, ERR=5540) VIND (I)
        IF (PHASE (I) .NE. 'COMBAT ') VIND (I) =0.0
        GOTO 5450
        WRITE (6, 5555)
5550
        FORMAT (/7X, 'ENTER THE PHASE POWER SETTING' /
5555
       7X, '1 = MAX AFTERBURNER' /7X, '2 = MILITARY POWER' /
       7X,'3 = MAX CONTINUOUS POWER'/7X,'4 = THRUST EQUALS DRAG
       '/7x, '5 = IDLE POWER: ',$)
        READ (5,5366, ERR=5550) IP (I)
        IF((IP(I).LT.1).OR.(IP(I).GT.5)) GOTO 5550
        GOTO 5450
        WRITE (6, 5565)
5560
        FORMAT (/7x, 'MISSILE DROP INDICATOR (COMBAT PHASE ONLY)'/
5565
        7X, '0 = NO DROP'/7X, '1 = DROP AT END OF PHASE: ',$)
        READ (5, 4004, ERR=5560) W(I)
        IF ((W(I).NE.0).AND.(W(I).NE.1)) GOTO 5560 IF (PHASE(I).NE.'COMBAT') W(I)=0
        GOTO 5450
5570
        WRITE (6, 5575)
        FORMAT (/7X, 'BOMB DROP INDICATOR (COMBAT PHASE ONLY)'/
5575
       7X.'0 = NO DROP'/7X,'1 = DROP AT END OF PHASE: ',$)
        READ (5,4004, ERR=5570) B(I)
        IF ((B(I).NE.0).AND.(B(I).NE.1)) GOTO 5570
        IF (PHASE (I) .NE. 'COMBAT') B(I)=0
        GOTO 5450
        WRITE (6, 5585)
5580
        FORMAT (/7x, 'AMMUNITION DROP INDICATOR (COMBAT PHASE ONLY)'/
5585
       7X, '0 = NO DROP'/7X, '1 = DROP AT END OF PHASE: ',$)
        READ (5, 4004, ERR=5580) A(I)
        IF ((A(I) NE.0).AND.(A(I).NE.1)) GOTO 5580 IF (PHASE(I).NE.'COMBAT') A(I)=0
        GOTO 5450
 5700 CONTINUE
      RETURN
      END
C ·
C --- TRAJECTORY DEFAULTS
      SUBROUTINE TRAJDY (CRMACH, DECEL, DELHP, DELMP, DESLF, FLFAC, FRFURE,
     &FWGMAX, HMAXP, HMINP, MENDUR, QMAX, RANGE, SMMAXP, SMMINP, TIMTO1, TIMTO2,
     &TOL, ULTLF, WCOMBP, WFEXT, WFTRAP, WFUEL, WKF, WKLAND, XDESC, IBREG,
     &IENDUR, IPLOT, IPSIZE, IPRINT, IPSTO1, IPSTO2, KERROR, MILCOM, MMPROP,
     &NCODE, NCRUSE, LENVEL)
      REAL MENDUR
      LOGICAL LENVEL
      CRMACH=0.8
      DECEL=0.25
      DELHP=4000.0
      DELMP=0.1
      DESLF=3.0
      FLFAC=0.6
      FRFURE=0.05
      FWGMAX=1.2
      HMAXP=40000.0
      HMINP=0.0
      MENDUR=0.5
```

```
OMAX=700.0
       RANGE=1000.0
       SMMAXP=0.9
       SMMINP=0.3
       TIMT01-5.0
       TIMTO2=1.0
       TOL=0.001
       ULTLF=4.5
       WCOMBP=0.5
       WFEXT=0.0
       WFTRAP=100.0
       WFUEL-5000.0
       WKF-1.000
       WKLAND=0.57
       XDESC=80.0
       IBREG=0
       IENDUR=0
       IPLOT=0
       IPSIZE=-3
       IPRINT=0
       IPSTO1=5
       IPSTO2=2
       KERROR=2
       MILCOM=0
       MMPROP=1
       NCODE=0
       NCRUSE=2
       LENVEL=.FALSE.
       RETURN
       END
C ---
       SUBROUTINE AERO (DVFLAG, NVFLAG)
C --- AERODYNAMICS SECTION
C ---
       LOGICAL DVFLAG, ELLIPC, ELLIPW, ELLIPH
       INTEGER STATUS, LIB$SPAWN, AJCAN, ALELJ, EN
      DIMENSION CLO(10), CLOC(10), CLOW(10), CMO(10), YSWP(10),
      &FCDRA(10), FLDM(10), FVCAM(10), ALTV(10), CLINPT(10),
     &CDBMB (10), CDONPT (10), CDSTR (10), CDTNK (10), CDEXTR (10), &SMNCDO (10), SMNBMB (10), SMSTRS (10), SMTANK (10), SMEXTR (10),
      GITRIM(10), ALIN(10), SMN(10), SMNSWP(10), ALTD(6), XMACH(6) REAL MACHN, IT, LDLAND, LDTO, MACH1, MACH2
       CHARACTER ANS*6, TITLE*80
   10 FORMAT(I1)
   20 FORMAT (A6)
   30 FORMAT (A80)
 5710 IF (DVFLAG.EQ..FALSE.) THEN
                                                   ! OPTION TO BYPASS AERO
         STATUS = LIB$SPAWN('CLS')
 5711
         WRITE (6, 5712)
 5712
         FORMAT (/
         7X,'DO YOU WANT TO MAKE ANY CHANGES TO THE AERODYNAMICS'/
         7X,'MODULE ?'//7X,'(1) YES'/7X,'(2) NO'//
7X,'SELECT 1 OR 2: ',$)
         READ (5, 10, ERR=5711) NUM
         IF ((NUM.NE.1).AND.(NUM.NE.2)) GOTO 5711
         IF (NUM.EQ.1) GOTO 5718
         TRANSFER AERO DATA FROM (10) TO (7)
         REWIND (10)
 5713 READ (10, 20) ANS
```

```
IF (ANS.NE.'*** AE') GOTO 5713
        WRITE (7,5719)
 5714
        READ(10,30) TITLE
        IF (TITLE (1:6) .EQ. '*** PR') RETURN
         WRITE (7,30) TITLE
        GOTO 5714
      ENDIF
 5718 WRITE (7,5719)
5719 FORMAT ('*** AERODYNAMICS DATA ***')
C --- SET ALL AERO DEFAULTS/GET OLD VALUES FIRST (FOR EACH NAMELIST)
C --- THEN SET UP NAMELIST MENUS.
      IF (DVFLAG.EQ..TRUE.) THEN
                                     ! SET AERO DEFAULTS
         DO 5720 I=1,10
           CLO(I)=0.0
           CLOC(I)=0.0
           CLOW(I)=0.0
           CMO(I)=0.0
           YSWP (I) = 0.0
           FCDRA(I)=1.0
           FLDM(I)=1.0
           FVCAM(I)=1.0
           ALTV(I)=0.0
           CLINPT (I) = 0.0
           CDBMB(I)=0.0
           CDONPT (I) = 0.0
           CDSTR(I)=0.0
           CDTNK(I)=0.0
           CDEXTR(I)=0.0
           SMNCDO(I) = 0.0
           SMNBMB (I) = 0.0
           SMSTRS(I)=0.0
           SMTANK(I) = 0.0
           SMEXTR(I)=0.0
           ITRIM(I) = 0
           SMN(I)=0.0
 5720
         CONTINUE
         ABOSB=0.15
         ALIN(1) = 0.0
         ALIN(2) = 3.0
         ALIN(3) = 6.0
         ALIN(5) = 9.0
         ALIN(6) = 12.0
         ALIN(7) = 15.0
         ALIN(8) = 18.0
         ALIN(9) = 21.0
         ALIN (10) = 24.0
         ALMAX=35.0
         AMC-40.0
         BDNOSE=BDMAX
         BTEF=0.0
        MACHN=0.75
         RCLMAX=1.0
        ROC=0.02
         ROCAN=0.02
         SFWF=1.0
         SPANAC=0.0
         SWPMAX=60.0
         SWPMIN=0.0
         AJCAN=1
```

ALELJ=1

```
INORM=1
        ISMNDR=0
        ISUPCR=0
        ITRAP=0
        CSF-0.0
        ESSF=1.0
        FCDF=1.0
        FCDL=1.0
        CAND=0.0
        CGM=0.25
        IT-0.0
        SFLAP=0.0
        SM=0.0
        SPANF=0.0
        ZCG=0.0
        IVCAM-1
        ICOD-1
        IPLOT-1
        NALF=10
        NMDTL=1
        CLLAND=-1.0
        CLTO=-1.0
        DELFLD=45.0
        DELFTO-45.0
        DELLED=30.0
        DELLTO-30.0
        LDLAND=-1.0
        LDTO=-1.0
        ELLIPC=.FALSE.
        ELLIPH=.FALSE.
        ELLIPW=.FALSE.
     ELSE
        REWIND (10)
5730
        READ (10, 20) ANS
        IF (ANS.NE.' $ACHA') GOTO 5730
        READ(10,5740) ABOSB, ALMAX, AMC, BDNOSE, BTEF, (CLO(I), I=1,10),
        (CLOC(I), I=1,10), (CLOW(I), I=1,10), (CMO(I), I=1,10), MACHN,
       RCLMAX, ROC, ROCAN, SFWF, SMNDR, (SMNSWP(I), I=1,10), SPANAC, SWPMAX, SWPMIN, (YSWP(I), I=1,10), AJCAN, ALELJ, INORM, ISMNDR,
        ISUPCR, ITRAP, ELLIPC, ELLIPH, ELLIPW, CSF, ESSF, FCDF, CAND,
        CFLAP, CGM, (FLDM(I), I=1,10), (FVCAM(I), I=1,10), IT, SFLAP,
        SM, SPANF, ZCG, IVCAM, ITRIM, (ALIN(I), I=1,10),
        (ALTV(I), I=1,10), (CLINPT(I), I=1,10), (SMN(I), I=1,10),
        ICOD, IPLOT, NALF, NMDTL, (CDBMB(I), I=1,10), (CDSTR(I), I=1,10),
        (CDTNK(I), I=1,10), (CDEXTR(I), I=1,10), (SMNBMB(I), I=1,10),
        (SMSTRS(I), I=1,10), (SMTANK(I), I=1,10), (SMEXTR(I), I=1,10), ICDO, CLLAND, CLTO, DELFLD, DELFTO, DELLED, DELLTO, LDLAND,
       LDTO
5740
        FORMAT (11X, F6.3, 9X, F6.3, 7X, F6.3/12X, F6.3, 7X, F5.3/9X, 10 (F5.3, 1X) /
        10X, 10 (F5.3, 1X) /10X, 10 (F5.3, 1X) /9X, 10 (F5.3, 1X)
        /11X,F6.3,10X,F6.3,6X,F5.3/
        11X,F5.3,9X,F5.3,11X,F5.3/12X,10(F5.3,1X)/
        12X, F6.3, 9X, F6.3, 9X, F6.3/
        10X, 10 (F6.3, 1X) /11X, I1, 14X, I1, 14X, I1/12X, I1, 14X, I1, 13X, I1/
        12X,L1,14X,L1,14X,L1//
        9x, F5.3, 11x, F5.3, 10x, F5.2///10x, F6.3, 10x, F6.3, 7x, F5.3/
        10x, 10 (F6.3, 1x) /11x, 10 (F6.3, 1x) /8x, F6.3, 12x, F7.2, 5x, F6.3/
        11x, f6.2, 7x, f5.2, 12x, I1/11x, 10(I1, 1x)//10x, 10(f4.1, 1x)/
        10X, 10 (F6.0, 1X) /
       12X,10(F6.3,1X)/9X,10(F5.3,1X)/10X,I1,15X,I1,13X,I2/11X,I2///
```

```
11X,10(F6.3,1X)/11X,10(F6.3,1X)/11X,10(F6.3,1X)/
       12X,10(F6.3,1X)/12X,10(F5.3,1X)/
     £ 12X,10(F5.3,1X)/12X,10(F5.3,1X)/12X,10(F5.3,1X)/
      10X, I1///12X, F6.3, 7X, F6.3,
      11X,F6.3/12X,F6.3,9X,F6.3,9X,F6.3/12X,F6.3,7X,F6.3)
     ENDIF
C
 --- AERO PAGE 1
 5760 STATUS - LIB$SPAWN('CLS')
     WRITE (6,5765) ABOSB, ALMAX, AMC, BDNOSE, BTEF, RCLMAX, SFWF
 5765 FORMAT (/
     &7X,'** AERO PAGE 1 **'//
     £7X,'(1) RATIO OF BODY BASE AREA TO MAXIMUM BODY AREA..', F6.3/
     £7X, '(2) ANGLE OF ATTACK FOR CLMAX (DEGREES) ......., , F6.3/
     £7X, '(3) MAXIMUM ANGLE OF ATTACK (DEGREES) ......, f6.3/
     £7X,'(4) WIDTH OF THE FUSELAGE AT THE NOSE (OR AT THE'/
     47X,'
              CANARDS IF PRESENT) (FEET) ......, F6.3/
     67X, (5) BOAT-TAIL EXPOSURE FACTOR....., f5.3/
     £7X, '(6) CLMAX SCALING FACTOR FOR USE WITH FLAPS......', F6.3/
     67X,'(7) LAMINAR-TURBULENT WEIGHTING FACTOR.....', F5.3//
     £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
     READ (5, 10, ERR=5760) NUM
      IF (NUM.EQ.0) GOTO 5860
      GOTO (5770, 5780, 5790, 5800, 5810, 5820, 5830) , NUM
     GOTO 5760
 5770 WRITE (6,5775)
 5775 FORMAT (/7X, 'ENTER THE RATIO OF THE BODY BASE AREA TO THE'/
     &7X, 'MAXIMUM BODY AREA: ',$)
     READ (5,5776, ERR=5770) ABOSB
 5776 FORMAT (F6.3)
      IF ((ABOSB.GT.0.5).OR.(ABOSB.LT.0.0)) GOTO 5770
      GOTO 5760
 5780 WRITE (6,5785)
 5785 FORMAT (/7X, 'ENTER THE ANGLE OF ATTACK AT WHICH'/
     &7X, 'CLMAX OCCURS (DEGREES): '
     READ (5,5776, ERR=5780) ALMAX
      IF ((ALMAX.LE.0.0).OR.(ALMAX.GT.60.0)) GOTO 5780
      GOTO 5760
 5790 WRITE (6,5795)
 5795 FORMAT (/7X, 'ENTER THE MAXIMUM ANGLE OF ATTACK (DEGREES): ',$)
      READ (5,5776, ERR=5790) AMC
      IF ((AMC.LE.0.0).OR.(AMC.GT.60.0)) GOTO 5790
     GOTO 5760
 5800 WRITE (6,5805)
 5805 FORMAT (/7X, 'ENTER THE WIDTH OF THE FUSELAGE AT THE NOSE OR'/
     &7X,'AT THE CANARD LOCATION (IF IT EXISTS) (FEET): ',$)
     READ (5,5776, ERR=5800) BDNOSE
      IF (BDNOSE.LE.O.O) GOTO 5800
      GOTO 5760
 5810 WRITE (6,5815)
 5815 FORMAT (/7X, 'ENTER THE BOAT TAIL EXPOSURE FACTOR (FOR WING OR'/
     67X, 'FUSELAGE PODS ONLY). (IF THERE ARE 3 PODS WITH ONE OF'/
     £7X, 'THEM INTERNAL TO THE FUSELAGE, THEN THE BOAT TAIL' /
     &7X, EXPOSURE FACTOR IS .667): ',$)
     READ (5,5816, ERR=5810) BTEF
 5816 FORMAT (F5.3)
      IF ((BTEF.LT.0.0).OR.(BTEF.GT.1.0)) GOTO 5810
      GOTO 5760
 5820 WRITE (6,5825)
```

```
5825 FORMAT (/7X, 'ENTER THE CLMAX SCALE FACTOR FOR USE WITH'/
     &7X, 'FLAPS: ',$)
      READ (5,5776, ERR=5820) RCLMAX
      IF (RCLMAX.LE.O.O) GOTO 5820
      GOTO 5760
 5830 WRITE (6,5835)
 5835 FORMAT (/7X, 'ENTER THE LAMINAR-TURBULENT SKIN FRICTION'/
     £7X, 'WEIGHTING FACTOR: ',$)
      READ (5,5816, ERR=5830) SFWF
      IF ((SFWF.GT.1.0).OR.(SFWF.LT.0.0)) GOTO 5830
      GOTO 5760
C
 --- AERO PAGE 2
C --
 5860 STATUS = LIB$SPAWN('CLS')
      WRITE (6,5865) (SMNSWP (I), I=1,10), (CLO(I), I=1,10),
     &(CLOC(I), I=1,10), (CLOW(I), I=1,10), (CMO(I), I=1,10),
     & (YSWP (I), I=1, 10)
 5865 FORMAT (/
     £7X, ** AERO PAGE 2 ***//
     &7X,'(1) REFERENCE MACH NUMBER ARRAY: ',2(F5.3,',')/
               11X,7(F5.3,','),F5.3//
     £7X,'(2) CL AT ZERO AOA FOR BODY: ',2(F5.3,',')/
               11x,7(F5.3,','),F5.3//
     67X,'(3) CANARD CL AT ZERO AOA: ',2(F5.3,',')/
               11X,7(F5.3,','),F5.3//
     £7X,'(4) WING CL AT ZERO AOA: ',2(F5.3,',')/
               11X,7(F5.3,','),F5.3//
     £7X,'(5) ZERO LIFT PITCHING MOMENT: ',2(F5.3,',')/
               11X,7(F5.3,','),F5.3//
     &7X,'(6) WING SWEEP ANGLES (VARIABLE SWEEP ONLY): ',
     2 (F6.3,',')/11X,7(F6.3,','),F6.3///
67X,'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5, 10, ERR=5860) NUM
      IF (NUM.EQ.0) GOTO 5940
      GOTO (5880, 5890, 5900, 5910, 5920, 5930) , NUM
      GOTO5860
 5880 WRITE (6,5885)
 5885 FORMAT (/7X, 'ENTER THE REFERENCE MACH NUMBER ARRAY. PUT A ","'/
     67X, BETWEEN EACH NUMBER. (MAXIMUM OF TEN NUMBERS).'/
     &' ENTER: ',$)
      READ (5,5886, ERR=5880) (SMNSWP (I), I=1,10)
 5886 FORMAT (10F6.3)
      DO 5887 I=1,10
        IF ((SMNSWP(I).LT.0.0).OR.(SMNSWP(I).GT.3.0)) GOTO 5880
 5887 CONTINUE
      GOTO 5860
 5890 WRITE (6, 5895)
 5895 FORMAT (/7x, 'ENTER THE ARRAY FOR THE BODY CL AT ZERO AOA. PUT'/
     67X, 'A ", " BETWEEN EACH NUMBER. (MAXIMUM OF TEN NUMBERS).'/
     &' ENTER: ',$)
      READ (5,5886, ERR=5890) (CLO(I), I=1,10)
      DO 5896 I=1,10
        IF((CLO(I).LT.0.0).OR.(CLO(I).GT.1.0)) GOTO 5890
 5896 CONTINUE
      GOTO 5860
 5900 WRITE (6,5905)
 5905 FORMAT (/7x, 'ENTER THE ARRAY FOR THE CANARD CL AT ZERO AOA.'/
     $7X,'PUT A "," BETWEEN EACH NUMBER. (MAXIMUM OF TEN NUMBERS).'/
     &' ENTER: ',$)
```

```
READ (5,5886, ERR=5900) (CLOC(I), I=1,10)
     DO 5906 I=1,10
        IF((CLOC(I).LT.0.0).OR.(CLOC(I).GT.1.0)) GOTO 5900
 5906 CONTINUE
      GOTO 5860
 5910 WRITE (6,5915)
 5915 FORMAT (/7x, 'ENTER THE ARRAY FOR THE WING CL AT ZERO AOA. PUT' /
     67x,'A "," BETWEEN EACH NUMBER. (MAXIMUM OF TEN NUMBERS).'/
     &' ENTER: ',$)
      READ (5,5886, ERR=5910) (CLOW(I), I=1,10)
      DO 5916 I=1,10
        IF((CLOW(I).LT.0.0).OR.(CLOW(I).GT.1.0)) GOTO 5910
 5916 CONTINUE
      GOTO 5860
 5920 WRITE (6,5925)
 5925 FORMAT(/7x,'ENTER THE ARRAY FOR THE ZERO LIFT PITCHING'/
     £7X, 'MOMENT. PUT A ", " BETWEEN EACH NUMBER. (MAXIMUM OF'/
     £7X, 'TEN NUMBERS) . '/' ENTER: ',$)
      READ (5,5886, ERR=5920) (CMO(I), I=1,10)
      DO 5926 I=1,10
        IF ((CMO(I).LT.0.0).OR.(CMO(I).GT.1.0)) GOTO 5920
 5926 CONTINUE
      GOTO 5860
 5930 WRITE (6,5935)
 5935 FORMAT (/7X, 'ENTER THE ARRAY FOR THE SWEEP ANGLES FOR A' /
     67X, 'VARIABLE SWEEP WING. PUT A ", " BETWEEN EACH NUMBER.' / 67X, '(MAXIMUM OF TEN NUMBERS).' / ENTER: ',$)
      READ (5,5936, ERR=5930) (YSWP(I), I=1,10)
 5936 FORMAT (10F7.3)
      DO 5937 I=1,10
        IF ((YSWP(I).LT.0.0).OR.(YSWP(I).GT.60.0)) GOTO 5930
 5937 CONTINUE
      GOTO 5860
C --- AERO PAGE 3
 5940 STATUS = LIB$SPAWN('CLS')
      WRITE (6,5945) ELLIPW, INORM, MACHN, SWPMAX, SWPMIN
 5945 FORMAT (/
     67X,'** AERO PAGE 3 (VARIABLE SWEEP 6 OBLIQUE WINGS) **'//
     £7X,'(1) VARIABLE WING SWEEP FLAG......,L1/
     £7X,'
              (T = WING IS VARIABLE SWEEP)'/
     67X,'
              (F = WING IS NOT VARIABLE SWEEP) '/
     57X, (2) NORMAL COMPONENT MACH NUMBER CODE....., 11/
     £7X,'
              (0 = SWEEP WING TO KEEP NORMAL COMPONENT CONST)'/
     £7X,'
              (1 = DO NOT CALULATE NORMAL COMPONENT)'/
     £7X,'(3) DESIRED NORMAL COMPONENT OF MACH NUMBER.....', F6.3/
     47x,'(4) MAXIMUM SWEEP FOR NORMAL COMPONENT MACH NUMBER'/
     £7X,'
              CALCULATIONS (DEGREES) ....., F6.3/
     47X, '(5) MINIMUM SWEEP FOR NORMAL COMPONENT MACH NUMBER'/
     47X,'
              CALCULATIONS (DEGREES)....., F6.3//
     67X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5, 10, ERR=5940) NUM
      IF (NUM.EQ.0) GOTO 6050
      GOTO (5960, 5970, 5980, 5990, 6000) , NUM
      GOTO 5940
 5960 WRITE (6,5965)
 5965 FORMAT (/7X, 'ENTER THE VARIABLE WING SWEEP FLAG: ',$)
      READ (5,5967, ERR=5960) ELLIPW
 5967 FORMAT(L1)
```

```
GOTO 5940
 5970 WRITE (6,5975)
 5975 FORMAT (/7X, 'ENTER THE NORMAL COMPONENT MACH NUMBER' /
     &7X, 'CALCULATION CODE'/
     £7X,'(0 = ACSYNT WILL SWEEP THE WING TO KEEP THE NORMAL'/
     £7X,'
             COMPONENT OF THE MACH NUMBER CONSTANT) '/
     67X, (1 = DO NOT CALCULATE THE NORMAL COMPONENT OF THE MACH'/
             NUMBER): ',$)
      READ (5, 10, ERR=5970) INORM
      IF((INORM.NE.0).AND.(INORM.NE.1)) GOTO 5970
      GOTO 5940
 5980 WRITE (6,5985)
 5985 FORMAT(/7X, 'ENTER THE DESIRED NORMAL COMPONENT OF THE MACH'/
     &7X,'NUMBER: ',$)
     READ (5, 5776, ERR=5980) MACHN
      IF ((MACHN.LE.0.0).OR.(MACHN.GT.3.0)) GOTO 5980
      GOTO 5940
 5990 WRITE (6,5995)
 5995 FORMAT (/7X, 'ENTER THE MAXIMUM ALLOWABLE SWEEP FOR THE NORMAL'/
     &7X, 'COMPONENT CALCULATIONS (DEGREES): ',$)
     READ (5,5776, ERR=5990) SWPMAX
      IF ((SWPMAX.LT.0.0).OR.(SWPMAX.GT.60.0)) GOTO 5990
      GOTO 5940
 6000 WRITE (6,6005)
 6005 FORMAT (/7x, 'ENTER THE MINIMUM ALLOWABLE WING SWEEP FOR THE'/
     &7X, 'NORMAL COMPONENT CALCULATIONS (DEGREES): ',$)
      READ (5,5776, ERR=6000) SWPMIN
      IF((SWPMIN.LT.0.0).OR.(SWPMIN.GT.60.0)) GOTO 6000
      GOTO 5940
C--
C --- AERO PAGE 4
C:
 6050 STATUS = LIB$SPAWN('CLS')
     WRITE (6,6055) ALELJ, ROC, AJCAN, ROCAN, SPANAC, ISUPCR, ITRAP
 6055 FORMAT (/
     &7X, '** AERO PAGE 4 **'//
     £7X,'(1) WING AIRFOIL SECTION CODE....., 11/
     &7X, '(2) WING LEADING EDGE RADIUS/CHORD RATIO......, F5.3/
     &7X,'
             (FOR WING AIRFOIL SECTION CODE 5 ONLY) '/
     £7X,'(3) CANARD AIRFOIL SECTION CODE.....,',11/
     £7X,'(4) CANARD LEADING EDGE RADIUS/CHORD RATIO.....', F5.3/
     67X,'
              (FOR CANARD AIRFOIL SECTION CODE 5 ONLY) '/
     £7X, '(5) DISTANCE BETWEEN THE TWIN NACELLES (FEET) ... ', F6.3/
     &7X,'
            (USED FOR CANARD PLACEMENT) '/
     67X, '(6) SUPERCRITICAL WING FLAG....., 11/
     &7X,'
              (1 = WING IS SUPERCRITICAL) '/
     £7X,'
             (0 = WING IS NOT SUPERCRITICAL)'/
     £7X,'(7) BODY CROSS-SECTION CODE.....,11/
     67X,'
              (0 = CIRCULAR BODY)'/
     &7X,'
              (1 = TRAPEZOIDAL BODY)'//
     £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
     READ (5, 10, ERR=6050) NUM
      IF (NUM.EQ.0) GOTO 6150
      GOTO (6070, 6080, 6090, 6100, 6110, 6120, 6130) , NUM
      GOTO 6050
 6070 WRITE (6,6075)
 6075 FORMAT (/7x, 'ENTER THE WING AIRFOIL SECTION CODE'/
     £7X,'(1 = SHARP/NEAR SHARP AIRFOIL)'/
     £7X, '(2 = 230-XX AND 00-XX AIRFOILS)'/
     \epsilon 7x, '(3 = 6-SERIES AIRFOIL)'/
```

```
£7x,'(4 = WHITCOMB SUPERCRITICAL AIRFOIL('/
     £7X,'(5 = LEADING EDGE RADIUS/CHORD RATIO SPECIFIED): ',$)
      READ (5, 10, ERR=6070) ALELJ
      IF ((ALELJ.LT.1).OR.(ALELJ.GT.5)) GOTO 6070
      GOTO 6050
 6080 WRITE (6,6085)
 6085 FORMAT (/7X, 'ENTER THE WING LEADING EDGE RADIUS/CHORD RATIO: ',
      READ (5,5816, ERR=6080) ROC
      IF ((ROC.LE.0.0).OR.(ROC.GT.0.5)) GOTO 6080
      GOTO 6050
 6090 WRITE (6, 6095)
 6095 FORMAT (/7X, 'ENTER THE CANARD AIRFOIL SECTION CODE'/
     £7X,'(1 = SHARP/NEAR SHARP AIRFOIL)'/
     \epsilon 7x, \prime (2 = 230-xx AND 00-xx AIRFOILS) \prime /
     £7X,'(3 = 6-SERIES AIRFOIL)'/
     £7X,'(4 = WHITCOMB SUPERCRITICAL AIRFOIL('/
     67X,'(5 = LEADING EDGE RADIUS/CHORD RATIO SPECIFIED): ',$)
      READ (5, 10, ERR=6090) AJCAN
      IF ((AJCAN.LT.1).OR. (AJCAN.GT.5)) GOTO 6090
      GOTO 6050
 6100 WRITE (6, 6105)
 6105 FORMAT (/7X, 'ENTER THE CANARD LEADING EDGE RADIUS/CHORD'/
     67X, 'RATIO: ',$)
      READ (5,5816, ERR=6100) ROCAN
      IF ((ROCAN.LE.0.0).OR.(ROCAN.GT.0.5)) GOTO 6080
      GOTO 6050
 6110 WRITE (6, 6115)
 6115 FORMAT (/7x, 'ENTER THE DISTANCE BETWEEN THE OUTSIDES OF THE'/
     47X, OF THE TWIN NACELLES THAT THE CANARDS ARE MOUNTED ON.' /
     &7X, '(IF APPLICABLE) (FEET): ',$)
      READ (5,5776, ERR=6110) SPANAC
      IF (SPANAC.LT.0.0) GOTO 6110
      GOTO 6050
 6120 WRITE (6, 6125)
 6125 FORMAT (/7X, 'ENTER THE SUPERCRITICAL WING FLAG.'/
     &7x,'(0 = WING IS NOT SUPERCRITICAL)'/
     &7x,'(1 = WING IS SUPERCRITICAL): ',$)
      READ (5, 10, ERR=6120) ISUPCR
      IF ((ISUPCR.NE.0).AND.(ISUPCR.NE.1)) GOTO 6120
      GOTO 6050
 6130 WRITE (6, 6135)
 6135 FORMAT (/7X, 'ENTER THE BODY CROSS-SECTION CODE.'/
     47X,'(0 = CIRCULAR BODY)'/
     47X, '(1 = TRAPEZOIDAL BODY): ',$)
      READ (5, 10, ERR=6130) ITRAP
      IF ((ITRAP.NE.0).AND.(ITRAP.NE.1)) GOTO 6130
      GOTO 6050
C --- AERO PAGE 5
 6150 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 6155) CSF, FCDF, CAND, CFLAP, SFLAP, SPANF, CGM, SM, ZCG,
     SIT
 6155 FORMAT (/
     67X, ** AERO PAGE 5 *** //
     £7X,'(1) POD COWL EXPOSURE FACTOR.....,',F5.3/
     £7X,'(2) FRICTION DRAG MULTIPLYING FACTOR.....',F5.2/
     &7X,'(3) CANARD INCIDENCE (DEGREES).....', F6.3/
&7X,'(4) AVERAGE FLAP CHORD (FEET).....', F6.3/
```

```
67X, (5) TOTAL AREA OF BOTH WING FLAPS (FT2)....., F7.2/
             TOTAL SPAN OF FLAPS FOR TRIMMING (FEET) .... ', F6.2/
    £7X,'(6)
    £7X,'(7) DESIRED LOCATION OF CG (GIVEN AS A FRACTION'/
             OF WING CHORD)....., F5.3/
    47X,'
    £7X,'(8) STATIC MARGIN FACTOR FOR CG....., F6.3/
    47X,'(9) HEIGHT OF CG ABOVE THE FUSELAGE CENTERLINE'/
    €7X,'
             (FEET) ......, F5.2/
    47X,'(10) HORIZONTAL TAIL INCIDENCE (DEGREES).....', F6.3//
    47X, SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
    READ (5, 6160, ERR=6150) NUM
6160 FORMAT(12)
    IF (NUM.EQ.0) GOTO 6280
    GOTO (6170, 6180, 6190, 6200, 6210, 6220, 6230, 6240, 6250,
    £6260), NUM
    GOTO 6150
6170 WRITE (6, 6175)
6175 FORMAT (/7X, 'ENTER THE POD COWL EXPOSURE FACTOR. (IF THERE '/
    47X,'ARE 3 PODS ON THE DESIGN BUT ONE OF THEM IS FULLY BURIED'/
    47X, 'THEN THE EXPOSURE FACTOR IS .667): ',$)
    READ (5,5816, ERR=6170) CSF
    IF((CSF.LT.0.0).OR.(CSF.GT.1.0)) GOTO 6170
    ESSF=CSF
    GOTO 6150
6180 WRITE (6,6185)
6185 FORMAT (/7X, 'ENTER THE FRICTION DRAG MULTIPLYING FACTOR.'/
    £7X, (1.0 = STANDARD SURFACE ROUGHNESS): ',$)
    READ (5,6186, ERR=6180) FCDF
6186 FORMAT (F5.2)
    IF ((FCDF.LT.0.0).OR.(FCDF.GT.2.0)) GOTO 6180
    GOTO 6150
6190 WRITE (6, 6195)
6195 FORMAT (/7X, 'ENTER THE CANARD ANGLE OF INCIDENCE (DEGREES): ',
    £$)
    READ (5,5776, ERR=6190) CAND
    IF ((CAND.LT.0.0).OR.(CAND.GT.10.0)) GOTO 6190
    GOTO 6150
6200 WRITE (6,6205)
6205 FORMAT (/7X, 'ENTER THE AVERAGE FLAP CHORD (FEET): ',$)
    READ (5,5776, ERR=6200) CFLAP
    IF (CFLAP.LT.0.0) GOTO 6200
    GOTO 6150
6210 WRITE (6, 6215)
6215 FORMAT (/7X, 'ENTER THE TOTAL AREA OF THE WING FLAPS (FT2): ',$)
    READ (5, 6216, ERR=6210) SFLAP
6216 FORMAT (F7.2)
    IF (SFLAP.LT.0.0) GOTO 6210
    GOTO 6150
6220 WRITE (6, 6225)
6225 FORMAT (/7X, 'ENTER THE TOTAL SPAN OF THE FLAPS (FEET): ',$)
    READ (5, 6226, ERR=6220) SPANF
6226 FORMAT (F6.2)
    IF (SPANF.LT.0.0) GOTO 6220
    GOTO 6150
6230 WRITE (6,6235)
6235 FORMAT (/7X, 'ENTER THE DESIRED LOCATION OF THE CG AS A'/
    £7X, 'FRACTION OF THE MEAN AERODYNAMIC CHORD: ',$)
    READ (5,5816, ERR=6230) CGM
     IF ((CGM.LT.0.0).OR.(CGM.GT.1.0)) GOTO 6230
    GOTO 6150
6240 WRITE (6, 6245)
```

```
6245 FORMAT (/7X, 'ENTER THE CG STATIC MARGIN FACTOR: ',$)
      READ (5,5776, ERR=6240) SM
      IF ((SM.LT.0.0).OR.(SM.GT.1.0)) GOTO 6240
      GOTO 6150
 6250 WRITE (6,6255)
 6255 FORMAT (/7x, 'ENTER THE HEIGHT OF THE CG ABOVE THE FUSELAGE'/
     &7X, 'CENTERLINE (FEET): ',$)
      READ (5, 6186, ERR=6250) ZCG
      IF (ZCG.LT.0.0) GOTO 6250
      GOTO 6150
 6260 WRITE (6, 6265)
 6265 FORMAT (/7x, 'ENTER THE ANGLE OF INCIDENCE OF THE HORIZONTAL'/
     47X, 'TAIL (DEGREES): ',$)
      READ (5,5776, ERR=6260) IT
      IF((IT.LT.0.0).OR.(IT.GT.10.0)) GOTO 6260
      GOTO 6150
C --- AERO PAGE 6
C ---
 6280 STATUS = LIB$SPAWN('CLS')
      WRITE (6,6285) (SMN (I), I=1,10), NMDTL, (ALTV (I), I=1,10),
     & (CLINPT(I), I=1, 10)
 6285 FORMAT (/
     £7X, ** AERO PAGE 6 *** //
     67X, '(1) MACH NUMBERS FOR DETAILED AERODYNAMICS OUTPUT: ', F5.3,
     &','/11x,8(F5.3,','),F5.3//
     67X, '(2) TOTAL NUMBER OF REQUESTED MACH NUMBERS (ABOVE)..', 12//
     47X, '(3) ALTITUDES FOR DETAILED AERODYNAMICS OUTPUT: ',F7.1,','
     £,F7.1,','/10x,7(F7.1,','),F7.1//
     67X,'(4) LIFT COEFFICIENTS FOR DETAILED OUTPUT: ',F6.3,','/
     £11X,8(F6.3,','),F6.3//
     £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5, 10, ERR=6280) NUM
      IF (NUM.EQ.0) GOTO 6360
      GOTO (6300, 6310, 6320, 6330) , NUM
      GOTO 6280
 6300 WRITE (6, 6305)
 6305 FORMAT (/7X, 'ENTER THE DESIRED MACH NUMBERS FOR DETAILED'/
     47X, 'AERODYNAMICS OUTPUT. PUT A ", " BETWEEN EACH NUMBER.'/
     47X, '(A MAXIMUM OF TEN NUMBERS): '//' ENTER: ',$)
      READ (5,6306,ERR=6300) (SMN(I),I=1,10)
 6306 FORMAT (10F6.3)
      DO 6307 I=1,10
        IF ((SMN(I).LT.0.0).OR.(SMN(I).GT.3.0)) GOTO 6300
 6307 CONTINUE
      GOTO 6280
 6310 WRITE (6, 6315)
 6315 FORMAT (/7X, 'ENTER THE TOTAL NUMBER OF MACH NUMBERS THAT ARE'/
     £7X, 'ENTERED INTO THE ARRAY (DISREGARD TRAILING ZEROS): ',$)
      READ (5, 6160, ERR=6310) NMDTL
      IF ((NMDTL.LT.0).OR.(NMDTL.GT.10)) GOTO 6310
      GOTO 6280
 6320 WRITE (6, 6325)
 6325 FORMAT (/7X, 'ENTER THE ALTITUDES DESIRED FOR THE DETAILED'/
     &7X,'AERODYNAMICS OUTPUT (UP TO 10). PUT A "," BETWEEN EACH'/
     £7X, 'NUMBER.' // ENTER: ',$)
      READ (5, 6326, ERR=6320) (ALTV(I), I=1, 10)
 6326 FORMAT (10F8.1)
      DO 6327 I=1,10
        IF((ALTV(I).LT.0.0).OR.(ALTV(I).GT.99999.0)) GOTO 6320
```

```
6327 CONTINUE
      GOTO 6280
 6330 WRITE (6,6335)
6335 FORMAT (/7x, 'ENTER THE LIFT COEFFICIENTS DESIRED FOR THE'/
     67X, 'DETAILED AERODYNAMICS OUTPUT. PUT A ", " BETWEEN EACH' /
          'NUMBER. (A MAXIMUM OF TEN NUMBERS):'//' ENTER: ',$)
     ٤7X,
      READ (5, 6336, ERR=6330) (CLINPT(I), I=1, 10)
 6336 FORMAT (10F7.3)
      DO 6337 I=1,10
        IF((CLINPT(I).LT.0.0).OR.(CLINPT(I).GT.8.0)) GOTO 6330
 6337 CONTINUE
      GOTO 6280
  --- AERO PAGE 7
С
C
 6360 STATUS - LIB$SPAWN('CLS')
      WRITE (6,6365) CDBMB(1), CDSTR(1), CDTNK(1), CDEXTR(1)
 6365 FORMAT (/
     £7X, ** AERO PAGE 7 *** //
     67X, (1) TOTAL DRAG DUE TO EXTERNAL BOMBS (FT2) ....., F6.3/
     ~7X, '(2) TOTAL DRAG DUE TO EXTERNAL STORES (FT2)... ', F6.3/
     67X, (3) TOTAL DRAG DUE TO DROP TANKS (FT2)....., F6.3/
67X, (4) TOTAL DRAG DUE TO ADDITIONAL ITEMS (FT2)...., F6.3/
     £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5, 10, ERR=6360) NUM
      IF (NUM.EQ.0) GOTO 6450
      GOTO (6380, 6390, 6400, 6410) , NUM
      GOTO 6360
 6380 WRITE (6,6385)
 6385 FORMAT (/7X, 'ENTER THE DRAG DUE TO EXTERNAL BOMBS (FT2): ',$)
      READ (5,5776, ERR=6380) CDBMB (1)
      IF (CDBMB(1).LT.0.0) GOTO 6380
      GOTO 6360
 6390 WRITE (6,6395)
 6395 FORMAT (/7X, 'ENTER THE DRAG DUE TO EXTERNAL STORES (FT2): ',$)
      READ (5,5776, ERR=6390) CDSTR (1)
      IF (CDSTR(1).LT.0.0) GOTO 6390
      GOTO 6360
 6400 WRITE (6, 6405)
 6405 FORMAT (/7X, 'ENTER THE DRAG DUE TO DROP TANKS (FT2): ',$)
      READ (5,5776, ERR=6400) CDTNK (1)
      IF (CDTNK(1).LT.0.0) GOTO 6400
      GOTO 6360
 6410 WRITE (6, 6415)
 6415 FORMAT (/7X, 'ENTER THE DRAG DUE TO ADDITIONAL ITEMS (SUCH'/
     67X,'AS FLIR PODS, PYLONS, ETC...) (FT2). (IF THE NAVY MODULE'/
     67X, 'IS SELECTED, INPUT THE GEAR DOWN DRAG HERE): ',$)
      READ (5,5776, ERR=6410) CDEXTR (1)
C --- IF THE NAVY MODULE WILL BE CALLED, THIS WILL BE USED FOR
C --- THE GEAR DOWN DRAG. THE SECOND VALUE OF CDEXTR AND SMEXTR
C --- ARE USED TO PREVENT THE SCALING FACTOR FROM OCCURING WHEN
 --- USING THE SNODGRASS METHOD. THE GEAR DRAG WILL ONLY BE APPLIED
C --- WHEN THE MACH NUMBER IS BETWEEN 0.0 AND 0.25
      IF (NVFLAG.EQ..TRUE.) THEN
        CDEXTR(2) = CDEXTR(1)
        SMEXTR(1)=0.2
        SMEXTR(2) = 0.3
      ENDIF
      IF (CDEXTR(1).LT.0.0) GOTO 6410
      GOTO 6360
```

```
C --- AERO PAGE 8
c -
 6450 STATUS = LIB$SPAWN('CLS')
      WRITE (6.6455) CLLAND, CLTO, DELFLD, DELFTO, DELLED, DELLTO,
     &LDLAND, LDTO
 6455 FORMAT (/
     £7X, *** AERO PAGE 8 *** //
     £7X,'(1) CL MAX FOR LANDING....., ,F6.3/
     67X,'(3) TRAILING EDGE FLAP ANGLE FOR LANDING (DEG)...', F6.3/
67X,'(4) TRAILING EDGE FLAP ANGLE FOR LANDING (DEG)...', F6.3/
     £7X,'(2) CL MAX FOR TAKE-OFF.....'
     &7X.'(4) TRAILING EDGE FLAP ANGLE FOR TAKE-OFF (DEG) ...', F6.3/
     67X, (5) LEADING EDGE SLAT ANGLE FOR LANDING (DEG) .... ', F6.3/
     £7X,'(6) LEADING EDGE SLAT ANGLE FOR TAKE-OFF (DEG) ....', F6.3/
     £7X,'(7) L/D RATIO FOR LANDING......,, F6.3/
     £7X,'(8) L/D RATIO FOR TAKE-OFF......, , F6.3//
     £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5, 10, ERR=6450) NUM
      IF (NUM.EQ.0) GOTO 6550
      GOTO (6470, 6480, 6490, 6500, 6510, 6520, 6530, 6540) , NUM
      GOTO 6450
 6470 WRITE (6, 6475)
 6475 FORMAT (/7x, 'ENTER THE VALUE TO BE USED FOR CL MAX'/
     £7X, 'DURING LANDING (-1.0 = CALCULATED INTERNALLY): ',$)
      READ (5,5776, ERR=6470) CLLAND
      IF (((CLLAND.LT.0.0).AND.(CLLAND.GT.-1.0)).OR.(CLLAND.LT.-1.0))
     &GOTO 6470
      GOTO 6450
 6480 WRITE (6, 6485)
 6485 FORMAT (/7X, 'ENTER THE VALUE TO BE USED FOR CL MAX'/
     £7X, 'DURING TAKE-OFF (-1.0 = CALCULATED INTERNALLY): ',$)
      READ (5,5776, ERR=6480) CLTO
      IF(((CLTO.LT.0.0).AND.(CLTO.GT.-1.0)).OR.(CLTO.LT.-1.0))
     &GOTO 6480
      GOTO 6450
 6490 WRITE (6, 6495)
 6495 FORMAT (/7X, 'ENTER THE VALUE TO BE USED FOR THE TRAILING EDGE'/
     &7X, 'FLAP ANGLE ON LANDING (DEGREES): ',$)
      READ (5,5776, ERR=6490) DELFLD
      IF ((DELFLD.LT.0.0).OR.(DELFLD.GT.60.0)) GOTO 6490
      GOTO 6450
 6500 WRITE(6,6505)
 6505 FORMAT (/7X, 'ENTER THE VALUE TO BE USED FOR THE TRAILING EDGE'/
     47X, 'FLAP ANGLE ON TAKE-OFF (DEGREES): ',$)
      READ (5,5776, ERR=6500) DELFTO
      IF ((DELFTO.LT.0.0).OR.(DELFTO.GT.60.0)) GOTO 6500
      GOTO 6450
 6510 WRITE (6, 6515)
 6515 FORMAT (/7X, 'ENTER THE VALUE TO BE USED FOR THE LEADING EDGE'/
     £7X, 'SLAT ANGLE ON LANDING (DEGREES): ',$)
      READ (5,5776, ERR=6510) DELLED
      IF ((DELLED.LT.0.0).OR.(DELLED.GT.60.0)) GOTO 6510
      GOTO 6450
 6520 WRITE (6,6525)
 6525 FORMAT (/7x, 'ENTER THE VALUE TO BE USED FOR THE LEADING EDGE'/
     &7X, 'FLAP ANGLE ON TAKE-OFF (DEGREES): ',$)
      READ (5,5776, ERR=6520) DELLTO
      IF ((DELLTO.LT.0.0), OR. (DELLTO.GT.60.0)) GOTO 6520
      GOTO 6450
 6530 WRITE (6,6535)
```

```
6535 FORMAT (/7X, 'ENTER THE VALUE TO BE USED FOR THE L/D RATIO'/
     &7X, 'DURING LANDING (-1.0 = CALCULATED INTERNALLY): ',$)
      READ (5,5776, ERR=6530) LDLAND
       IF (((LDLAND.LT.0.0).AND.(LDLAND.GT.-1.0)).OR.(LDLAND.LT.-1.0))
      &GOTO 6530
       GOTO 6450
6540 WRITE (6, 6545)
6545 FORMAT (/7X, 'ENTER THE VALUE TO BE USED FOR THE L/D RATIO'/
      &7X,'DURING TAKE-OFF (-1.0 = CALCULATED INTERNALLY): ',$)
      READ (5,5776, ERR=6540) LDTO
       IF(((LDTO.LT.0.0).AND.(LDTO.GT.-1.0)).OR.(LDTO.LT.-1.0))
      &GOTO 6540
       GOTO 6450
6550 WRITE (7,6555) ABOSB, ALMAX, AMC, BDNOSE, BTEF, (CLO(I), I=1,10),
     \& (CLOC(I), I=1,10), (CLOW(I), I=1,10), (CMO(I), I=1,10), MACHN,
     ERCLMAX, ROC, ROCAN, SFWF, SMNDR, (SMNSWP(I), I=1,10), SPANAC,
      &SWPMAX, SWPMIN, (YSWP(I), I=1,10), AJCAN, ALELJ, INORM, ISMNDR,
      &ISUPCR, ITRAP, ELLIPC, ELLIPH, ELLIPW, CSF, ESSF, FCDF, CAND,
     &CFLAP, CGM, (FLDM(I), I=1,10), (FVCAM(I), I=1,10), IT, SFLAP,
      &SM, SPANF, ZCG, IVCAM, ITRIM, (ALIN(I), I=1,10),
      \& (ALTV(I), I=1,10), (CLINPT(I), I=1,10), (SMN(I), I=1,10),
      &ICOD, IPLOT, NALF, NMDTL, (CDBMB(I), I=1,10), (CDSTR(I), I=1,10),
     & (CDTNK(I), I=1,10), (CDEXTR(I), I=1,10), (SMNBMB(I), I=1,10),
     &(SMSTRS(I), I=1,10), (SMTANK(I), I=1,10), (SMEXTR(I), I=1,10), &ICDO, CLLAND, CLTO, DELFLD, DELFTO, DELLED, DELLTO, LDLAND, LDTO
&5X,'$END'/' $AMULT'/
      &5X,'CSF=',F5.3,',',5X,'ESSF=',F5.3,',',4X,'FCDF=',F5.2,','/
      &5X,'$END'/' $ATRIM'/
     &5X,'CAND=',F6.3,',',3X,'CFLAP=',F6.3,',',2X,'CGM=',F5.3,','/
&5X,'FLDM=',9(F6.3,','),F6.3/5X,'FVCAM=',9(F6.3,','),F6.3/
     45X,'IT=',F6.3,',',5X,'SFLAP=',F7.2,',',1X,'SM=',F6.3,','/
&5X,'SPANF=',F6.2,',',2X,'ZCG=',F5.2,',',5X,'IVCAM=',I1,','/
&5X,'ITRIM=',9(I1,','),I1/5X,'$END'/' $ADET'/
&5X,'ALIN=',9(F4.1,','),F4.1/5X,'ALTV=',9(F6.0,','),F6.0/
      &5X,'CLINPT=',9(F6.3,','),F6.3/5X,'SMN=',9(F5.3,','),F5.3/
     &5X,'ICOD=',I1,',',8X,'IPLOT=',I1,',',7X,'NALF=',I2,','/
&5X,'NMDTL=',I2,','/5X,'$END'/' $ADRAG'/
     &5X,'CDBMB=',9(F6.3,','),F6.3/5X,'CDSTR=',9(F6.3,','),F6.3/
&5X,'CDTNK=',9(F6.3,','),F6.3/5X,'CDEXTR=',9(F6.3,','),F6.3/
&5X,'SMNBMB=',9(F5.3,','),F5.3/5X,'SMSTRS=',9(F5.3,','),F5.3/
&5X,'SMTANK=',9(F5.3,','),F5.3/5X,'SMEXTR=',9(F5.3,','),F5.3/
      &5X,'ICDO=',I1,','/5X,'$END'/' $ATAKE'/
     65X,'CLLAND=',F6.3,',',1X,'CLTO=',F6.3,',',3X,'DELFLD=',F6.3,','/
65X,'DELFTO=',F6.3,',',1X,'DELLED=',F6.3,',',1X,'DELLTO=',F6.3,','/
65X,'LDLAND=',F6.3,',',1X,'LDTO=',F6.3,','/5X,'$END'/
      &' $APRINT ECHOIN=0, IPFLAP=1, IPCAN=1,'/5X,'$END')
       RETURN
       END
```

```
SUBROUTINE PROP (DVFLAG)
C
С
    -- PROPULSION MODULE
       LOGICAL DVFLAG
       CHARACTER ANS*6, TITLE*80, PHASE*8
       INTEGER EN
       REAL MACH1, MACH2
       DIMENSION ALTD (6), XMACH (6)
 6590 IF (DVFLAG.EQ..FALSE.) THEN
                                               !GIVE OPTION TO BYPASS
 6600
         STATUS = LIB$SPAWN('CLS')
         WRITE (6, 6605)
 6605
         FORMAT (//
         7X,'DO YOU WANT TO MAKE ANY CHANGES TO THE ENGINE CYCLE'/
         7x,'ANALYSIS?'//7x,'(1) YES'/7x,'(2) NO'//
7x,'SELECT 1 OR 2: ',$)
         READ (5,6606, ERR=6600) NUM
         FORMAT (I1)
 6606
         IF (NUM.EQ.1) GOTO 6650
         IF (NUM.NE.2) GOTO 6600
c ---
         TRANSFER THE $LEWIS NAMELIST FROM (10) TO (7)
         REWIND (10)
 6610
         READ (10,6611) ANS
         FORMAT (A6)
 6611
         IF (ANS.NE.'*** PR') GOTO 6610
         WRITE (7,6615)
         FORMAT ('*** PROPULSION DATA ***')
 6615
         DO 6630 I=1.30
            READ (10,6616) TITLE
 6616
            FORMAT (A80)
            WRITE (7,6616) TITLE
 6630
         CONTINUE
         RETURN
       ENDIF
C --- NAMELIST LEWIS
 6650 IF (DVFLAG.EQ..FALSE.) THEN
         REWIND (10)
 6660
         READ (10, 6611, END=6690) ANS
         IF (ANS.NE.'*** PR') GOTO 6660
         READ (10,6670) ITYPE, AENDIA, AENLE, AENWT, ATURB,
         BA, DIA1, FRBT, FRPN, HTR, HVF, PCDFAC, PWCC, RDIAM, RLENG, SM1, SODG, VC1, WCWA1, YREN, ESF, TWAB, TWOAB, TWTO, EAB1, EB1, ED1, ETAC1, ETAF1, ETAT1, PRFD, P11P1, P2P1, R32, R54, R54N, R711, R711N, SCPR, DELT57, T3, T51, T71, DELPR, R10A,
         MACH1, MACH2, SFBTP, SFINSP, SFIP, SFSFC1, SFSFC2, SFSFC3,
         (ALTD(I), I=1,6), (XMACH(I), I=1,6), DEPWCC, EN, IPR, KODE,
         KT5, KT7, NOZZ, NPUSE, IPLOT, IPRINT, KERROR, MINPR, MODPRT,
        NAB, NDTAIL, NSUMM, ALTI, AM, POSA, TOSA
 6670
         FORMAT (I1//12X, F7.3, 7X, F7.3, 8X, F8.2/26X, F6.3, 6X, F6.3/
                                                                            ! ARERTO
         10X, F6.3, 9X, F6.3, 9X, F6.3/9X, F6.3, 9X, F10.2, 8X, F6.3/
         10x, F7.3, 9x, F6.3, 9x, F6.3/9x, F6.3, 10x, F6.3, 8x, F6.3/
         11X, F6.3, 8X, F5.2, 9X, F5.2/10X, F8.1, 8X, F8.1, 6X, F5.2/
         10X,F5.3,9X,F5.3,10X,F5.3/11X,F5.3,10X,F5.3,10X,F5.3/
         10X, F6.3, 10X, F6.3, 8X, F6.3/9X, F6.3, 9X, F6.3, 10X, F6.3/
         10X, F6.3, 10X, F6.3, 8X, F6.3/12X, F7.2, 4X, F8.2, 8X, F8.2/
         9X,F8.2,9X,F7.2,7X,F4.1/11X,F6.3,9X,F6.3,9X,F6.3/
         12X, F6.3, 7X, F6.3, 11X, F6.3/12X, F6.3, 9X, F6.3/10X, 6F8.1/
         11X, 6F7.3/12X, F6.3, 5X, I2, 14X, I2/10X, I1, 13X, I2, 13X, I2/
         10X, I1, 15X, I1, 14X, I1/12X, I1, 14X, I1, 13X, I1/
```

```
£ 12X, I1, 11X, I1, 17X, I2/11X, I2, 12X, F3.1, 10X, F3.1/
      £ 10X,F5.2,10X,F5.1)
      ENDIF
       IF (DVFLAG.EQ..TRUE.) ITYPE=6
 6690 STATUS = "IB$SPAWN ('CLS')
      WRITE (6, 6695) ITYPE
 6695 FORMAT (/
     &7X, 'SELECT THE ENGINE TYPE THAT IS CLOSEST TO YOUR DESIGN.'/
           YOU CAN THEN ALTER THE VARIABLES TO SUIT YOUR NEEDS.'//
     67X, ** CAUTION ** MAKING A CHANGE OF ENGINE TYPE WILL'
     &7X, 'DESTROY ANY ENGINE VARIABLES THAT YOU PREVIOUSLY SET'
     67X, 'AND RESET THEM FOR THE NEW ENGINE TYPE. (YOU WILL NEED' /
     £7X,'TO GO THROUGH EACH ENGINE PAGE AND REENTER THE VALUES)'//
     £7X, 'ENGINE TYPE: ', I1/
     \&7x,'1 = J85
                      (TURBOJET, 2700 LBS THRUST) //
     £7X,'2 = TF30 (TURBOFAN, 0.7 BYPASS, 14500 LBS THRUST)'/
£7X,'3 = JT8D (TURBOFAN, 1.0 BYPASS, 14500 LBS THRUST)'/
£7X,'4 = JT9D (TURBOFAN, 8.2 BYPASS, 50000 LBS THRUST)'/
£7X,'5 = CF6 (TURBOFAN, 4.4 BYPASS, 50000 LBS THRUST)'/
     £7X,'6 = GENERIC (TURBOFAN, 6.2 BYPASS, 9300 LBS THRUST)'//
     &7X,'(1) CHANGE ENGINE TYPE'/7X,'(2) NO CHANGE'//
     &7X, 'SELECT 1 OR 2: ',$)
      READ (5,6606, ERR=6690) NUM
       IF ((NUM.NE.1).AND.(NUM.NE.2)) GOTO 6690
       IF ((NUM.EQ.2).AND.(DVFLAG.EQ..TRUE.)) THEN
         CALL LEWIS (ITYPE, AENDIA, AENLE, AENWT, ARERTO, ATURB,
         BA, DIA1, FRBT, FRPN, HTR, HVF, PCDFAC, PWCC, RDIAM, RLENG,
         SM1, SODG, VC1, WCWA1, YREN, ESF, TWAB, TWOAB, TWTO, EAB1,
        EB1, ED1, ETAC1, ETAF1, ETAT1, PRFD, P11P1, P2P1, R32, R54,
        R54N, R711, R711N, SCPR, DELT57, T3, T51, T71, DELPR, R10A,
        MACH1, MACH2, SFBTP, SFINSP, SFIP, SFSFC1, SFSFC2, SFSFC3,
        ALTD, XMACH, DEPWCC, EN, IPR, KODE, KT5, KT7, NOZZ, NPUSE, IPLOT, IPRINT, KERROR, MINPR, MODPRT, NAB, NDTAIL, NSUMM, ALTI,
         AM, POSA, TOSA)
         GOTO 6720
       ENDIF
       IF (NUM.EQ.2) GOTO 6720
       IF (NUM.EQ.1) THEN
 6700
       WRITE (6, 6705)
 6705
       FORMAT (/7X, 'ENTER THE NEW ENGINE TYPE (1,2,3,4,5, OR 6): ',$)
        READ (5,6606, ERR=6700) ITYPE
        IF((ITYPE.LT.1).OR.(ITYPE.GT.6)) GOTO 6700
        CALL LEWIS (ITYPE, AENDIA, AENLE, AENWT, ARERTO, ATURB, BA, DIA1, FRBT, FRPN, HTR, HVF, PCDFAC, PWCC, RDIAM, RLENG,
        SM1, SODG, VC1, WCWA1, YREN, ESF, TWAB, TWOAB, TWTO, EAB1,
        EB1, ED1, ETAC1, ETAF1, ETAT1, PRFD, P11P1, P2P1, R32, R54,
         R54N, R711, R711N, SCPR, DELT57, T3, T51, T71, DELPR, R10A,
        MACH1, MACH2, SFBTP, SFINSP, SFIP, SFSFC1, SFSFC2, SFSFC3,
        ALTD, XMACH, DEPWCC, EN, IPR, KODE, KT5, KT7, NOZZ, NPUSE,
         IPLOT, IPRINT, KERROR, MINPR, MODPRT, NAB, NDTAIL, NSUMM, ALTI,
         AM, POSA, TOSA)
        GOTO 6690
      ENDIF
C --- ENGINE PAGE 1
 6720 STATUS = LIB$SPAWN('CLS')
      WRITE (6, 6725) AENDIA, AENLE, AENWT, ATURB, BA, DIA1,
      &FRBT, FRPN
 6725 FORMAT (/
```

```
&7X,'** PROPULSION PAGE 1 **'//
    £7X,'(1) ACTUAL ENGINE DIAMETER (FT)....., F7.3/
    67X, (2) ACTUAL ENGINE LENGTH (FT) ......, F7.3/
    £7X,'(3) ACTUAL ENGINE WEIGHT (LBS).....,',F8.2/
    67X, (4) INNER TURBINE FLOW AREA (FT2)....., F6.3/
    £7X, (5) BYPASS RATIO....., , F6.3/
    £7X, '(6) ENGINE FACE DIAMETER (FT) ......, F6.3/
    67X,'(7) NOZZLE FINENESS RATIO......, F6.3/
    67X, (8) COWL FINENESS RATIO......, , f6.3//
    47X, SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
     READ (5,6606, ERR=6720) NUM
     IF (NUM.EQ.0) GOTO 6840
     GOTO (6740, 6750, 6760, 6780, 6790, 6800, 6810, 6820) , NUM
     GOTO 6720
6740 WRITE (6,6745)
6745 FORMAT (/7X, 'ENTER THE ENGINE DIAMETER. IF 0.0 IS USED, THE'/
    &7X, 'ENGINE WILL BE SIZED AUTOMATICALLY (FEET): ',$)
     READ (5, 6746, ERR=6740) AENDIA
6746 FORMAT (F7.3)
     IF ((AENDIA.LT.0.0).OR. (AENDIA.GT.30.0)) GOTO 6740
     GOTO 6720
6750 WRITE (6, 6755)
6755 FORMAT (/7X, 'ENTER THE ENGINE LENGTH. IF 0.0 IS USED, THE'/
    &7X, 'ENGINE WILL BE SIZED AUTOMATICALLY (FEET): ',$)
     READ (5, 6746, ERR=6750) AENLE
     IF ((AENLE.LT.0.0).OR. (AENLE.GT.60.0)) GOTO 6750
     GOTO 6720
6760 WRITE (6, 6765)
6765 FORMAT (/7X, 'ENTER THE ENGINE WEIGHT. IF 0.0 IS USED, THE'/
    &7X, 'ENGINE WILL BE SIZED AUTOMATICALLY (LBS): ',$)
     READ (5, 6766, ERR=6760) AENWT
6766 FORMAT (F8.2)
     IF ((AENWT.LT.0.0).OR.(AENWT.GT.100000)) GOTO 6760
     GOTO 6720
6780 WRITE (6, 6785)
6785 FORMAT (/7X, 'ENTER THE INNER TURBINE FLOW AREA (FT2): ',$)
     READ (5, 6786, ERR=6780) ATURB
6786 FORMAT (F6.3)
     IF ((ATURB.LE.0.0).OR.(ATURB.GT.10.0)) GOTO 6780
     GOTO 6720
6790 WRITE (6, 6795)
6795 FORMAT (/7x, 'ENTER THE BYPASS RATIO: ',$)
     READ (5,6786, ERR=6790) BA
     IF ((BA.LT.0.0).OR.(BA.GT.30.0)) GOTO 6790
     GOTO 6720
6800 WRITE (6, 6805)
6805 FORMAT (/7X, 'ENTER THE ENGINE FACE DIAMETER (FT): ',$)
     READ (5,6786, ERR=6800) DIA1
     IF ((DIA1.LT.0.0).OR.(DIA1.GT.30.0)) GOTO 6800
     GOTO 6720
6810 WRITE (6, 6815)
6815 FORMAT (/7x, 'ENTER THE NOZZLE FINENESS RATIO '/
    £7X, '(NOZZLE LENGTH/NOZZLE MAX DIAMTER): ',$)
    READ (5, 6786, ERR=6810) FRBT
     IF(FRBT.LT.0.0) GOTO 6810
     GOTO €720
6820 WRITE (6, 6825)
6825 FORMAT (/7x, 'ENTER THE COWL FINENESS RATIO'/
    &7X, '(COWL LENGTH/COWL MAX DIAMETER): ',$)
     READ (5, 6786, ERR=6820) FRPN
```

```
C 4
C --- PROPULSION PAGE 2
C
 6840 STATUS = LIB$SPAWN('CLS')
     WRITE (6,6845) HTR, HVF, PCDFAC, PWCC, RDIAM, RLENG,
     &SM1, SODG, VC1
 6845 FORMAT (/
     &7X, ** PROPULSION PAGE 2 ***//
     £7X,'(1) ENGINE HUB/TIP RATIO....., F6.3/
     £7X,'(2) FUEL HEAT VALUE (BTU/LBM).....,,F10.2/
     £7X, '(3) SCALING FACTOR FOR INLET CAPTURE AREA.....', F6.3/
     67X, (4) ENGINE PERCENT CORRECTED AIRFLOW......, F7.3/
     &7X,'(5) MAXIMUM NACELLE DIAMETER FACTOR.....',F6.3/
     &7X,'(6) TOTAL NACELLE LENGTH FACTOR....', F6.3/
&7X,'(7) ENGINE FACE MACH NUMBER....', F6.3/
     £7X,'(8) DISTANCE BETWEEN NOZZLES/NOZZLE DIAMETER....', F6.3/
     £7X,'(9) NOZZLE VELOCITY COEFFICIENT....., F6.3//
     £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5,6606, ERR=6840) NUM
      IF (NUM.EQ.0) GOTO 7000
      GOTO (6860, 6870, 6880, 6890, 6900, 6910, 6920, 6930, 6940) , NUM
      GOTO 6840
 6860 WRITE (6,6865)
 6865 FORMAT (/7X, 'ENTER THE ENGINE HUB/TIP RATIO: ',$)
      READ (5, 6786, ERR=6860) HTR
      IF ((HTR.LE.0.0).OR.(HTR.GE.1.0)) GOTO 6860
      GOTO 6840
 6870 WRITE (6, 6875)
 6875 FORMAT (/7X, 'ENTER THE FUEL HEAT VALUE (BTU/LBM): ',$)
      READ (5, 6876, ERR=6870) HVF
 6876 FORMAT (F10.2)
      IF ((HVF.LT.14000.0).OR.(HVF.GT.22000.0)) GOTO 6870
      GOTO 6840
 6880 WRITE (6,6885)
 6885 FORMAT (/7X, 'ENTER THE SCALING FACTOR FOR THE INLET'/
     &7X, 'CAPTURE AREA: ',$)
      READ (5, 6786, ERR=6880) PCDFAC
      IF ((PCDFAC.LT.0.5).OR.(PCDFAC.GT.1.5)) GOTO 6880
      GOTO 6840
 6890 WRITE (6,6895)
 6895 FORMAT (/7X, 'ENTER THE ENGINE PERCENT CORRECTED AIRFLOW: ',$)
      READ (5, 6896, ERR=6890) PWCC
 6896 FORMAT (F5.3)
      IF ((PWCC.LT.50.0).OR.(PWCC.GT.150.0)) GOTO 6890
      GOTO 6840
 6900 WRITE (6,6905)
 6905 FORMAT (/7X, 'ENTER THE MAXIMUM NACELLE DIAMETER FACTOR. '/
     &7X, '(ENGINE DIAMETER * DIAMETER FACTOR = NACELLE DIAMETER): '
      READ (5, 6786, ERR=6900) RDIAM
      IF ((RDIAM.LT.1.0).OR.(RDIAM.GT.2.0)) GOTO 6900
      GOTO 6840
 6910 WRITE (6, 6915)
 6915 FORMAT (/7X, 'ENTER THE NACELLE LENGTH FACTOR. (ENGINE'/
     £7X, 'LENGTH * LENGTH FACTOR = NACELLE LENGTH): ',$)
      READ (5, 6786, ERR=6910) RLENG
      IF ((RLENG.LT.1.0).OR.(RLENG.GT.3.0)) GOTO 6910
      GOTO 6840
```

```
6920 WRITE (6,6925)
 6925 FORMAT (/7x, 'ENTER THE ENGINE FACE MACH NUMBER: ',$)
      READ (5, 6786, ERR=6920) SM1
      IF((SM1.LE.0.0).OR.(SM1.GT.2.0)) GOTO 6920
      GOTO 6840
 6930 WRITE (6, 6935)
 6935 FORMAT (/7x, 'ENTER THE DISTANCE BETWEEN THE EXHAUST NOZZLES'/
     &7X, 'DIVIDED BY THE NOZZLE EXIT DIAMETER: ',$)
      READ (5,6786, ERR-6930) SODG
      IF (SODG.LT.1.0) GOTO 6930
      GOTO 6840
 6940 WRITE (6, 6945)
 6945 FORMAT (/7x, 'ENTER THE NOZZLE VELOCITY COEFFICIENT: ',$)
      READ (5, 6786, ERR=6940) VC1
      IF((VC1.LT.0.6).OR.(VC1.GT.1.0)) GOTO 6940
      GOTO 6840
C --- PROPULSION PAGE 3
C -
 7000 STATUS = LIB$SPAWN('CLS')
      WRITE (6,7005) WCWA1, YREN, TWAB, TWOAB, TWTO, EAB1, EB1, ED1,
     &ETAC1
 7005 FORMAT (/
     &7X, *** PROPULSION PAGE 3 ***//
     £7X,'(1) COOLING/PRIMARY AIRFLOW RATIO.....', F6.3/
     &7X,'(2) YEAR OF ENGINE INSTALLATION....., F5.2/
     67X, (3) THRUST W/AFTERBURNER AT SEA-LEVEL...', F8.1/
     £7X,'(4) THRUST W/O AFTERBURNER AT SEA-LEVEL.', F8.1/
     e7X,'(5) THRUST/WEIGHT RATIO AT TAKE-OFF.....',F5.2/
     £7X,'(6) AFTERBURNER ADIABATIC EFFICIENCY.....',F5.3/
     £7X,'(7) COMBUSTER ADIABATIC EFFICIENCY....., F5.3/
     67X, '(8) DUCT BURNER ADIABATIC EFFICIENCY.....', F5.3/
67X, '(9) COMPRESSOR ADIABATIC EFFICIENCY.....', F5.3//
     67X, SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5,6606, ERR=7000) NUM
      IF (NUM.EQ.0) GOTO 7130
      GOTO (7020, 7030, 7040, 7050, 7060, 7070, 7080, 7090, 7100) ,NUM
      GOTO 7000
 7020 WRITE(6,7025)
 7025 FORMAT (/7x, 'ENTER THE COOLING/PRIMARY AIRFLOW RATIO: ',$)
      READ (5, 6786, ERR=7020) WCWA1
      IF ((WCWA1.LT.0.0).OR.(WCWA1.GT.0.2)) GOTO 7020
      GOTO 7000
 7030 WRITE (6,7035)
 7035 FORMAT (/7x, 'ENTER THE YEAR OF ENGINE INSTALLATION'/
     67X, (IF THE YEAR IS 1991, ENTER "91"): ',$)
      READ (5,7036, ERR=7030) YREN
 7036 FORMAT (F5.2)
      GOTO 7000
 7040 WRITE (6, 7045)
 7045 FORMAT(/7X,'ENTER THE ENGINE THRUST WITH AFTERBURNER ON AT'/
     &7X,'SEA-LEVEL, STATIC. (THE ENGINE SIZING FLAG SHOULD BE SET'/
     &7X, 'TO -2 IN THE TRAJECTORY MODULE): ',$)
      READ (5,7046, ERR=7040) TWAB
 7046 FORMAT (F8.1)
      IF((TWAB.LT.0.0).OR.(TWAB.GT.999999.0)) GOTO 7040
      GOTO 7000
 7050 WRITE (6, 7055)
 7055 FORMAT (/7x, 'ENTER THE ENGINE THRUST WITHOUT AFTERBURNER AT'/
     67X, 'SEA-LEVEL, STATIC. (THE ENGINE SIZING FLAG SHOULD BE SET'/
```

```
&7X,'TO -3 IN THE TRAJECTORY MODULE): ',$)
       READ (5,7046, ERR=7050) TWOAB
       IF ((TWOAB.LT.0.0).OR. (TWOAB.GT.999999.0)) GOTO 7050
       GOTO 7000
 7060 WRITE (6,7065)
 7065 FORMAT (/7x, 'ENTER THE THRUST/WEIGHT RATIO AT TAKE-OFF. (THE'/
      £7X, 'ENGINE SIZING FLAG SHOULD BE SET TO 0 OR -1 IN THE'/
      &7X, 'TRAJECTORY MODULE): ',$)
       READ (5, 7036, ERR=7060) TWTO
       IF ((TWTO.LE.0.0).OR.(TETO.GT.10.0)) GOTO 7060
       GOTO 7000
 7070 WRITE (6,7075)
 7075 FORMAT(/7x,'ENTER THE AFTERBURNER ADIABATIC EFFICIENCY: ',$)
       READ (5,6896, ERR=7070) EAB1
       IF ((EAB1.LT.0.6).OR. (EAB1.GT.1.0)) GOTO 7070
       GOTO 7000
 7080 WRITE (6, 7085)
 7085 FORMAT (/7X, 'ENTER THE COMBUSTER ADIABATIC EFFICIENCY: ',$)
       READ (5,6896, ERR=7080) EB1
       IF ((EB1.LT.0.6).OR.(EB1.GT.1.0)) GOTO 7080
       GOTO 7000
 7090 WRITE (6, 7095)
 7095 FORMAT (/7X, 'ENTER THE DUCT BURNER ADIABATIC EFFICIENCY: ',$)
       READ (5,6896, ERR=7090) ED1
       IF ((ED1.LT.0.6).OR.(ED1.GT.1.0)) GOTO 7090
       GOTO 7000
 7100 WRITE (6,7105)
 7105 FORMAT (/7X, 'ENTER THE COMPRESSOR ADIABATIC EFFICIENCY: ',$)
       READ (5,6896, ERR=7100) ETAC1
       IF ((ETAC1.LT.0.6).OR.(ETAC1.GT.1.0)) GOTO 7100
       GOTO 7000
C --
C --- PROPULSION PAGE 4
 7130 STATUS = LIB$SPAWN('CLS')
       WRITE (6,7135) ETAF1, ETAT1, PRFD, P11P1, P2P1, R32, R54,
      &R54N, R711, R711N
 7135 FORMAT (/
      &7X,'** PROPULSION PAGE 4 **'//
      67X, (1) FAN ADIABATIC EFFICIENCY......, F5.3/
      67X, (3) DESIGN FAN PRESSURE RATIO....., F6.3/
     67X,'(3) DESIGN FAN PRESSURE RATIO...., F6.3/
67X,'(4) OUTER COMPRESSOR PRESSURE RATIO...., F6.3/
57X,'(5) OVERALL COMPRESSOR PRESSURE RATIO...., F6.3/
67X,'(6) COMBUSTER PRESSURE RATIO......, F6.3/
47X,'(7) AFTERBURNER PRESSURE RATIO....., F6.3/
67X,'(8) AFTERBURNER PRESSURE RATIO W/O AB LIT..., F6.3/
67X,'(10) DUCTBURNER PRESSURE RATIO......, F6.3/
67X,'(10) DUCTBURNER PRESSURE RATIO W/O DB LIT..., F6.3/
      &7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
       READ (5,7136, ERR=7130) NUM
 7136 FORMAT(I2)
       IF (NUM.EQ.0) GOTO 7270
       GOTO (7150, 7160, 7170, 7180, 7190, 7200, 7210, 7220, 7230, 7240)
      &, NUM
       GOTO 7130
 7150 WRITE (6,7155)
 7155 FORMAT (/7X, 'ENTER THE FAN ADIABATIC EFFICIENCY: ',$)
       READ (5, 6896, ERR=7150) ETAF1
       IF ((ETAF1.LT.0.6).OR. (ETAF1.GT.1.0)) GOTO 7150
```

```
GOTO 7130
 7160 WRITE (6,7165)
 7165 FORMAT (/7X, 'ENTER THE TURBINE ADIABATIC EFFICIENCY: ',$)
      READ (5,6896, ERR=7160) ETAT1
      IF ((ETAT1.LT.0.6).OR.(ETAT1.GT.1.0)) GOTO 7160
      GOTO 7130
 7170 WRITE (6, 7175)
 7175 FORMAT (/7X, 'ENTER THE DESIGN FAN PRESURE RATIO: ',$)
      READ (5, 6786, ERR=7170) PRFD
      IF ((PRFD.LT.1.0).OR.(PRFD.GT.10.0)) GOTO 7170
      GOTO 7130
 7180 WRITE (6,7185)
 7185 FORMAT (/7X, 'ENTER THE OUTER COMPRESSOR PRESSURE RATIO: ',$)
      READ (5,6786,ERR=7180) P11P1
      IF ((P11P1.LT.1.0).OR.(P11P1.GT.15.0)) GOTO 7180
      GOTO 7130
 7190 WRITE (6,7195)
 7195 FORMAT (/7X, 'ENTER THE OVERALL COMPRESSOR PRESSURE RATIO: ',$)
      READ (5, 6786, ERR=7190) P2P1
      IF ((P2P1.LT.3.0).OR.(P2P1.GT.50.0)) GOTO 7190
      GOTO 7130
 7200 WRITE (6,7205)
 7205 FORMAT (/7X, 'ENTER THE COMBUSTER PRESSURE RATIO: ',$)
      READ (5,6786,ERR=7200) R32
      IF((R32.LT.0.6).OR.(R32.GT.1.0)) GOTO 7200
      GOTO 7130
 7210 WRITE (6, 7215)
 7215 FORMAT (/7X, 'ENTER THE AFTERBURNER PRESSURE RATIO: ',$)
      READ (5,6786,ERR=7210) R54
      IF ((R54.LT.0.6).OR.(R54.GT.1.0)) GOTO 7210
      GOTO 7130
 7220 WRITE (6,7225)
 7225 FORMAT (/7X, 'ENTER THE AFTERBURNER PRESSURE RATIO WITHOUT' /
     £7X, THE AFTERBURNER LIT: ',$)
      READ (5, 6786, ERR=7220) R54N
      IF ((R54N.LT.0.6).OR.(R54N.GT.1.0)) GOTO 7220
      GOTO 7130
 7230 WRITE (6, 7235)
 7235 FORMAT (/7X, 'ENTER THE DUCTBURNER PRESSURE RATIO: ',$)
      READ (5, 6786, ERR=7230) R711
      IF ((R711.LT.0.6).OR.(R711.GT.1.0)) GOTO 7230
      GOTO 7130
 7240 WRITE (6,7245)
 7245 FORMAT (/7X, 'ENTER THE DUCTBURNER PRESSURE RATIO WITHOUT THE'/
     &7X, 'DUCTBURNER LIT: '
      READ (5, 6786, ERR=7240) R711N
      IF ((R711N.LT.0.6).OR.(R711N.GT.1.0)) GOTO 7240
      GOTO 7130
C --- PROPULSION PAGE 5
 7270 STATUS = LIB$SPAWN('CLS')
      WRITE (6,7275) SCPR, T3, T51, T71, DELPR, EN, IPR
 7275 FORMAT (/
     £7X,'** PROPULSION PAGE 5 **'//
     67X, '(1) AVERAGE COMPRESSOR STAGE RISE (PSI)....., F6.3/
     67X, '(2) TURBINE INLET TEMPERATURE (DEGREES R) .....', F8.2/
     67X, (3) AFTERBURNER MAX TEMPERATURE (DEGREES R)...', F8.2/
     &7X,'(4) DUCTBURNER MAX TEMPERATURE (DEGREES R)....', F8.2/
     &7X,'(5) INCREMENTAL INLET TOTAL PRESSURE'/
```

```
&7X.'
              RECOVERY REDUCTION....., F7.2/
     £7X,'(6) NUMBER OF ENGINES.....', 12/
     67X,'(7) INLET PRESSURE RECOVERY CODE.....
                                                             ,12//
     £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
     READ (5,6606,ERR=7270) NUM
      IF (NUM.EQ.0) GOTO 7400
      GOTO (7290, 7300, 7310, 7320, 7330, 7340, 7350) , NUM
      GOTO 7270
 7290 WRITE (6,7295)
 7295 FORMAT (/7X, 'ENTER THE AVERAGE COMPRESSOR STAGE RISE: ',$)
      READ (5,6786, ERR=7290) SCPR
      IF ((SCPR.LT.1.0).OR.(SCPR.GT.3.0)) GOTO 7290
      GOTO 7270
 7300 WRITE (6, 7305)
 7305 FORMAT (/7X, 'ENTER THE TURBINE INLET TEMPERATURE (DEGREES R): '
     £,$)
      READ (5,6766, ERR=7300) T3
      IF ((T3.LT.1500.0).OR.(T3.GT.4000.0)) GOTO 7300
      GOTO 7270
 7310 WRITE (6, 7315)
 7315 FORMAT (/7X, 'ENTER THE AFTERBURNER MAX TEMPERATURE'/
     &7X, '(ENTER 0.0 IF NO AB) (DEGREES R): ',$)
      READ (5,6766, ERR=7310) T51
      IF (T51.LT.0.0) GOTO 7310
      GOTO 7270
 7320 WRITE (6, 7325)
 7325 FORMAT (/7X, 'ENTER THE DUCTBURNER MAX TEMPERATURE'/
     &7X, '(ENTER 0.0 IF NO DB) (DEGREES R): ',$)
      READ (5, 6766, ERR=7320) T71
      IF (T71.LT.0.0) GOTO 7320
      GOTO 7270
 7330 WRITE(6,7335)
 7335 FORMAT (/7X, 'ENTER THE INCREMENTAL INLET TOTAL PRESSURE'/
     67X, 'RECOVERY REDUCTION. INPUT AS A POSITIVE NUMBER (PSI): ',$)
      READ (5,7336, ERR=7330) DELPR
 7336 FORMAT (F7.2)
      IF ((DELPR.LT.0.0).OR.(DELPR.GT.1.0)) GOTO 7330
      GOTO 7270
 7340 WRITE (6,7345)
 7345 FORMAT (/7X, 'ENTER THE NUMBER OF ENGINES: ',$)
      READ (5, 7136, ERR=7340) EN
      IF ((EN.LT.1).OR. (EN.GT.10)) GOTO 7340
      GOTO 7270
 7350 WRITE (6,7355)
 7355 FORMAT (/7X, 'ENTER THE INLET PRESSURE RECOVERY CODE' /
     67X, '(1 = AIA RAM RECOVERY)'/
     £7X,'(2 = MILSPEC-5008B)'/
     \&7X, '(3 = NORMAL SHOCK)'/
     \&7X, '(4 = TABLE LOOK-UP): '
      READ (5,7136, ERR=7350) IPR
      IF ((IPR.LT.1).OR.(IPR.GT.4)) GOTO 7350
      GOTO 7270
C ---
C --- PROPULSION PAGE 6
 7400 STATUS = LIB$SPAWN('CLS')
     WRITE(6,7405) SFSFC1, MACH1, SFSFC2, MACH2, SFSFC3, SFBTP,
     &SFINSP, SFIP
 7405 FORMAT (/
     &7X,'** PROPULSION PAGE 6 **'//
```

```
&7X,'(1) SFC MULTIPLYING FACTOR FOR CONDITION ONE.....', F6.3/
    67X, '(2) UPPER LIMIT ON MACH NUMBER FOR CONDITION ONE..'
                                                               ,F6.3/
    67X, '(3) SFC MULTIPLYING FACTOR FOR CONDITION TWO.....'
    £7X, '(4) LOWER LIMIT ON MACH NUMBER FOR CONDITION TWO...', F6.3/
    £7X, '(5) SFC MULTIPLYING FACTOR FOR BURNER LIT......., F6.3/
    £7X,'(6) SCALE FACTOR FOR NOZZLE BOAT-TAIL DRAG.....', F6.3/
    67X, '(7) SCALE FACTOR FOR TOTAL INSTALLATION DRAG.....', F6.3/
    67X,'(8) SCALE FACTOR FOR NOZZLE INTERFERENCE DRA.....', F6.3//
    47x, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
     READ (5, 6606, ERR=7400) NUM
     IF (NUM.EQ.0) GOTO 7510
     GOTO (7420, 7430, 7440, 7450, 7460, 7470, 7480, 7490) , NUM
     GOTO 7400
7420 WRITE (6, 7425)
7425 FORMAT (/7X, 'ENTER THE SPECIFIC FUEL CONSUMPTION MULTIPLYING'/
    £7X, 'FACTOR FOR THE FIRST CONDITION: ',$)
     READ (5, 6786, ERR=7420) SFSFC1
     IF ((SFSFC1.LT.0.3).OR.(SFSFC1.GT.3.0)) GOTO 7420
     GOTO 7400
7430 WRITE (6,7435)
7435 FORMAT (/7x, 'ENTER THE UPPER LIMIT ON MACH NUMBER FOR THE'/
    £7X, 'FIRST CONDITION: ',$)
     READ (5, 6786, ERR=7430) MACH1
     IF ((MACH1.LT.0.0).OR.(MACH1.GT.3.0)) GOTO 7430
     GOTO 7400
7440 WRITE (6,7445)
7445 FORMAT (/7x, 'ENTER THE SPECIFIC FUEL CONSUMPTION MULTIPLYING'/
    &7X, 'FACTOR FOR THE SECOND CONDITION: ',$)
     READ (5, 6786, ERR=7440) SFSFC2
     IF ((SFSFC2.LT.0.3).OR.(SFSFC2.GT.3.0)) GOTO 7440
     GOTO 7400
7450 WRITE (6,7455)
7455 FORMAT (/7x, 'ENTER THE LOWER LIMIT ON MACH NUMBER FOR THE'/
    67X, SECOND CONDITION (MUST BE GREATER THAN THE MACH NUMBER'/
    £7X, 'LIMIT ON CONDITION ONE): ',$)
     READ (5, 6786, ERR=7450) MACH2
     IF (((MACH2.LT.0.0).OR.(MACH2.GT.3.0)).OR.(MACH2.LT.MACH1))
    &GOTO 7450
     GOTO 7400
7460 WRITE (6,7465)
7465 FORMAT (/7x, 'ENTER THE SPECIFIC FUEL CONSUMPTION MULTIPLYING'/
    47X, 'FACTOR FOR AFTERBURNER LIT: ',$)
     READ (5,6786, ERR=7460) SFSFC3
     IF ((SFSFC3.LT.0.3).OR.(SFSFC3.GT.10.0)) GOTO 7460
     GOTO 7400
7470 WRITE (6,7475)
7475 FORMAT (/7X, 'ENTER THE SCALE FACTOR FOR THE NOZZLE'/
    &7X, 'BOAT-TAIL DRAG: ',$)
     READ (5,6786, ERR=7470) SFBTP
     IF ((SFBTP.LT.0.0).OR.(SFBTP.GT.2.0)) GOTO 7470
     GOTO 7400
7480 WRITE(6,7485)
7485 FORMAT(/7X,'ENTER THE SCALE FACTOR FOR THE TOTAL'/
    &7X, 'INSTALLATION DRAG: ',$)
     READ (5, 6786, ERR=7480) SFINSP
     IF((SFINSP.LT.0.0).OR.(SFINSP.GT.2.0)) GOTO 7480
     GOTO 7400
7490 WRITE (6,7495)
7495 FORMAT(/7X,'ENTER THE SCALE FACTOR FOR THE NOZZLE'/
    &7X,'INTERFERENCE DRAG: ',$)
```

```
READ (5,6786, ERR=7490) SFIP
      IF((SFIP.LT.0.0).OR.(SFIP.GT.2.0)) GOTO 7490
      GOTO 7400
C --- PROPULSION PAGE 7
C -
 7510 STATUS = LIB$SPAWN('CLS')
      WRITE (6,7515) (ALTD (I), I=1,6), (XMACH (I), I=1,6), NAB, KODE,
     &KT5, KT7, NOZZ
 7515 FORMAT (/
     &7X,'** PROPULSION PAGE 7 **'//
     £7X,'(1) ALTITUDES FOR DETAILED OUTPUT (FT): ',2(F7.1,',')/
     &11X,3(F7.1,','),F7.1//
     67X, (2) MACH NUMBERS FOR DETAILED OUTPUT: ',2(F6.3,',')/
     £11X,3(F6.3,','),F6.3//
     67X,'(3) NUMBER OF ALT/MACH COMBINATIONS WITHOUT AB LIT..', 12/
     67X, '(4) ENGINE TYPE INDICATOR....., 11/
     &7X,'
              (0 = TURBOJET, 2 = TURBOFAN)'/
     &7X, (5) AFTERBURNER INDICATOR....., 12/
     £7X, '(6) DUCTBURNER INDICATOR....., 12/
     67X,'(7) NOZZLE TYPE INDICATOR....., 11/
     &/"
              SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5,6606, ERR=7510) NUM
      IF (NUM.EQ.0) GOTO 7600
      GOTO (7530, 7540, 7550, 7560, 7570, 7580, 7590) , NUM
      GOTO 7510
 7530 WRITE (6, 7535)
 7535 FORMAT (/7X, 'ENTER THE ARRAY OF ALTITUDES FOR THE DETAILED' /
     £7X, 'OUTPUT (UP TO 6). PUT A ", " BETWEEN EACH NUMBER. '/
     £1X, 'ALTITUDES: ',$)
      READ (5,7536, ERR=7530) (ALTD (I), I=1,6)
 7536 FORMAT (6F8.1)
      DO 7537 I=1,6
        IF ((ALTD(I).LT.0.0).OR.(ALTD(I).GT.99999.0)) GOTO 7530
 7537 CONTINUE
      GOTO 7510
 7540 WRITE (6, 7545)
 7545 FORMAT (/7X, 'ENTER THE ARRAY OF MACH NUMBERS FOR THE DETAILED'/
     &7X,'OUTPUT (UP TO 6). THESE SHOULD BE MATCHED TO THE'/ &7X,'ALTITUDES. PUT A "," BETWEEN EACH NUMBER.'/
     &1X, 'MACH: ',$)
      READ (5, 7546, ERR=7540) (XMACH(I), I=1, 6)
 7546 FORMAT (6F6.3)
      DO 7547 I=1,6
        IF ((XMACH(I).LT.0.0).OR.(XMACH(I).GT.3.0)) GOTO 7540
 7547 CONTINUE
      GOTO 7510
 7550 WRITE (6, 7555)
 7555 FORMAT (/7X, 'ENTER THE NUMBER OF ALTITUDE/MACH NUMBER'/
     £7X,'COMBINATIONS IN THE ARRAYS ABOVE THAT DO NOT HAVE THE'/
     &7X,'AFTERBURNER/DUCTBURNER LIT. (IF THERE ARE 4 ALT/MACH'/
     &7X,'COMBINATIONS AND "3" IS ENTERED HERE, THEN THE LAST'/
     &7X, 'COMBINATION WILL HAVE A LIT BURNER): ',$)
      READ (5,6606, ERR=7550) NAB
      IF ((NAB.GT.6).OR.(NAB.LT.0)) GOTO 7550
      GOTO 7510
 7560 WRITE (6, 7565)
 7565 FORMAT (/7X, 'ENTER THE ENGINE TYPE INDICATOR'/
     67X.'0 = TURBOJET'/
     \epsilon7x,'2 = TURBOFAN: ',$)
```

```
READ (5,6606, ERR=7560) KODE
          IF ((KODE.NE.0).AND.(KODE.NE.2)) GOTO 7560
          GOTO 7510
7570 WRITE (6,7575)
7575 FORMAT (/7X, 'ENTER THE AFTERBURNER INDICATOR'/
        \&7X, ' 0 = NO AB'/
        47x,'-1 = AB PRESENT, NOT LIT'/
        47X, 2 = AB LIT: ',$)
          READ (5,7136,ERR=7570) KT5
          IF ((KT5.NE.0).AND.(KT5.NE.-1).AND.(KT5.NE.2)) GOTO 7570
          GOTO 7510
7580 WRITE (6, 7585)
7585 FORMAT (/7x, 'ENTER THE DUCTBURNER INDICATOR'/
        \epsilon 7x, ' 0 = NO DUCTBURNER'
        £7X,'-1 = DB PRESENT, NOT LIT'/
        £7X,' 2 = DUCTBURNER LIT: ',$)
          READ (5,7136,ERR=7580) KT7
          IF ((KT7.NE.0).AND.(KT7.NE.-1).AND.(KT7.NE.2)) GOTO 7580
          GOTO 7510
7590 WRITE (6,7595)
7595 FORMAT (/7x, 'ENTER THE NOZZLE TYPE INDICATOR'/
        £7X,'0 = CONVERGENT NOZZLE'/
        £7X,'1 = CONVERGENT-DIVERGENT NOZZLE'/
        &7X,'2 = NOZZLE VELOCITY COEFFICIENT: ',$)
          READ (5,6606, ERR=7590) NOZZ
          IF ((NOZZ.LT.0).OR. (NOZZ.GT.2)) GOTO 7590
          GOTO 7510
7600 WRITE (7,7605) ITYPE, AENDIA, AENLE, AENWT, ATURB,
        &BA, DIA1, FRBT, FRPN, HTR, HVF, PCDFAC, PWCC, RDIAM, RLENG,
        &SM1, SODG, VC1, WCWA1, YREN, ESF, TWAB, TWOAB, TWTO, EAB1,
        &EB1, ED1, ETAC1, ETAF1, ETAT1, PRFD, P11P1, P2P1, R32, R54,
        6R54N, R711, R711N, SCPR, DELT57, T3, T51, T71, DELPR, R10A,
        EMACH1, MACH2, SFBTP, SFINSP, SFIP, SFSFC1, SFSFC2, SFSFC3,
E(ALTD(I), I=1,6), (XMACH(I), I=1,6), DEPWCC, EN, IPR, KODE,
        &KT5, KT7, NOZZ, NPUSE, IPLOT, IPRINT, KERROR, MINPR, MODPRT,
        £NAB, NDTAIL, NSUMM, ALTI, AM, POSA, TOSA
       5 FORMAT ('*** PROPULSION DATA ***'/II/' $LEWIS'/
65X,'AENDIA=',F7.3,',',AENLE=',F7.3,',',1X,'AENWT=',F8.2,','/
620X,'ATURB=',F6.3,',',2X,'BA=',F6.3,','/ !ARERTO TAKEN OUT
65X,'DIA1=',F6.3,',',3X,'FRBT=',F6.3,',',PCDFAC=',F6.3,','/
65X,'HTR=',F6.3,',',4X,'HVF=',F10.2,',',PCDFAC=',F6.3,','/
65X,'PWCC=',F7.3,',',2X,'RDIAM=',F6.3,',',2X,'RLENG=',F6.3,','/
65X,'SM1=',F6.3,',',4X,'SODG=',F6.3,',',3X,'VC1=',F6.3,','/
65X,'WCWA1=',F6.3,',',2X,'YREN=',F5.2,',',4X,'ESF=',F5.2,','/
65X,'TWAB=',F8.1,',',1X,'TWOAB=',F8.1,',',TWTO=',F5.2,','//
65X,'EAB1=',F5.3,',',4X,'EB1=',F5.3,',',5X,'ED1=',F5.3,','//
65X,'ETAC1=',F5.3,',',3X,'ETAF1=',F5.3,',',3X,'ETAT1=',F5.3,','//
65X,'PRFD=',F6.3,',',3X,'P11P1=',F6.3,',',2X,'P2P1=',F6.3,','//
65X,'R32=',F6.3,',',4X,'R54=',F6.3,',',4X,'R54N=',F6.3,','//
65X,'CDLT57=',F7.2,',',T3=',F8.2,',',3X,'T51=',F8.2,','//
65X,'DLT57=',F7.2,',',T3=',F6.3,',',3X,'T51=',F8.2,','//
65X,'T71=',F8.2,',',2X,'DELPR=',F7.2,',',1X,'R10A=',F4.1,','//
65X,'MACH1=',F6.3,',',2X,'MACH2=',F6.3,',',2X,'SFBTP=',F6.3,','//
65X,'SFINSP=',F6.3,',',1X,'SFIP=',F6.3,',',3X,'SFSFC1=',F6.3,','//
65X,'SFSFC2=',F6.3,',',1X,'SFSFC3=',F6.3,','/,3X,'SFSFC1=',F6.3,','//
65X,'ALTD=',5(F7.1,','),F7.1/5X,'XMACH=',5(F6.3,','),F6.3/
7605 FORMAT ('*** PROPULSION DATA ***'/II/' $LEWIS'/
       45X,'SFSFC2=',F0.3,',',1X,'SFSFC3=',F0.3,',',

45X,'ALTD=',5(F7.1,','),F7.1/5X,'XMACH=',5(F6.3,','),F6.3/

45X,'DEPWCC=',F6.3,',',1X,'EN=',12,',',9X,'IPR=',12,','/

45X,'KODE=',11,',',8X,'KT5=',12,',',8X,'KT7=',12,','/

45X,'NOZZ=',11,',',8X,'NPUSE=',11,',',7X,'IPLOT=',11,','/

45X,'IPRINT=',11,',',6X,'KERROR=',11,',',6X,'MINPR=',11,','/
```

```
&5X,'MODPRT=',:11,',',6X,'NAB=',:11,',',9X,'NDTAIL=',:12,','/
&5X,'NSUMM=',:12,','6X,'ALTI=',F3.1,',',6X,'AM=',F3.1,','/
&5X,'POSA=',F5.2,',',4X,'TOSA=',F5.1,','/5X,'$END')
        RETURN
        END
c -
C --- ENGINE DEFAULTS
       SUBROUTINE LEWIS (ITYPE, AENDIA, AENLE, AENWT, ARERTO, ATURB, &BA, DIA1, FRBT, FRPN, HTR, HVF, PCDFAC, PWCC, RDIAM, RLENG, &SM1, SODG, VC1, WCWA1, YREN, ESF, TWAB, TWOAB, TWTO, EAB1,
       4EB1, ED1, ETAC1, ETAF1, ETAT1, PRFD, P11P1, P2P1, R32, R54,
       6R54N, R711, R711N, SCPR, DELT57, T3, T51, T71, DELPR, R10A,
       &MACH1, MACH2, SFBTP, SFINSP, SFIP, SFSFC1, SFSFC2, SFSFC3,
       &ALTD, XMACH, DEPWCC, EN, IPR, KODE, KT5, KT7, NOZZ, NPUSE, &IPLOT, IPRINT, KERROR, MINPR, MODPRT, NAB, NDTAIL, NSUMM, ALTI,
       GAM, POSA, TOSA)
С
        INTEGER EN
        REAL MACH1, MACH2
        AENDIA-0.0
        AENLE=0.0
        AENWT-0.0
        ARERTO-1.0
        ATURB=0.242
        BA=0.0
        DIA1=1.365
        FRBT=0.0
        FRPN=0.0
        HTR=0.6
        HVF=18600.0
        PCDFAC=1.0
        PWCC=100.0
        RDIAM=1.15
        RLENG-2.0
        SM1 = 0.6
        SODG=1.0
        VC1=0.98
        WCWA1=0.0
        YREN=64.0
        ESF=1.0
        TWAB-0.0
        TWOAB=0.0
        TWTO=0.5
        EAB1=0.75
        EB1=0.87
        ED1=0.75
        ETAC1=0.8
        ETAF1=0.82
        ETAT1=0.9
        PRFD=1.0
        P11P1=1.0
        P2P1=7.0
        PJ2=0.95
        R54=0.94
        R54N=0.94
        R711=0.98
        R711N=0.82
```

SCPR=1.27 DELT57=100.0

```
T3=2160.0
T51=0.0
T71-0.0
DELPR=0.0
R10A=-1.0
MACH1=1.0
MACH2=1.1
SFBTP=0.0
SFINSP=0.0
SFIP=0.0
SFSFC1=1.0
SFSFC2=1.0
SFSFC3=1.0
ALTD=0.0
DEPWCC=2.0
XMACH=0.0
EN=2
IPR=3
KODE=0
KT5=-1
KT7=0
NOZZ-1
NPUSE=2
IPLOT=0
IPRINT=0
KERROR-0
MINPR=1
MODPRT=4
NAB=6
NDTAIL-0
NSUMM-15
ALTI=0.0
AM=0.0
POSA=29.92
TOSA=518.0
                                     ! SET J85 DEFAULTS
IF (ITYPE.EQ.1) THEN
  AENDIA=1.365
  AENLE=9.16
  AENWT=608.0
  ATURB=0.242
  BA=0.0
  DIA1=1.365
  EB1=0.87
  ETAC1-0.8
  HTR=0.6
  PRFD=1.0
  P11P1=1.0
  P2P1=7.0
  R10A=-1.0
  R32=0.95
  R54N=0.94
  SCPR=1.27
  SM1=0.6
  TWAB=4080.0
  TWOAB=2720.0
  T3=2160.0
  WCWA1=0.0
  YREN-63.0
  AENLE=9.16
  AENWT=608.0
```

```
KODE=0
  KT5=-1
  NOZZ-1
ENDIF
IF (ITYPE.EQ.2) THEN ! SET TF30 DEFAULTS
  AENDIA=3.8
  AENLE=15.18
  AENWT-3790.0
  ATURB=0.328
  BA-0.73
  DIA1=3.8
  EB1=0.94
  ETAC1=0.8
  HTR=0.6
  PRFD=2.43
  P11P1=7.41
  P2P1=21.8
  R54=0.92
  R54N=0.88
  SCPR=1.21
  TWAB=25100.0
  TWOAB=14560.0
  T3=2743.0
  WCWA1=0.018
  YREN=71.0
  AENLE=15.18
  AENWT=3790.0
  KT5=2
  KT7=2
  NOZZ-1
ENDIF
IF (ITYPE.EQ.3) THEN ! SET JT8D DEFAULTS
  AENDIA-3.66
  AENLE=10.31
  AENWT=3218.0
  ATURB=0.411
  BA=1.03
  DIA1=3.655
  EB1=0.94
  ETAC1=0.82
  HTR-0.4
  PRFD=1.91
  P11P1=4.2
  P2P1=16.9
  R32=0.95
  R54=0.96
  R54N=0.98
  SCPR=1.2
  TWAB-0.0
  TWOAB=14500.0
  T3=2180.0
  WCWA1=0.0
  YREN=68.0
  AENLE=10.31
  AENWT=3218.0
ENDIF
IF (ITYPE.EQ.4) THEN
                        !SET JT9D DEFAULTS
  AENLE=14.08
  AENWT=8874.0
  ATURB=0.385
```

```
BA=8.2
 EB1=0.98
 ETAC1=0.82
 ETAT1=0.92
 HTR=0.3
 PRFD=1.6
 P11P1=1.6
 P2P1=22.9
 R54N=0.96
  SCPR=1.2
  TWAB-0.0
  TWOAB-50000.0
 T3=2835.0
  WCWA1=0.02
  YREN=70.0
 AENLE=14.08
 AENWT=8874.0
ENDIF
IF (ITYPE.EQ.5) THEN !SET CF6 DEFAULTS
  AENDIA=8.2
  AENLE=14.86
  AENWT=9767.0
  ATURB=0.385
  BA-4.4
  DIA1-8.2
  EB1=0.94
  ETAC1=0.82
  ETAT1=0.92
  HTR=0.3
  PRFD=1.56
  P11P1=1.72
  P2P1=30.0
  R54N=0.92
  SCPR=1.21
  TWAB=0.0
  TWOAB=50280.0
  T3=2800.0
  WCWA1=0.02
  YREN-70.0
  AENLE=14.86
  AENWT=9767.0
ENDIF
                         !SET GENERIC DEFAULTS
IF (ITYPE.EQ.6) THEN
  AENDIA-8.2
  AENLE=8.67
  AENWT-1421.0
  ATURB=0.385
  BA=6.23
  DIA1=8.2
  EAB1-0.75
  EB1=0.87
  ED1=0.75
  ETAC1=0.8
  ETAF1=0.9
  ETAT1=0.92
  HTR=0.6
  PRFD=1.51
  PWCC=100.0
  P11P1=1.396
  P2P1=20.1
```

```
R10A=-1.0
       R32=0.97
       R54-0.98
       R54N=0.98
       R711=0.98
       R711N=.98
       SCPR=1.21
       SM1 = 0.5
       TWAB-0.0
        TWOAB-9300.0
        T3=2637.0
        T51=3400.0
        T71=3400.0
        VC1=0.98
       WCWA1=0.0
       YREN=70.0
        KODE=2
       KT5=0
       KT7=0
       NOZZ=0
      ENDIF
      RETURN
     END
      SUBROUTINE WEIGHTS (DVFLAG, ATYPE)
C
    C --- WEIGHTS
     ◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇◇
     LOGICAL DVFLAG
      CHARACTER ANS*6, TITLE*80, ATYPE*10
     DIMENSION SLOPE (17)
     REAL KP1, KP2, K1, K2, K3, K4, K5
 7650 IF (DVFLAG.EQ..FALSE.) THEN
 7660 STATUS = LIB$SPAWN('CLS')
       WRITE (6, 7665)
 7665
        FORMAT (//
       7X,'DO YOU WANT TO MAKE ANY CHANGES TO THE WEIGHTS'/
       7X,'MODULE?'//7X,'(1) YES'/7X,'(2) NO'//
7X,'SELECT 1 OR 2: ',$)
        READ (5,7666, ERR=7660) NUM
7666
        FORMAT(I1)
        IF (NUM.EQ.1) GOTO 7750
        IF (NUM.NE.2) GOTO 7660
        TRANSFER THE $OPTS AND $FIXW NAMELISTS FROM (10) TO (7)
        REWIND (10)
 7680
        READ (10, 7681) ANS
 7681
        FORMAT (A6)
        IF (ANS.NE.'*** WE') GOTO 7680
 7690
        WRITE (7, 7695) ATYPE
                                ! AIRCRAFT TYPE ABOVE WEIGHTS TITLE
 7695
        FORMAT (A10)
        WRITE (7, 7705)
 7705
        FORMAT ('*** WEIGHTS DATA ***')
        DO 7730 I=1,22
           READ (10,7708) TITLE
 7708
           FORMAT (A80)
           WRITE (7,7708) TITLE
 7730
        CONTINUE
        RETURN
      ENDIF
 7750 IF (DVFLAG.EQ..FALSE.) THEN
```

```
REWIND (10)
 7760
        READ (10, 7681) ANS
        IF (ANS.NE.'*** WE') GOTO 7760
        READ (10,7770) FR, KP1, KP2, SLOPE (1), SLOPE (2), SLOPE (3)
        SLOPE(4), SLOPE(5), SLOPE(6), SLOPE(7), SLOPE(8), SLOPE(9),
        SLOPE (10), SLOPE (11), SLOPE (12), SLOPE (13), SLOPE (14),
       SLOPE (15), SLOPE (16), SLOPE (17), TECHG, DENS, WGTO, AFMACH,
     & K1, K2, K3, K4, K5, STRESS, IDELT, IOBLIQ, IPRINT, ITAIL, & KBODY, KERROR, KWING, WPL, WAMMUN, WBOMB, WMISS, WETANK
 7770
        FORMAT (/8X, F6.3, 10X, F6.3, 9X, F6.3/14X, F6.3, 19X, F6.3/
        14X,F6.3,19X,F6.3/14X,F6.3,19X,F6.3/14X,F6.3,19X,F6.3/
        14X,F6.3,20X,F6.3/15X,F6.3,19X,F6.3/15X,F6.3,19X,F6.3/
        15X, F6.3, 19X, F6.3/15X, F6.3/11X, F6.3, 8X, F6.3, 9X, F8.1/
        12X,F6.3,5X,F6.3,9X,F6.3/8X,F6.3,9X,F6.3,9X,F6.3/
       12X,F8.1,21X,I1/12X,I1,14X,I1,13X,I1/11X,I1,15X,I1,13X,I1///
     & 9x, F8.1, 10x, F7.1, 7x, F8.1/11x, F8.1, 8x, F7.1)
      ENDIF
      IF (DVFLAG.EQ..TRUE.) THEN
                                         ! SET DEFAULTS
        CALL WGHT (FR, KP1, KP2, SLOPE, TECHG, DENS, WGTO, AFMACH,
       K1, K2, K3, K4, K5, STRESS, IDELT, IOBLIQ, IPRINT, ITAIL,
        KBODY, KERROR, KWING, WPL, ATYPE, WAMMUN, WBOMB, WMISS,
        WETANK)
      ENDIF
C -
C --- WEIGHTS PAGE 1
 7800 STATUS = LIB$SPAWN('CLS')
      WRITE(6,7805) (SLOPE(I), I=1,9)
 7805 FORMAT (/
     67X,'** WEIGHTS PAGE 1 **'//
     £7X,'(1) WING SLOPE.....', F6.3/
     67X, (2) FUSELAGE SLOPE....., , F6.3/
     £7X, '(3) HORIZONTAL TAIL/CANARD SLOPE.....', F6.3/
     47X, (4) VERTICAL TAIL SLOPE....., F6.3/
     £7X,'(5) NACELLES SLOPE....., F6.3/
     £7X,'(6) LANDING GEAR SLOPE....., , F6.3/
     £7X,'(7) ENGINES SLOPE.....,, F6.3/
     £7X,'(8) FUEL SYSTEM SLOPE.....', F6.3/
£7X,'(9) HYDRAULICS/PNEUMATICS SLOPE.....', F6.3//
     47X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5, 7666, ERR=7800) NUM
      IF (NUM.EQ.0) GOTO 7920
      GOTO (7820, 7830, 7840, 7850, 7860, 7870, 7880, 7890, 7900) NUM
      GOTO 7800
 7820 WRITE (6, 7825)
 7825 FORMAT (/7X, 'ENTER THE WING WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7820) SLOPE (1)
 7826 FORMAT (F6.3)
      IF ((SLOPE(1).LT.0.0).OR.(SLOPE(1).GT.3.0)) GOTO 7820
      GOTO 7800
 7830 WRITE (6, 7835)
 7835 FORMAT (/7X, 'ENTER THE FUSELAGE WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7830) SLOPE (2)
      IF ((SLOPE(2).LT.0.0).OR.(SLOPE(2).GT.3.0)) GOTO 7830
      GOTO 7800
 7840 WRITE (6, 7845)
 7845 FORMAT (/7X, 'ENTER THE HORIZONTAL TAIL/CANARD'/
     &7X, 'WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7840) SLOPE (3)
      IF ((SLOPE(3).LT.0.0).OR.(SLOPE(3).GT.3.0)) GOTO 7840
```

```
GOTO 7800
 7850 WRITE (6, 7855)
 7855 FORMAT (/7x, 'ENTER THE VERTICAL TAIL WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7850) SLOPE (4)
      IF ((SLOPE (4) .LT.0.0) .OR. (SLOPE (4) .GT.3.0)) GOTO 7850
      GOTO 7800
 7860 WRITE (6, 7865)
 7865 FORMAT (/7X, 'ENTER THE NACELLES WEIGHT SLOPE: ',$)
      READ (5,7826, ERR=7860) SLOPE (5)
      IF ((SLOPE(5).LT.0.0).OR.(SLOPE(5).GT.3.0)) GOTO 7860
      GOTO 7800
 7870 WRITE (6,7875)
 7875 FORMAT (/7X, 'ENTER THE LANDING GEAR WEIGHT SLOPE: ',$)
      READ (5,7826, ERR=7870) SLOPE (6)
      IF ((SLOPE (6).LT.0.0).OR.(SLOPE (6).GT.3.0)) GOTO 7870
      GOTO 7800
 7880 WRITE (6,7885)
 7885 FORMAT (/7X, 'ENTER THE ENGINES WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7880) SLOPE (7)
      IF ((SLOPE(7).LT.0.0).OR.(SLOPE(7).GT.3.0)) GOTO 7880
      GOTO 7800
 7890 WRITE (6, 7895)
 7895 FORMAT (/7X, 'ENTER THE FUEL SYSTEM WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7890) SLOPE (8)
      IF ((SLOPE(8).LT.0.0).OR.(SLOPE(8).GT.3.0)) GOTO 7890
      GOTO 7800
7900 WRITE(6,7905)
 7905 FORMAT (/7X, 'ENTER THE HYDRAULICS/PNEUMATICS WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7900) SLOPE (9)
      IF ((SLOPE(9).LT.0.0).OR.(SLOPE(9).GT.3.0)) GOTO 7900
      GOTO 7800
C --- WEIGHTS PAGE 2
 7920 STATUS - LIB$SPAWN('CLS')
      WRITE (6, 7925) (SLOPE (I), I=10,17), WPL
 7925 FORMAT (/
     &7X,'** WEIGHTS PAGE 2 **'//
     &7X,'(1) ELECTRICAL SYSTEM SLOPE....., F6.3/
     67X,'(2) AVIONICS SLOPE......,, F6.3/
     &7X, '(3) INSTRUMENTATION SLOPE....., F6.3/
     £7X,'(4) ENVIRONMENTAL SYSTEM SLOPE.....', F6.3/
     &7X,'(5) PASSENGER ACCOMODATIONS SLOPE...', F6.3/
&7X,'(6) AUXILIARY POWER UNIT SLOPE...', F6.3/
&7X,'(7) FLIGHT CONTROLS SLOPE...', F6.3/
     &7X, '(8) CREW ACCOMODATIONS SLOPE......'
     £7X,'(9) PAYLOAD WEIGHT (LBS).....,',F8.1//
     &7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5, 7666, ERR=7920) NUM
      IF (NUM.EQ.0) GOTO 8030
      GOTO (7940, 7950, 7960, 7970, 7980, 7990, 8000, 8010, 8020) , NUM
      GOTO 7920
 7940 WRITE (6, 7945)
 7945 FORMAT (/7X, 'ENTER THE ELECTRICAL SYSTEM WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7940) SLOPE (10)
      IF ((SLOPE(10).LT.0.0).OR.(SLOPE(10).GT.3.0)) GOTO 7940
      GOTO 7920
 7950 WRITE(6,7955)
 7955 FORMAT (/7X, 'ENTER THE AVIONICS WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7950) SLOPE (11)
```

```
IF((SLOPE(11).LT.0.0).OR.(SLOPE(11).GT.3.0)) GOTO 7950
      GOTO 7920
 7960 WRITE (6, 7965)
 7965 FORMAT (/7x, 'ENTER THE INSTRUMENTATION WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7960) SLOPE (12)
      IF ((SLOPE(12).LT.0.0).OR.(SLOPE(12).GT.3.0)) GOTO 7960
      GOTO 7920
 7970 WRITE (6, 7975)
 7975 FORMAT (/7x, 'ENTER THE ENVIRONMENTAL SYSTEM WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7970) SLOPE (13)
      IF((SLOPE(13).LT.0.0).OR.(SLOPE(13).GT.3.0)) GOTO 7970
      GOTO 7920
 7980 WRITE (6, 7985)
 7985 FORMAT (/7x, 'ENTER THE PASSENGER ACCOMODATIONS'/
     &7X, 'WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7980) SLOPE (14)
      IF ((SLOPE (14).LT.0.0).OR. (SLOPE (14).GT.3.0)) GOTO 7980
      GOTO 7920
 7990 WRITE (6, 7995)
 7995 FORMAT (/7x, 'ENTER THE AUXILIARY POWER UNIT WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=7990) SLOPE (15)
      IF ((SLOPE (15).LT.0.0).OR. (SLOPE (15).GT.3.0)) GOTO 7990
      GOTO 7920
 8000 WRITE (6,8005)
 8005 FORMAT (/7x, 'ENTER THE FLIGHT CONTROLS WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=8000) SLOPE (16)
      IF ((SLOPE (16).LT.0.0).OR. (SLOPE (16).GT.3.0)) GOTO 8000
      GOTO 7920
 8010 WRITE (6,8015)
 8015 FORMAT (/7X, 'ENTER THE CREW ACCOMODATIONS WEIGHT SLOPE: ',$)
      READ (5, 7826, ERR=8010) SLOPE (17)
      IF ((SLOPE(17).LT.0.0).OR.(SLOPE(17).GT.3.0)) GOTO 8010
      GOTO 7920
 8020 WRITE (C, 8025)
 8025 FORMAT (/7X, 'ENTER THE TOTAL PAYLOAD WEIGHT (LBS). (THIS'/
     £7X, 'SHOULD INCLUDE ALL AMMUNITION, ARMAMENT, MISSILES,'/
     &7X, 'BOMBS, PASSENGERS ETC...): ',$)
     READ (5,8026, ERR=8020) WPL
 8026 FORMAT (F8.1)
      IF (WPL.LT.0.0) GOTO 8020
      GOTO 7920
C -
C --- WEIGHTS PAGE 3
 8030 STATUS = LIB$SPAWN('CLS')
     WRITE (6,8035) KP1, KP2, AFMACH, DENS, STRESS, IDELT, IOBLIQ,
     &ITAIL, KBODY, KWING, WGTO
 8035 FORMAT (/
     67X,'** WEIGHTS PAGE 3 **'//
     £7X,'(1) WING PIVOT FACTOR.....', F6.3/
     £7X,'(2) EXTERNAL TANK FACTOR....., F6.3/
     £7X,'(3) MAXIMUM MACH NUMBER....., £6.3/
     &7X.'
               (TRANSPORTS/BOMBERS ONLY)'/
     67X, (4)
              OBLIQUE WING MATERIAL DENSITY (LBS/IN3)....', F6.3/
     47X, (5)
              OBLIQUE WING ALLOWABLE STRESS (PSI) ...., F8.1/
     &7X,'(6) WING WEIGHT EQUATION....., 11/
     &7X,'
               (0 = STANDARD WING, 1 = DELTA WING) //
     £7X,'(7) OBLIQUE WING WEIGHT EQUATION.....,11/
     £7X,'
              (0 = STANDARD WING, 1 = OBLIQUE WING) '/
     £7X,'(8)
              TAIL INDICATOR...., 11/
```

```
(0 = STANDARD TAIL, 1 = HIGH/T-TAIL) //
    &7X,'
    £7X,'(9) BODY EQUATION (TRANSPORTS/BOMBERS).....', I1/
              (1 = SANDERS, 2 = AIR FORCE) //
    &7X,'
    £7X,'(10) WING WEIGHT TECHNIQUE (TRANSPORTS/BOMBERS)...', I1/
   &7X,'
              (1 = SANDERS, 2 = AIR FORCE, 3 = LANGLY)'/
    £7X,'(11) ESTIMATE OF TAKEOOFF GROSS WEIGHT.....', F8.1//
    £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
    READ (5,8036, ERR=8030) NUM
8036 FORMAT (12)
     IF (NUM.EQ.0) GOTO 8160
     GOTO (8050, 8060, 8070, 8080, 8090, 8100, 8110, 8120, 8130,
    £8140, 8150) ,NUM
     GOTO 8030
8050 WRITE (6,8055)
8055 FORMAT (/7x, 'ENTER THE WING PIVOT FACTOR (1.0 = STANDARD'/
    &7X,'WING PIVOT WEIGHT): ',$)
     READ (5, 7826, ERR=8050) KP1
     IF ((KP1.LT.0.0).OR.(KP1.GT.3.0)) GOTO 8050
     GOTO 8030
8060 WRITE (6,8065)
8065 FORMAT (/7x, 'ENTER THE EXTERNAL FUEL TANK FACTOR'/
    \xi 7X, '(1.0 = STANDARD METAL TANKS): ',$)
     READ (5, 7826, ERR=8060) KP2
     IF ((KP2.LT.0.0).OR.(KP2.GT.3.0)) GOTO 8060
     GOTO 8030
8070 WRITE (6,8075)
8075 FORMAT (/7X, 'ENTER THE MAXIMUM ALLOWABLE MACH NUMBER (FOR'/
    &7X, 'TRANSPORTS AND BOMBERS ONLY): ',$)
     READ (5,7826, ERR=8070) AFMACH
     IF ((AFMACH.LT.0.0).OR.(AFMACH.GT.3.0)) GOTO 8070
     GOTO 8030
8080 WRITE (6,8085)
8085 FORMAT (/7x, 'ENTER THE MATERIAL DENSITY OF THE OBLIQUE WING' /
    £7x,'(LBS/IN3): ',$)
     READ (5, 7826, ERR=8080) DENS
     IF ((DENS.LT.0.0).OR.(DENS.GT.1.0)) GOTO 8080
     GOTO 8030
8090 WRITE (6,8095)
8095 FORMAT (/7X, 'ENTER THE ALLOWABLE STRESS IN THE OBLIQUE WING: '
     READ (5,8026, ERR=8090) STRESS
     IF ((STRESS.LT.5000.0).OR.(STRESS.GT.100000.0)) GOTO 8090
     GOTO 8030
8100 WRITE (6,8105)
8105 FORMAT (/7x, 'ENTER THE WING EQUATION TO USE.'/
    \&7X, '(0 = STANDARD WING, 1 = DELTA WING): ',$)
     READ (5, 7666, ERR=8100) IDELT
     IF ((IDELT.NE.0).AND.(IDELT.NE.1)) GOTO 8100
     GOTO 8030
8110 WRITE (6,8115)
8115 FORMAT (/7X, 'ENTER THE OBLIQUE WING EQUATION TO USE.'/
    67X, '(0 = STANDARD WING, 1 = OBLIQUE WING): ',$)
     READ (5,7666, ERR=8110) IOBLIQ
     IF ((IOBLIQ.NE.0).AND.(IOBLIQ.NE.1)) GOTO 8110
     GOTO 8030
8120 WRITE (6,8125)
8125 FORMAT (/7x, 'ENTER THE TAIL TYPE TO USE.'/
    \&7X, '(0 = STANDARD TAIL, 1 = HIGH TAIL OR T-TAIL): ',$)
     READ (5,7666, ERR=8120) ITAIL
     IF ((ITAIL.NE.0).AND.(ITAIL.NE.1)) GOTO 8120
```

```
GOTO 8030
 8130 WRITE (6,8135)
 8135 FORMAT (/7X, 'ENTER THE BODY EQUATION TO USE.'/
     \&7X, '(1 = SANDERS, 2 = AIRFORCE): ',$)
      READ (5,7666, ERR=8130) KBODY
      IF ((KBODY.NE.1).AND.(KBODY.NE.2)) GOTO 8130
      GOTO 8030
 8140 WRITE (6,8145)
 8145 FORMAT (/7X, 'ENTER THE WING EQUATION TECHNIQUE TO USE.'/
     \xi 7X, '(1 = SANDERS, 2 = AIR FORCE, 3 = LANGLY): ',$)
      READ (5,7666, ERR=8100) KWING
      IF ((KWING.LT.1).OR.(KWING.GT.3)) GOTO 8140
      GOTO 8030
 8150 WRITE (6,8155)
 8155 FORMAT (/7X, 'ENTER AN ESTIMATE FOR THE TAKEOFF GROSS'/
     £7X,' WEIGHT (LBS): ',$)
      READ (5,8026, ERR=8150) WGTO
      IF (WGTO.LE.0.0) GOTO 8150
      GOTO 8030
 --- WEIGHTS PAGE 4
C -
 8160 STATUS = LIB$SPAWN('CLS')
      WRITE (6,8161) WAMMUN, WBOMB, WMISS, WETANK
 8161 FORMAT (/7X, *** WEIGHTS PAGE 4 *** //
     £7X, '(1) WEIGHT OF THE AMMUNITION (LBS)...', F7.1/
     £7X,'(2) WEIGHT OF THE BOMBS....., F8.1/
     £7X,'(3) WEIGHT OF THE MISSILES.....', F8.1/
£7X,'(4) WEIGHT OF THE EXTERNAL TANKS....', F7.1//
     £7X, 'SELECT A VALUE TO CHANGE OR 0 TO CONTINUE: ',$)
      READ (5,7666, ERR=8160) NUM
      IF (NUM.EQ.0) GOTO 8300
      GOTO (8170, 8180, 8190, 8200) , NUM
      GOTO 8160
 8170 WRITE (6,8175)
 8175 FORMAT (/7X, 'ENTER THE WEIGHT OF THE AMMUNITION: ',$)
      READ (5,8176, ERR=8170) WAMMUN
 8176 FORMAT (F7.1)
      IF (WAMMUN.LT.0.0) GOTO 8170
      GOTO 8160
 8180 WRITE (6,8185)
 8185 FORMAT (/7X, 'ENTER THE WEIGHT OF THE BOMBS: ',$)
      READ (5,8026, ERR=8180) WBOMB
      IF (WBOMB.LT.0.0) GOTO 8180
      GOTO 8160
 8190 WRITE (6,8195)
 8195 FORMAT (/7X, 'ENTER THE WEIGHT OF THE MISSILES: ',$)
      READ (5,8026, ERR=8190) WMISS
      IF (WMISS.LT.0.0) GOTO 8190
      GOTO 8160
 8200 WRITE (6,8205)
 8205 FORMAT (/7x, 'ENTER THE WEIGHT OF THE EXTERNAL TANKS: ',$)
      READ (5,8176, ERR=8200) WETANK
      IF (WETANK LT.0.0) GOTO 8200
      GOTO 8160
 8300 WRITE(7,8365) ATYPE, FR, KP1, KP2, SLOPE(1), SLOPE(2), SLOPE(3),
     &SLOPE(4), SLOPE(5), SLOPE(6), SLOPE(7), SLOPE(8), SLOPE(9),
     &SLOPE(10), SLOPE(11), SLOPE(12), SLOPE(13), SLOPE(14),
     4SLOPE (15), SLOPE (16), SLOPE (17), TECHG, DENS, WGTO, AFMACH,
     &K1, K2, K3, K4, K5, STRESS, IDELT, IOBLIQ, IPRINT, ITAIL,
```

```
&KBODY, KERROR, KWING, WPL, WAMMUN, WBOMB, WMISS, WETANK
        5 FORMAT (A10/'*** WEIGHTS DATA ***'/' $OPTS'/

£5X,'FR=',F6.3,',',5X,'KP1=',F6.3,',',4X,'KP2=',F6.3,','/

£5X,'SLOPE(1)=',F6.3,',',9X,'SLOPE(2)=',F6.3,','/

£5X,'SLOPE(3)=',F6.3,',',9X,'SLOPE(4)=',F6.3,','/

£5X,'SLOPE(5)=',F6.3,',',9X,'SLOPE(6)=',F6.3,','/

£5X,'SLOPE(7)=',F6.3,',',9X,'SLOPE(10)=',F6.3,','/

£5X,'SLOPE(11)=',F6.3,',',9X,'SLOPE(12)=',F6.3,','/

£5X,'SLOPE(13)=',F6.3,',',8X,'SLOPE(14)=',F6.3,','/

£5X,'SLOPE(15)=',F6.3,',',8X,'SLOPE(16)=',F6.3,','/

£5X,'SLOPE(17)=',F6.3,',',8X,'SLOPE(16)=',F6.3,','/

£5X,'SLOPE(17)=',F6.3,','/

£5X,'TECHG=',F6.3,',',2X,'DENS=',F6.3.'',3X,'WGTO=',F8.1
  8365 FORMAT (A10/'*** WEIGHTS DATA ***'/' $OPTS'/
         65X, 'SLOPE(17)=',F6.3,','/
65X, 'TECHG=',F6.3,',',2X,'DENS=',F6.3,',',3X,'WGTO=',F8.1,','/
65X,'AFMACH=',F6.3,',',1X,'K1='.F6.3,',',5X,'K2=',F6.3,','/
65X,'K3=',F6.3,',',5X,'K4=',F6.3,',',5X,'K5=',F6.3,','/
65X,'STRESS=',F8.1,',',14X,'IDELT=',I1,','/
65X,'IOBLIQ=',I1,',',6X,'IPRINT=',I1,',',6X,'ITAIL=',I1,','/
65X,'KBODY=',I1,',',7X,'KERROR=',I1,',',6X,'KWING=',I1,','/
65X,'$END'/' $FIXW'/
          &5X,'WPL=',F8.1,','2X,'WAMMUN=',F7.1,',','WBOMB=',F8.1,','/
          £5X, 'WMISS=', F8.1,',', 'WETANK=', F7.1,','/
          &5X,'$END')
           RETURN
           END
C ·
C --- WEIGHTS DEFAULTS
C --
            SUBROUTINE WGHT (FR, KP1, KP2, SLOPE, TECHG, DENS, WGTO, AFMACH,
          6K1, K2, K3, K4, K5, STRESS, IDELT, IOBLIQ, IPRINT, ITAIL,
          &KBODY, KERROR, KWING, WPL, ATYPE, WAMMUN, WBOMB, WMISS, WETANK)
           DIMENSION SLOPE (17)
           REAL KP1, KP2, K1, K2, K3, K4, K5
            CHARACTER ATYPE*10
            IF (ATYPE.EQ. 'FIGHTER
                                                      ') fR=1.5
            IF (ATYPE.EQ.'BOMBER ') FR=1.0
            IF (ATYPE.EQ.'TRANSPORT ') FR=1.0
           KP1=1.0
            KP2=1.0
           DO 10 I=1,17
                SLOPE (I) = 1.0
      10 CONTINUE
            TECHG-1.0
           DENS=0.056
           IF (ATYPE.EQ.'FIGHTER ') WGTO=20000
IF (ATYPE.EQ.'BOMBER ') WGTO=50000
            IF (ATYPE.EQ.'TRANSPORT ') WGTO=100000
            AFMACH=0.85
           K1=1.0
            K2=1.0
            K3=1.0
            K4=1.0
            K5=1.0
            STRESS=30000.0
            IDELT=0
            IOBLIQ=0
            IPRINT=1
            ITAIL=0
            KBODY=1
            KERROR=0
            KWING=1
```

WPL=0.0 WAMMUN=0.0 WBOMB=0.0 WMISS=0.0 WETANK=0.0 RETURN END

## REFERENCES

- 1. O'Donnell, B.J., <u>Application of the ACSYNT Computer Program for Aircraft Design to V/STOL Aircraft</u>, Master's Thesis, Naval Postgraduate School, Monterey, California, March 1978.
- 2. Bruflat, A.B., <u>A User's Manual for ACSYNT A Computer Program for Aircraft Synthesis</u>, Master's Thesis, Naval Postgraduate School, Monterey, California, December 1977.
- 3. Gelhousen, P., <u>ACSYNT Aircraft Synthesis Program</u>, NASA-AMES Research Center, September 1990.
- 4. NASA-AMES Research Center, NASA TMX 62282, <u>CONMIN A Fortran Program for Constrained Function Minimization User's Manual</u>, by Vanderplaats, G.N., August 1973.
- 5. NASA-AMES Research Center, NASA TM-78497, <u>Trajectory Module of Ames ACSYNT Program</u>, by Tauber, M.E., and Paterson, J.A.
- 6. Oates, G.C., <u>Aerothermodynamics of Gas Turbine and Rocket Propulsion</u>, AIAA Education Series, 1984.
- 7. Naval Air Engineering Center, Report NAEC MISC 06900, <u>Aircraft Carrier Reference Data Manual</u>.
- 8. Gerald, C.F., and Wheatley, P.O., <u>Applied Numerical Analysis</u>, 4th ed, Addison-Wesley Publishing Company, 1990.
- 9. Jane's All The World's Aircraft 1983-1984, Jane's Publishing Company, 1984.
- 10. National Aeronautics and Space Administration Technical Note TN D-7731, Preliminary Performance Estimates of an Oblique, All-Wing, Remotely Piloted Vehicle for Air-To-Air Combat, by Nelms, W.P, and Bailey, R.O., July 1974.

## INITIAL DISTRIBUTION LIST

1.	Defense Technical Information Center Cameron Station Alexandria, VA 22304-6145	2
2.	Library, Code 52 Naval Postgraduate School Monterey, CA 93940-5002	2
3.	Professor Conrad F. Newberry Code AA/NE Naval Postgraduate School Monterey, CA 93940-5002	1
4.	Tony Cricelli Code AA Naval Postgraduate School Monterey, CA 93940-5002	6
5.	LT John T. Parker c/o 3061 Mimon RD Annapolis, MD 21403	1